


Trainings ▾

With Flame Start System

⚠ WARNING ⚠

Do not use starting fluids with this engine. This engine is equipped with a flame start system; use of starting fluid can cause an explosion, fire, personal injury, severe damage to the engine and property damage.

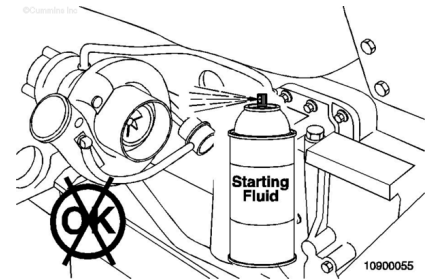

The **only** recommended cold weather starting aids for industrial applications with grid a flame start system, are engine coolant preheaters and oil pan immersion heaters. Contact a Cummins® Authorized Repair Location for more information

Cold weather starting aids are available for your engine. Contact a Cummins® Authorized Repair Location for more information.

In cold weather, the WAIT-TO-START lamp will stay on longer.


If ambient temperature is below 16° C [60° F], fully depress the throttle after engaging the stater. Full throttle on the VE pump makes sure there is sufficient start fuel delivery and helps keep the engine operating once started. The in-line pumps with RQV and RQV-K governors require full throttle position and hold the rack in the start fuel position. The throttle **must** be depressed after engaging the starter to allow the shutoff lever to move to the run position before moving the throttle.

Grid Heater

Industrial Applications

⚠ WARNING ⚠

Do not use starting fluids with this engine. This engine is equipped with an intake air heater; use of starting fluid can cause an explosion, fire, personal injury, severe damage to the engine and property damage.

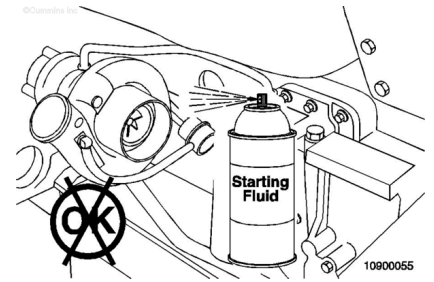

The **only** recommended cold weather starting aids for marine or industrial applications with grid a heater or air intake heater, are engine coolant preheaters and oil pan immersion heaters. Contact a Cummins® Authorized Repair Location for more information

Cold weather starting aids are available for your engine. Contact a Cummins® Authorized Repair Location for more information.

In cold weather, the WAIT-TO-START lamp will stay on longer.


If ambient temperature is below 16° C [60° F], fully depress the throttle after engaging the stater. Full throttle on the VE pump makes sure there is sufficient start fuel delivery and helps keep the engine operating once started. The in-line pumps with RQV and RQV-K governors require full throttle position and hold the rack in the start fuel position. The throttle **must** be depressed after engaging the starter to allow the shutoff lever to move to the run position before moving the throttle.

Ether Starting Aids

Industrial Applications

⚠ WARNING ⚠

Because of the potential for an explosion, do not use volatile cold starting aids in underground mine or tunnel operations. Ask the local U.S. Bureau of Mines inspector for instructions.

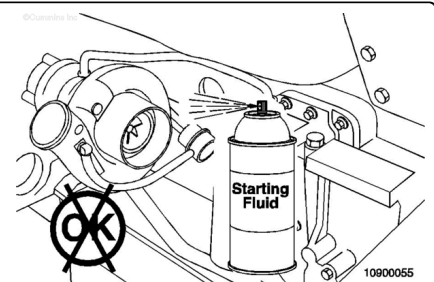

⚠ WARNING ⚠

Starting fluid is highly flammable and explosive. Keep flames, sparks, and arcing switches away from starting fluid.

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid inhalation of starting fluid vapors.

⚠ CAUTION ⚠

Do not use excessive amounts of starting fluid when starting an engine. The use of too much starting fluid will cause damage to the engine.

If ambient temperature is below 16° C [60° F], fully depress the throttle after engaging the starter. Full throttle on the VE pump makes sure there is sufficient start fuel delivery and helps keep the engine operating once started. The in-line pumps with RQV and RQV-K governors require full throttle position and hold the rack in the start fuel position. The throttle **must** be depressed after engaging the starter to allow the shutoff lever to move to the run position before moving the throttle.

Spray starting fluid into the air cleaner intake while another person cranks the engine.