


Trainings ▾


General Information

If ambient temperature is below 16° C [60° F], reference the following procedure. Refer to Procedure 101-004 in Section 1. (</qs3/pubsys2/xml/en/procedures/100/100-101-004-om-auto.html>)

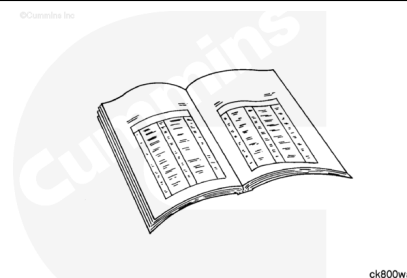

⚠ CAUTION ⚠

To reduce the possibility of damage to the starting motor, do not engage the starting motor for more than 30 seconds. Wait 2 minutes between each attempt to start (electrical starting motors only).

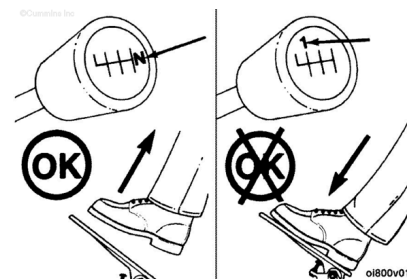


If ambient temperature is above 16°C [60° F], follow the procedure below.

Note : Engines equipped with air starting motors require a minimum of 480 kPa [70 psi].


- Disengage the driven unit, or if equipped, put the transmission in neutral.
- With the accelerator pedal or lever in the idle position, turn the key switch to the ON position, and wait for the WAIT-TO-START lamp to go out; then, turn the key to the START position.
- Full throttle is applied after engaging the starter, after 5 seconds release to idle throttle.
- If the engine does **not** start after three attempts, check the fuel supply system. Absence of blue or white exhaust smoke during cranking indicates no fuel is being delivered.

⚠ CAUTION ⚠


The engine must have adequate oil pressure within 15 seconds after starting. If the **WARNING** lamp indicating low oil pressure has not gone out or there is no oil pressure indicated on a gauge within 15 seconds, shut off the engine immediately to avoid engine damage. The low oil pressure troubleshooting procedure is located in Troubleshooting Symptoms (Section TS).

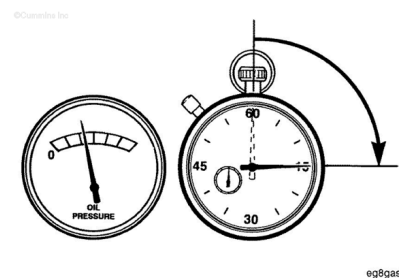

Idle the engine 3 to 5 minutes before operating with a load.

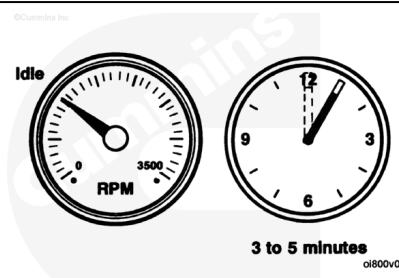


After starting a cold engine, increase the engine speed (rpm) slowly to provide adequate lubrication to the bearings and to allow the oil pressure to stabilize.

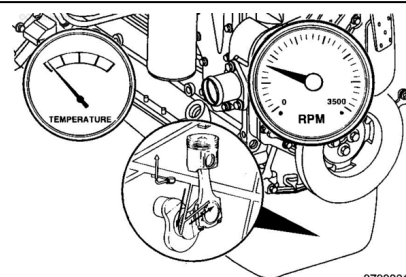

⚠ CAUTION ⚠


Do not operate the engine at low idle for long periods. Long periods at low idle, more than 10 minutes, can damage an engine. Combustion chamber temperatures will decrease and the fuel will not completely burn. This will cause carbon to build up around the injector spray holes and piston rings, which can cause the valves to stick. To reduce the possibility of damage, operate the engine at higher idle.

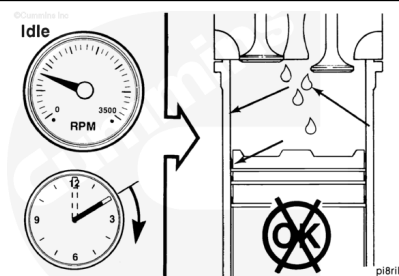

Jump Starting

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

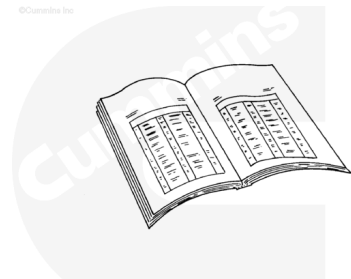

ck800wa

⚠ CAUTION ⚠


When using jumper cables to start the engine, make sure to connect the cables in parallel: Positive (+) to positive (+) and negative (-) to negative (-). When using an external electrical source to start the engine, turn the disconnect switch to the OFF position. Remove the key before attaching the jumper cables.

⚠ CAUTION ⚠

To avoid damage to engine parts, do not connect jumper starting or battery charging cable to any fuel system or electronic component.

This illustration shows a typical parallel battery connection. This arrangement doubles the cranking amperage.

Note : Always reference the relevant OEM literature for jump starting procedures. Failure to follow correct procedures can result in damage to the ECM and other electrical equipment.

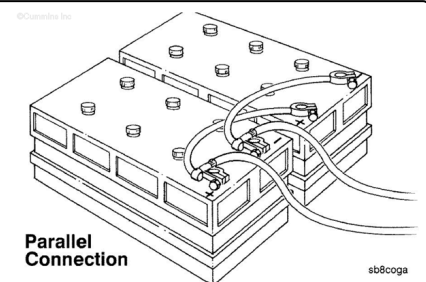

This illustration shows a typical series battery connection. This arrangement, positive (+) to negative (-), doubles the voltage.

Note : Always reference the relevant OEM literature for jump starting procedures. Failure to follow correct procedures can result in damage to the ECM and other electrical equipment.

