


Trainings ▾

General Information

⚠ CAUTION ⚠

To reduce the possibility of damage to the starting motor, do not engage the starting motor for more than 30 seconds. Wait 2 minutes between each attempt to start (electrical starting motors only).

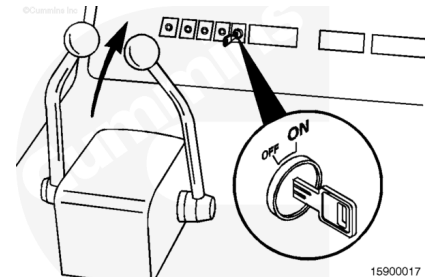


Note : There is a separate keyswitch wired to the primary panel. It will be installed in the helm at the boat manufacturer's or installer's desired location. The keyswitch must be in the ON or RUN position to crank-start the engine.


Disengage the drive unit.

Turn the key switch to the ON or RUN position. When the key is in this position, the WAIT TO START lamp will be illuminated for a maximum of 20 seconds. The engine should **not** be cranked until the WAIT TO START lamp shuts off.

Note : The controller is reset each time the ignition is turned off and the cycle will start over.

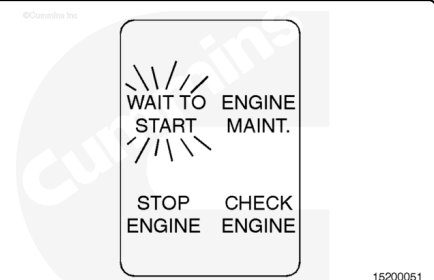


When the WAIT TO START lamp goes out, the preheat cycle is complete.

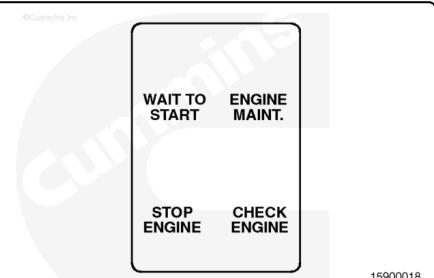

Start the engine with the throttle in the IDLE position.


This black push button (5) is used to engage the starter motor.

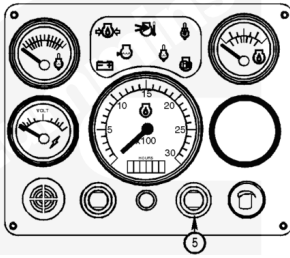

13200082


⚠ CAUTION ⚠

The engine must have adequate oil pressure within 15 seconds after starting. If the WARNING lamp indicating low oil pressure has not gone out or there is no oil pressure indicated on a gauge within 15 seconds, shut off the engine immediately to avoid engine damage. The low oil pressure troubleshooting procedure is located in Troubleshooting Symptoms (Section TS).

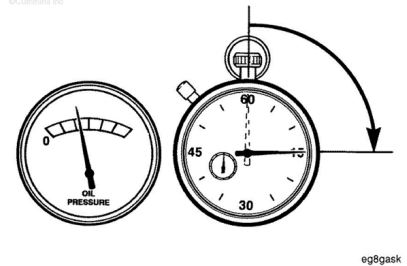


eg89gask

Idle the engine 3 to 5 minutes before operating with a load.

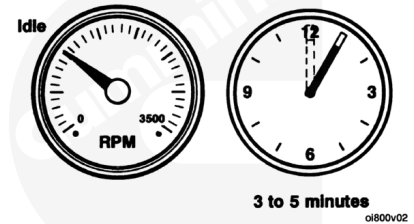

oi800v02

After starting a cold engine, increase the engine speed (rpm) slowly to provide adequate lubrication to the bearings and to allow the oil pressure to stabilize.

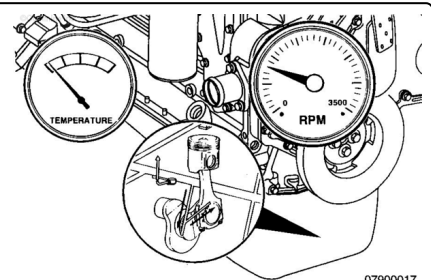


07900017

⚠ CAUTION ⚠

Do not operate engine at low idle for long periods with engine coolant temperature below the minimum specification in Maintenance Specifications in this manual. This can result in the following:

- Fuel Dilution of the lubricating oil
- Carbon build up in the cylinder

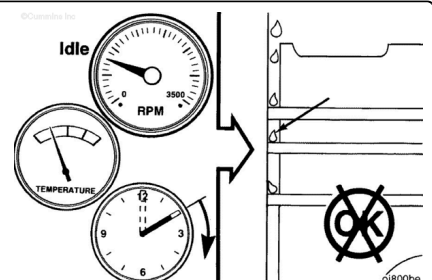

oi800be

- Cylinder head valve sticking
- Reduced performance.

Last Modified: 17-Jun-2009
