

Trainings ▾

General Information

The following steps will be accomplished at different intervals. See the maintenance schedule in the Operation and Maintenance manual for Rotation Check and Pressure Test intervals for the engine being serviced.



- Use the following procedure for QSK19 engines. Refer to Procedure 102-002 in Section 2.
(/qs3/pubsys2/xml/en/procedures/20/20-102-002-om.html)
- Use the following procedure for QSK45 and QSK60 engines. Refer to Procedure 102-002 in Section 2.
(/qs3/pubsys2/xml/en/procedures/56/56-102-002-om.html)
- Use the following procedure for K38, K50, QSK38, and QSK50 engines. Refer to Procedure 102-002 in Section 2.
(/qs3/pubsys2/xml/en/procedures/28/28-102-002-om.html)
- Use the following procedure for QSK50 CM2350 K108 engines. Refer to Procedure 102-002 in Section 2.
(/qs3/pubsys2/xml/en/procedures/255/255-102-002-om.html)
- Use the following procedure for QSK78 engines. Refer to Procedure 102-002 in Section 2.
(/qs3/pubsys2/xml/en/procedures/50/50-102-002-om-ind.html)
- Use the following procedure for QSK78 CM2220 K104 engines. Refer to Procedure 102-002 in Section 2.
(/qs3/pubsys2/xml/en/procedures/225/225-102-002-om.html)
- Use the following procedure for QSK60 CM2520 K112 engines. Refer to Procedure 102-002 in Section 2.
(/qs3/pubsys2/xml/en/procedures/343/343-102-002-om.html)

Pressure Test

Perform the following steps to measure the pressure drop across the Eliminator™ Filter.

Remove one plug from each side at the top of the filter housing.


Install the pressure gauges in the ports.

Operate the engine to normal operating temperature.

Record the readings from both gauges.

The difference between the two measurements is the pressure drop across the filter.

If the difference in pressure is more than the maximum allowable value, refer to Service Bulletin 3666253 before checking the oil pressure differential again.

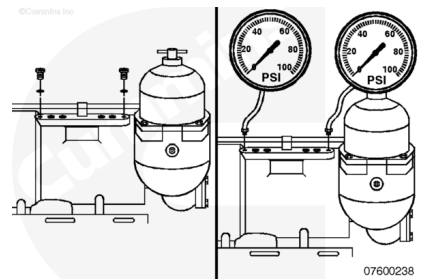

Maximum Oil Pressure Differential		
kpa		psi
60	MAX	9

Remove the pressure gauges.

Install and tighten the plugs.

Torque Value: 10 n•m [89 in-lb]

Rotation Check

To provide continued reliable operation, the filter **must** be checked at regular intervals.

The operating indicator is used to check the operation of the hydraulic motor.

Check the operating indicator daily at low idle condition. Refer to Service Bulletin 3666253. If the indicator makes one revolution between 4 and 10 minutes, the Eliminator™ hydraulic motor is operating properly. If it does **not** make the revolution in this time period, the hydraulic motor will need to be replaced. Contact a Cummins® Authorized Repair Location.

