


Trainings ▾

Disassemble

⚠ CAUTION ⚠

Failure to align the slot in turbine base with the roll pin in the rotor turbine shaft could cause damage to the turbine assembly.

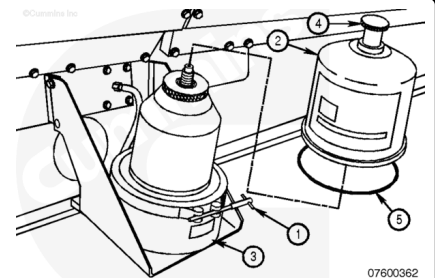

Note : Although the illustrations in this procedure show the Fleetguard™ Centrifuge mounted on engine, the procedure remains the same for on and off the engine.


Note : When the turbine assembly is installed, it is very important to make sure the roll pin in the rotor shaft is lined up with the slot in the turbine base.

Remove the band clamp (1) from the centrifuge bell housing (2) and base (3).

Loosen the bell knob (4), and remove the centrifuge bell housing (2) and o-ring (5).


Discard the o-ring.

Use a flat screwdriver or prying tool to raise the turbine assembly (6) approximately 25 mm [1 inch] above the base (3), and allow any remaining oil to drain from the turbine assembly.

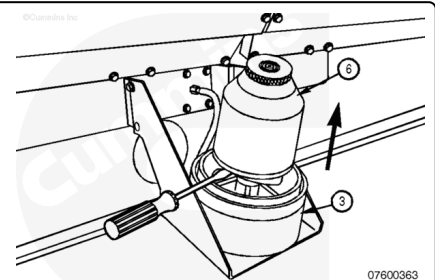

Remove the turbine assembly (6) from the base (3).


Set the turbine assembly to one side of the work area.

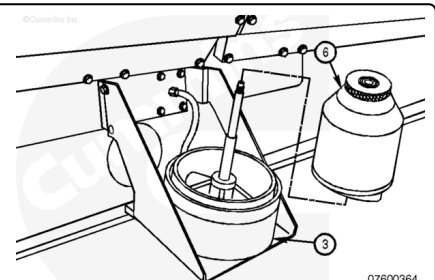

Use a 3-inch spanner wrench to loosen the can nut (7) and invert the assembly to loosen the cone washer (8) and the turbine can (11).

Carefully separate the can nut (7), cone washer (8), turbine can (11), Conestac™ filter (9), and o-ring (12) from the rotor turbine (10).


Discard the o-ring and Conestac™ filter.

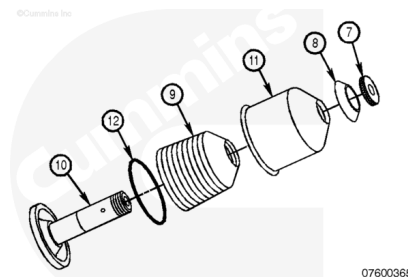

07600365

Clean and Inspect for Reuse


Use a clean cloth to clean all gasket surfaces, bell housing, can, and shafts.

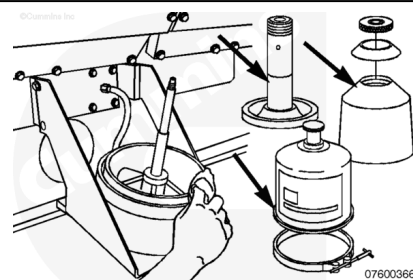

07600366

Make sure the nozzles are free from debris and dirt.

Inspect all parts for cracks or other damage. If any of the parts are damaged, they **must** be replaced.

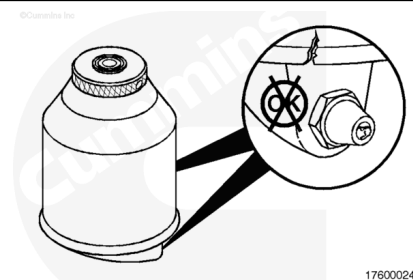


17600024

Assemble

⚠ CAUTION ⚠

Failure to align the slot in the turbine base with the roll pin in the rotor turbine shaft could cause damage to the turbine assembly.

Make sure the slot in the rotor turbine base is lined up with the roll pin in the rotor turbine shaft.

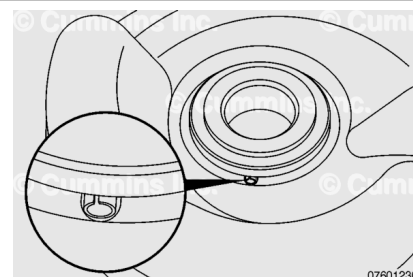


07601230

Install the o-ring (12), a new Conestac™ filter (9), turbine can (11), cone washer (8), and can nut (7) onto the rotor turbine (10).

Make sure the Conestac™ filter and o-ring are fully seated in the groove of the rotor turbine.

Tighten the can nut (7) **only** finger tight.

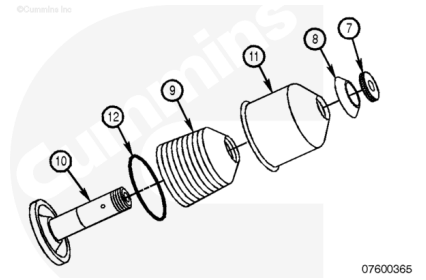


⚠ CAUTION ⚠

Use caution when assembling the turbine assembly to prevent damage to the bushings. Damage to the bushings will cause premature equipment failure.

Install the turbine assembly (6) onto the base (3).

The turbine assembly **must** spin freely on the base when installed.

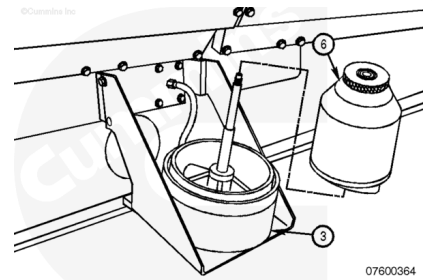

Install the o-ring (5), and the centrifuge bell housing (2) onto the base (3), hand tightening the bell knob (4).

Install the band clamp (1) around the centrifuge bell housing (2) and base (3).

Tighten the band clamp (1).

