


## Trainings ▾

### Remove

#### **⚠ WARNING ⚠**


**Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.**

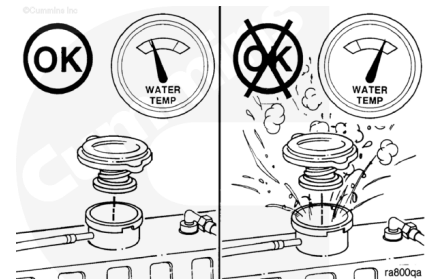

Remove the pressure cap from the radiator.

#### **⚠ WARNING ⚠**

**Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.**

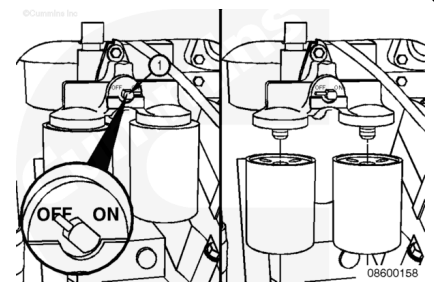

Turn valve (1) on the coolant filter head to the OFF position to prevent water loss.


Remove the coolant filters.

### Install

Clean the area around the coolant filter head. Clean the gasket surface of the coolant filter head.

The o-ring can stick on the coolant filter head. Make sure the o-ring is removed.


Discard the coolant filters.

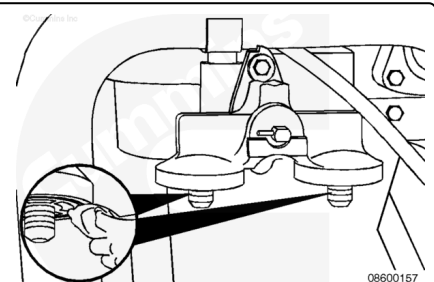

#### **⚠ CAUTION ⚠**

**When lubricating the seal on the coolant filter do not allow oil to get into the coolant filter. It will adversely affect the SCA.**

Lubricate the seal on the coolant filter with clean engine oil.

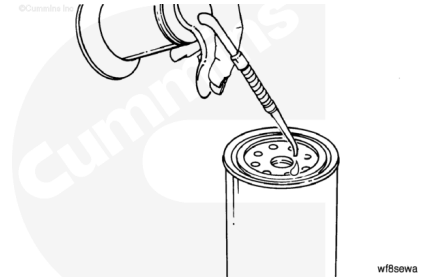

Install the coolant filter.

Turn the coolant filter **clockwise** until the seal touches the coolant filter head.

Turn the coolant filter an additional  $\frac{1}{2}$  to  $\frac{3}{4}$  of a turn after contact.

Turn the valve (1) on the coolant filter head to the ON position.

