


Trainings ▾


Maintenance Check

Remove the air intake and exhaust piping.

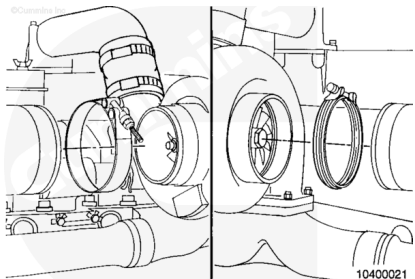


Inspect the turbocharger compressor impeller blades for damage.

Contact a Cummins® Authorized Repair Location if damage is found. Refer to the model number on the turbocharger dataplate.

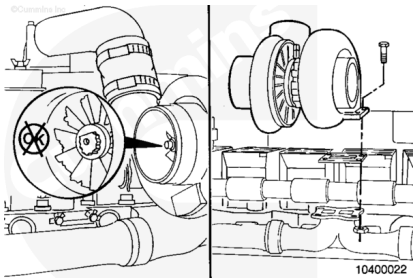

Measure

Measure the turbocharger shaft end clearance with depth gauge, Part Number ST-537, or a dial indicator.

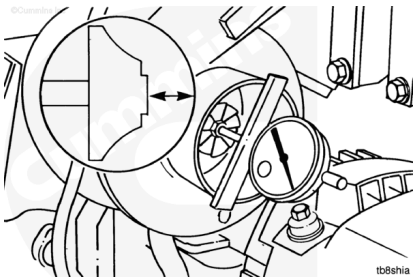


Turbocharger Shaft End Clearance			
	mm		in
HX60 Turbocharg er	0.051	MIN	0.002
	0.152	MAX	0.006
HX82 and HX83 Turbocharg ers	0.051	MIN	0.002
	0.125	MAX	0.005

If the turbocharger is **not** within specifications, contact a Cummins® Authorized Repair Location. Refer to the model number on the turbocharger dataplate.

Push the compressor impeller end of the shaft toward the housing.

Using a feeler gauge that is **not** more than 13 mm [0.5 in] wide, measure the clearance between the impeller and the housing at the minimum clearance point.

Perform the same measurement for the turbine wheel.

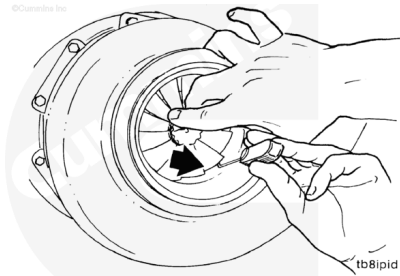

HX60 and HX82 Turbocharger Radial Bearing Clearance

	mm		in
Compress or Impeller	0.15	MIN	0.006
	0.45	MAX	0.018
Turbine Wheel	0.20	MIN	0.008
	0.55	MAX	0.022


HX83 Turbocharger Radial Bearing Clearance

	mm		in
Compress or Impeller	0.15	MIN	0.006
	0.70	MAX	0.028
Turbine Wheel	0.20	MIN	0.008
	0.77	MAX	0.031

If the turbocharger is **not** within specifications, contact a Cummins® Authorized Repair Facility. Refer to the model number on the turbocharger dataplate.

Note : Check the model of the turbocharger installed on the engine. This is for: Honeywell®, all models.

Specifications for checking radial and axial clearance are not available.

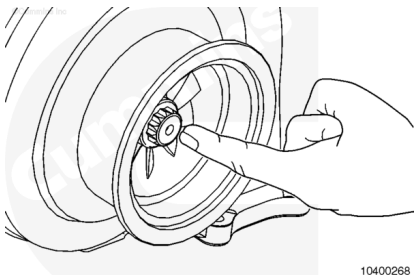

Inspect for signs of contact between the turbocharger vanes and housing.

Check the bearing system for wear:

- Hold both ends of the turbocharger shaft and rotate the shaft while applying pressure down on the compressor side and up on the turbine side. It should rotate freely and there should be no contact between the compressor wheel and the compressor housing, or the turbine wheel and turbine housing.

Replace the turbocharger if any malfunctions are identified.

Replace

Contact a Cummins® Authorized Repair Location to schedule this maintenance.

