


Trainings ▾


Maintenance Check

Remove the air governor or air governor signal line from the air compressor body.

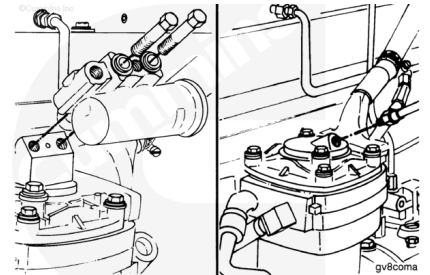


Operate the engine to activate the air compressor.

If the air compressor is **not** pumping, the unloader valve is malfunctioning and **must** be repaired or replaced.

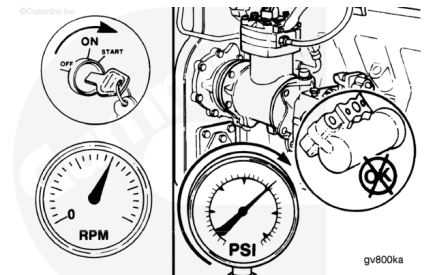

⚠ WARNING ⚠

The unloader valve body is installed with spring tension. To reduce the possibility of personal injury, hold the unloader body down while removing the capscrews.

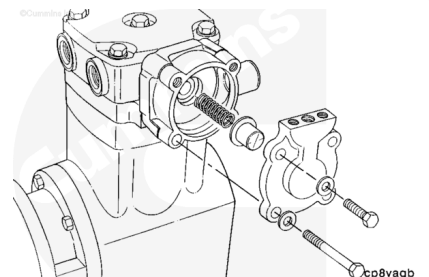


Hold the unloader body down and remove the four capscrews.

Remove the unloader valve spring.


Remove the unloader valve cap.

Remove the unloader body gasket and unloader valve cap rectangular ring seal.

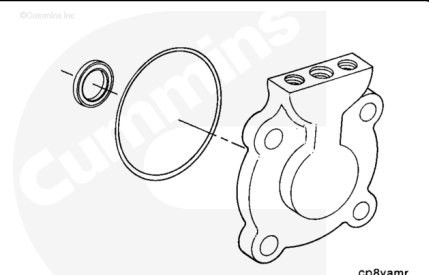

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

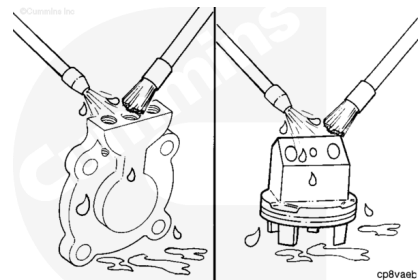


⚠ WARNING ⚠

Do not use caustic cleaners. Caustic cleaners can cause personal injury and damage component parts.

Clean the unloader valve body with solvent and a nonmetallic brush to remove carbon and varnish. Do **not** use a sharp object. The sealing surface can be damaged.


Inspect the upper part of the center unloader valve cap where the rectangular ring seal seats for scoring.

Replace the unloader valve cap if scored.

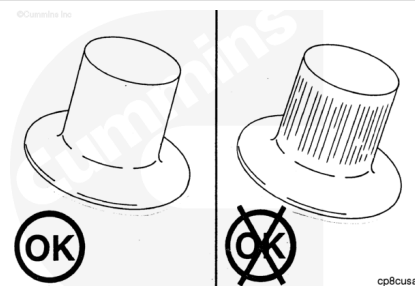

Inspect the unloader valve for deep scratches or cracks.


Replace the unloader valve if scratched or cracked.

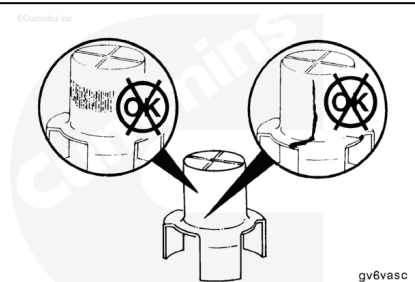

Inspect the unloader valve for carbon buildup.


If carbon or heavy varnish is present, remove, clean, and inspect the compressor head and valve assembly.

Replace the parts as necessary. Contact a Cummins® Authorized Repair Facility as needed.

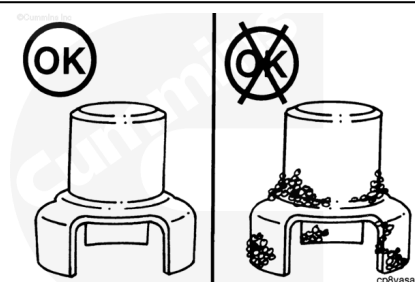


Install the new rectangular V-seal into the unloader body with the grooved side up.


Liberal­ly lubricate the unloader valve bore above and beyond the rectangular ring seal with high-temperature grease (Accrolube lubrication Teflon grease, or equivalent).

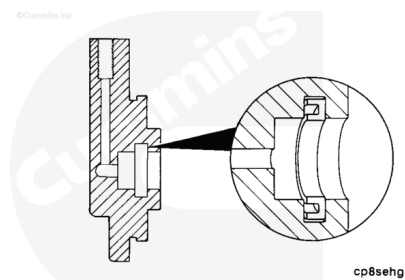

Install a new o-ring seal on the unloader valve body.

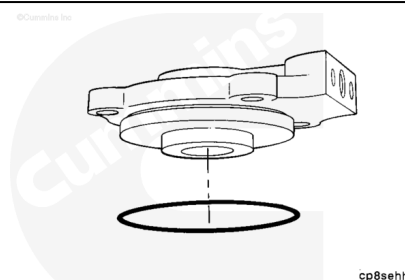


Use clean 15W-40 oil to lubricate the valve body seal.

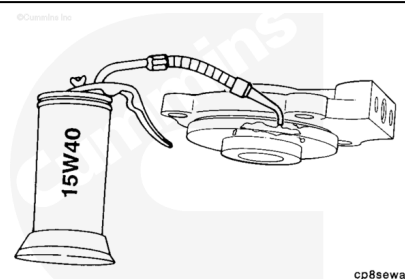

Liberal­ly lubricate the unloader valve body bore and unloader cap with high-temperature grease (Accrolube lubrication Teflon grease, or the equivalent).


Install the unloader cap.

Install the unloader spring.

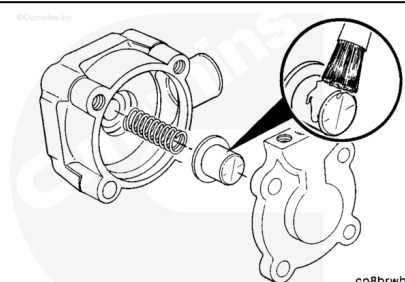

Lubricate the unloader capscrew threads and under head with clean engine oil (SAE 15W-40).

The two unloader body capscrews **must not** be used to attach any brackets.

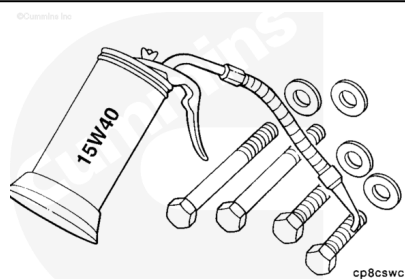

The longer capscrews are used to mount the manifold to the compressor.

Assemble the unloader components and attach the unloader assembly to the valve plate with the four capscrews and washers

Tighten the capscrews.

Torque Value: 27 n•m [20 ft-lb]

Operate the engine and check the air compressor for air leaks.

