


Trainings ▾

Adjust

Note : The lower jam nut has left-hand threads.


Loosen the alternator and adjusting link mounting capscrews.

Loosen the jam nuts on the adjusting screw.

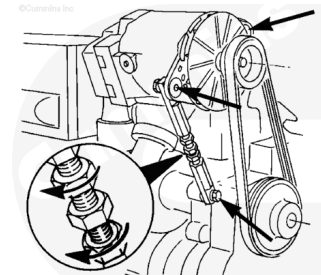

eh4lkua

Turn the adjusting screw **clockwise** to increase the belt tension.

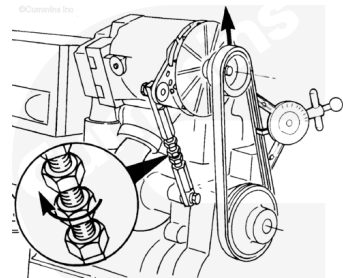

eh4lkub

Note : The lower jam nut has left-hand threads.

Tighten the jam nuts on the adjusting screw.

Tighten the adjusting link and alternator mounting capscrews.

Torque Value:


Jam Nuts

1. 80 n•m [59 ft-lb]

Torque Value:


Alternator Mounting Capscrews

1. 115 n•m [85 ft-lb]

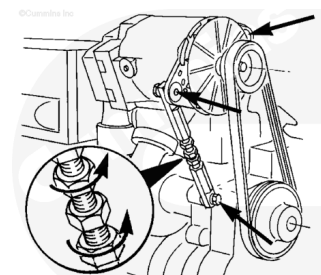

eh4lkuc

Check the belt tension again to be sure it is correct.

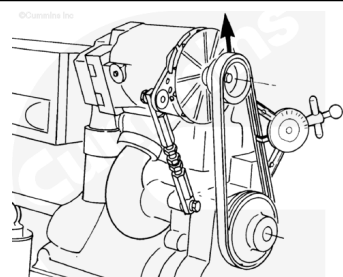

eh4ltoga

Last Modified: 17-Aug-2015