


Trainings ▾

Adjust

Note : The lower jam nut has left-hand threads.


Loosen the alternator and adjusting link mounting capscrews.

Loosen the jam nuts on the adjusting screw.

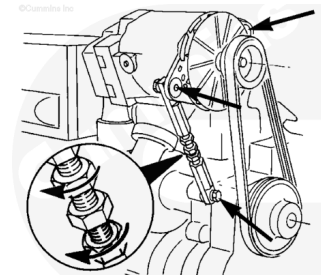

eh4lkua

Turn the adjusting screw **clockwise** to increase the belt tension.

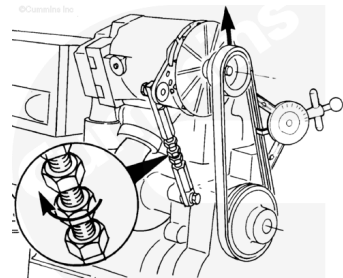

eh4lkub

Note : The lower jam nut has left-hand threads.

Tighten the jam nuts on the adjusting screw.

Tighten the adjusting link and alternator mounting capscrews.

Torque Value:


Jam Nuts

1. 80 n•m [59 ft-lb]

Torque Value:


Alternator Mounting Capscrews

1. 115 n•m [85 ft-lb]

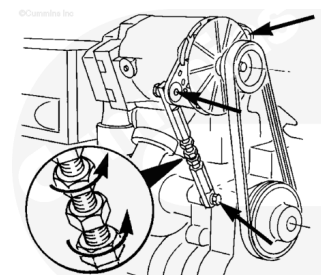

eh4lkuc

Check the belt tension again to be sure it is correct.

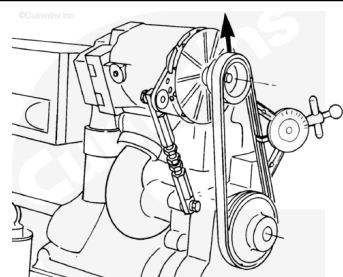

eh4ltoga

Measure

Measure the belt tension in the center span of the pulleys.

Refer to the Drive Belt Tension chart in Section V, for the correct gauge and tension value for the belt width used.

