


## Trainings ▾

### Maintenance Check

**Note :** Engine mounts that act as isolators are **not** supplied by Cummins Inc. See equipment manufacturer service information.

Check the torque on the nuts and bolts. Tighten any that are loose. Inspect the rubber for deterioration and age hardening. Replace any broken or lost bolts, capscrews, or damaged rubber.

Capscrew size and grade vary with the flywheel housing and mounting arrangement. Determine the size and grade of the mounting bolts. Use the following procedure for capscrew torque specification. Refer to Procedure 018-009 in Section V. (</qs3/pubsys2/xml/en/procedures/99/99-018-009.html>)

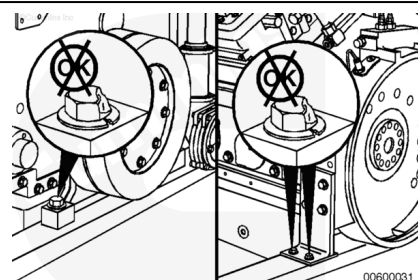


### Clean and Inspect for Reuse

#### **⚠ WARNING ⚠**

**When using solvents, acids or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.**

#### **⚠ WARNING ⚠**

**Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.**

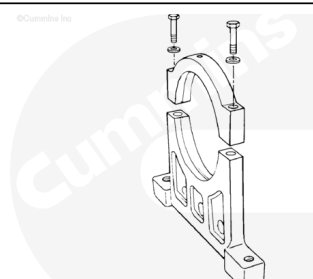


Two different front support assemblies have been supplied on K38 and K50 engines. Previous engines were supplied with a support comprised of two pieces. Present engines are supplied with a support that is one piece.

Use solvent to clean the support.

Dry with compressed air.

Check the part for cracks or damage. If the support is cracked or damaged, it **must** be replaced.

Follow the procedure below to check for wear. If wear is apparent, the mounts **must** be replaced.

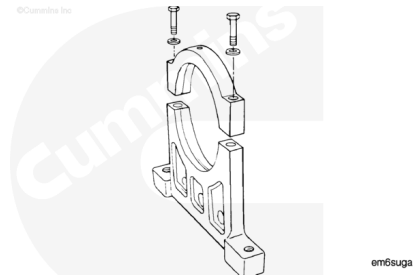


When applicable, assemble the front support.

Torque the capscrews.

**Torque Value:** 298 n•m [ 220 ft-lb ]

The bore specifications are identical for both types of supports.

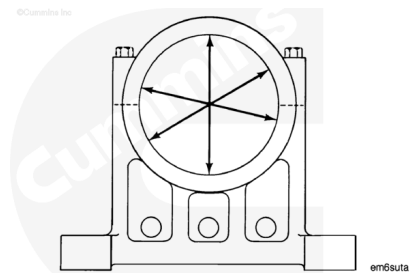


| Front Support Bore |     |       |
|--------------------|-----|-------|
| mm                 |     | in    |
| 210.03             | MIN | 8.269 |
| 210.08             | MAX | 8.271 |

**Note :** Modify the older support that has two pieces for the installation of a grease fitting during engine rebuild. Drill and tap the cap of the support for a grease fitting.

Use high performance, industrial-type grease (NLGI Grade Number 2) fortified with extreme pressure (EP) additives, such as BP Energrease™ FPG or Castrol Spheerol™ EPL 2 grease, or its equivalent.

If the above greases are **not** available locally, contact a Cummins® Distributor for advice on other Cummins® approved equivalents.

Lubricate the support until grease appears on the outside of the support.

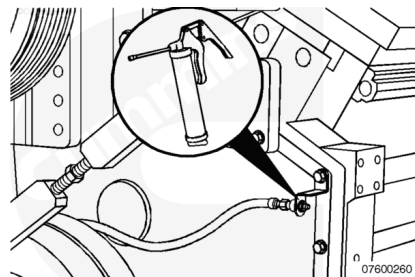

**Last Modified: 02-Apr-2015**