


Trainings ▾

General Information

⚠ CAUTION ⚠

Do not allow the engine to run out of fuel. A loss of fuel supply can cause damage to the fuel pump and injectors

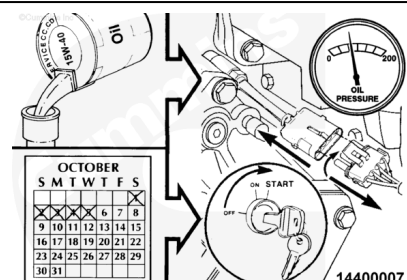

Note : This procedure will cause fault codes for the unplugged sensors to be logged. They will go inactive and have no effect on engine operation after the sensors are connected.

Note : This procedure is intended to be used on engines not equipped with a Prelub™ system to make sure all engine components receive adequate oil supply prior to the engine being started. A Prelub™ system accomplishes this automatically regardless of oil change, or extended shutdown.

The following steps **must** be completed after each oil change or after the engine has been shut off for more than 5 days to be sure the engine receives the correct oil flow through the lubricating oil system, and fuel system components have adequate fuel supply for lubrication.

- Disconnect the engine speed sensor and the camshaft position sensor. Engines with mechanical injectors have **only** the engine speed sensor.
- For engines with Modular Common Rail System (MCRS) fuel systems, cycle the keyswitch ON and allow the fuel priming pump to operate for 2 minutes. Repeat this step one time to make sure the fuel system is fully primed.
- Use the starting motor to rotate the crankshaft until the oil pressure is indicated on the gauge or the warning light goes out.

Connect the sensors.

Start the engine.

Note : For engines with MCRS fuel systems which fail to start after completing the above steps, the fuel

system may be air-locked or require additional priming. Go to the Prime section in Procedure 006-075 in Section 4 of the appropriate Operation and Maintenance Manual for more information on priming the fuel system.

- Use the following procedure for the QSK19 engine. Refer to Procedure 101-014 in Section 1.
(/qs3/pubsys2/xml/en/procedures/00/00-101-014-om-ind.html)
- Use the following procedure for the QSK45 and QSK60 engines. Refer to Procedure 101-014 in Section 1.
(/qs3/pubsys2/xml/en/procedures/56/56-101-014.html)
- Use the following procedure for the QSK78 engine. Refer to Procedure 101-014 in Section 1.
(/qs3/pubsys2/xml/en/procedures/50/50-101-014.html)
- Use the following procedure for the QSK78 K104 engine. Refer to Procedure 101-014 in Section 1.
(/qs3/pubsys2/xml/en/procedures/225/225-101-014.html)

