


## Trainings ▾

### Initial Check


Connect an electronic service tool to the vehicle datalink.

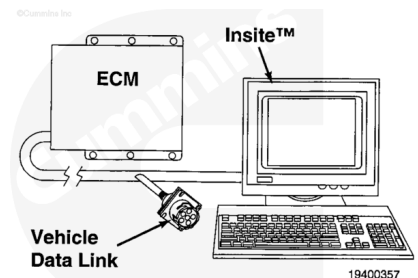

Turn the keyswitch to the ON position.

Monitor the rail pressure with the electronic service tool.


Rail pressure should be zero psi.

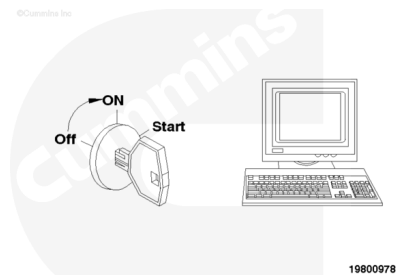

Start the engine and let it idle.


Monitor the rail pressure with the electronic service tool.

The rail pressure should be 15 psi.

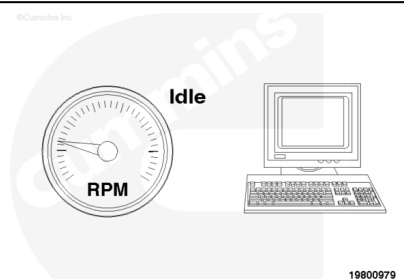

### Remove

Remove the ECM. Refer to Procedure 019-031 (</qs3/pubsys2/xml/en/procedures/01/01-019-031.html>) in the Power Generator Control System Troubleshooting and Repair Manual, QSK15, QSK23, QSK45, QSK60 and QSK78 Series Engines or Procedure 019-031

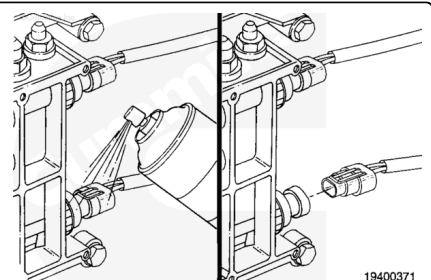


(/qs3/pubsys2/xml/en/procedures/19/19-019-031.html) in the Troubleshooting and Repair Manual Electronic Control System, QSK19, QSK23, QSK45, QSK60 and QSK78 Engines.

Clean the control valve body around the pressure sensor.

Disconnect the sensor connector from the engine harness.

Remove the pressure sensor with a 1 1/4-inch deep flank drive socket, Part Number 3823843, and a ratchet.

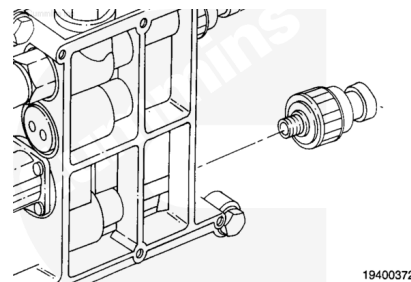


## Install

Inspect the new sensor for an o-ring.

Install the new pressure sensor and tighten.

**Torque Value:** 14 n•m [124 in-lb]

Connect the sensor connection.

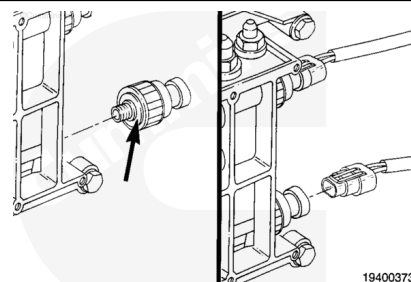

Install the ECM. Refer to Procedure 019-031

(/qs3/pubsys2/xml/en/procedures/01/01-019-031.html) in the Power Generator Control System Troubleshooting and Repair Manual, QSK15, QSK23, QSK45, QSK60 and QSK78 Series Engines or Procedure 019-031

(/qs3/pubsys2/xml/en/procedures/19/19-019-031.html) in the Troubleshooting and Repair Manual Electronic Control System, QSK19, QSK23, QSK45, QSK60 and QSK78 Engines.

