


Trainings ▾

Remove


Instrument Panel

Disconnect the connector from the back of the ED3 instrument panel.

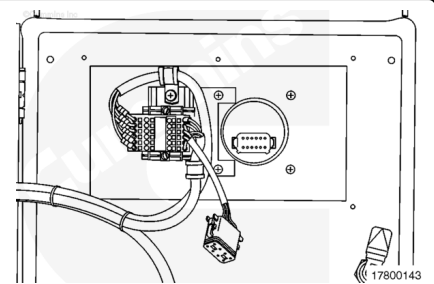


Remove the terminal strip bracket mounting screws.

Allow the terminal strip and bracket to hang free.

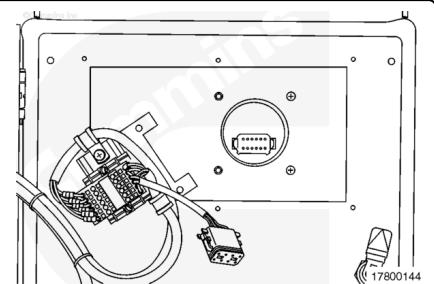


Remove the remaining ED3 instrument panel mounting screws.

Slide the ED3 instrument panel out of the front of the engine room panel door.

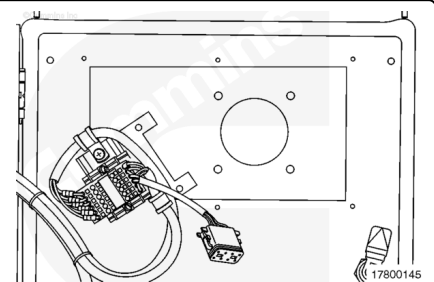


Control Indicator Panel

Disconnect all connectors from the control panel.

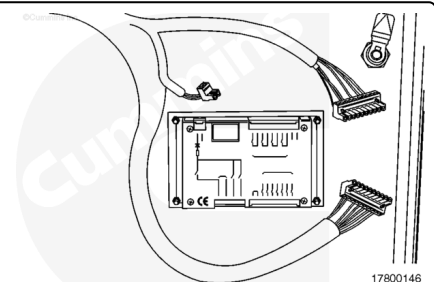

Remove the mounting nuts.

Slide the control panel through the front of the engine room panel door.

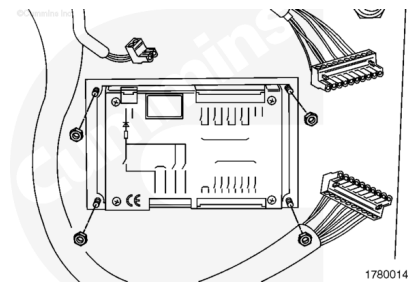


Install

Instrument Panel

Slide the ED3 instrument panel into the front of the engine room panel door.


Thread the two non-bracket screws into the ED3 instrument panel.

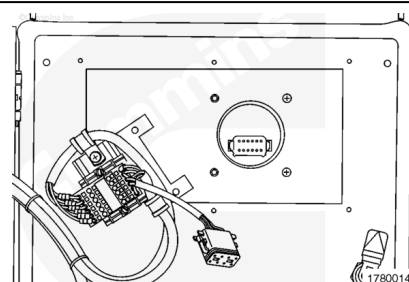


Place the terminal strip and mounting bracket onto the engine room panel door.

Thread the two mounting screws.

Tighten all four screws.

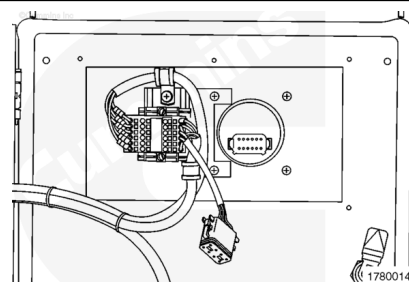


Connect the plug into the back of the ED3 instrument panel.

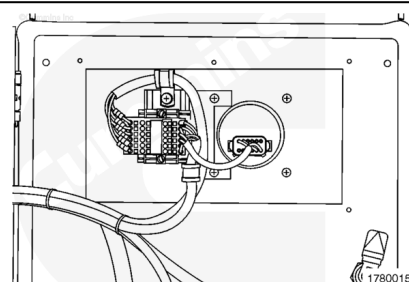

Control Indicator Panel

Slide the control panel through the front of the engine room panel door.

Install the mounting nuts.

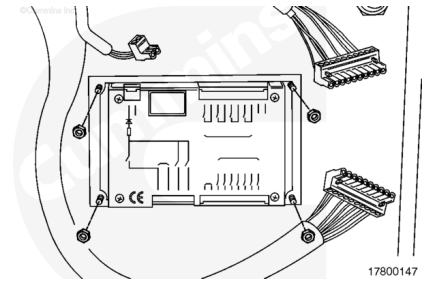

Connect all connectors to the control panel.

Operate the engine and check for proper operation.

