


Trainings ▾

General Information


©Cummins Inc

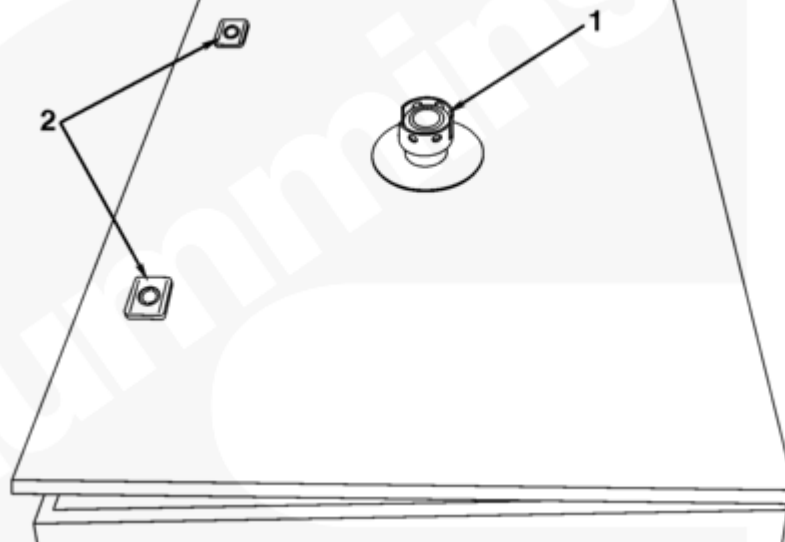

17800070

Customer Interface Box (Front View)

- 1. Engine stop button
- 2. Door locking mechanism.

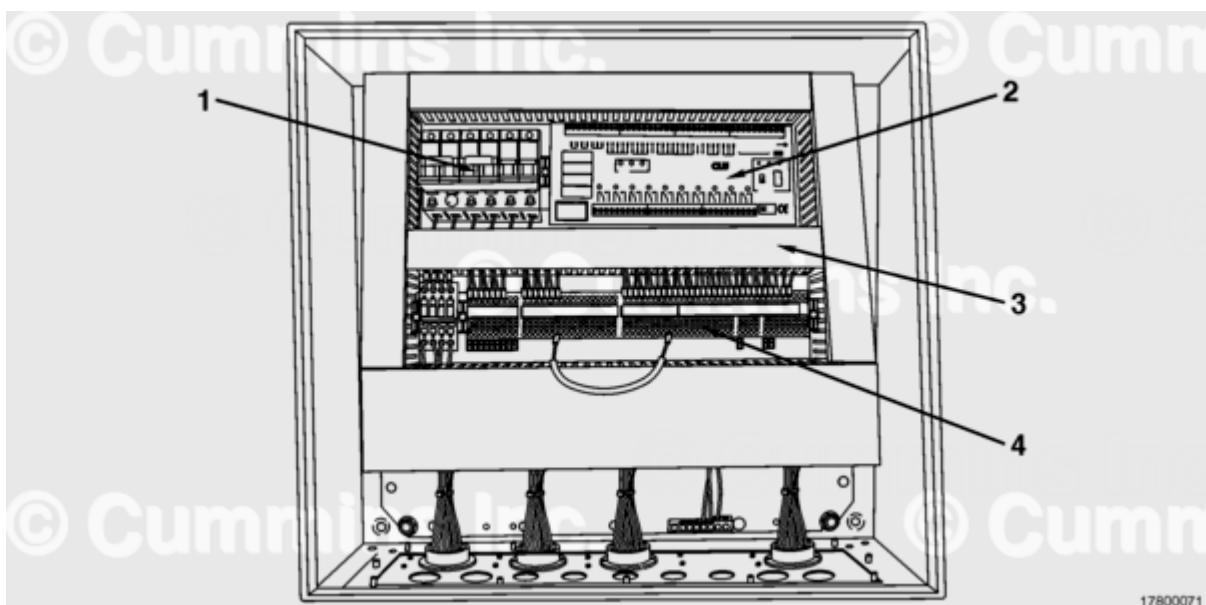


17800071

Customer Interface Box (Inside View)

1. Circuit breakers
2. Customer interface box logic unit
3. Cable trays
4. Terminal strips.


©Cummins Inc

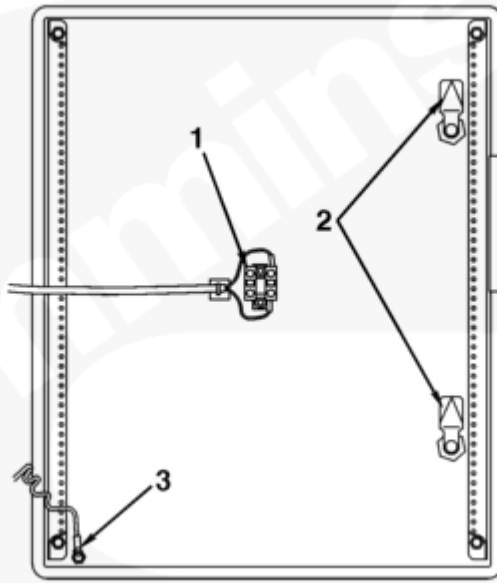

17800072

Customer Interface Box (Inside of Door View)


1. Engine stop switch
2. Door locking mechanism
3. Ground.

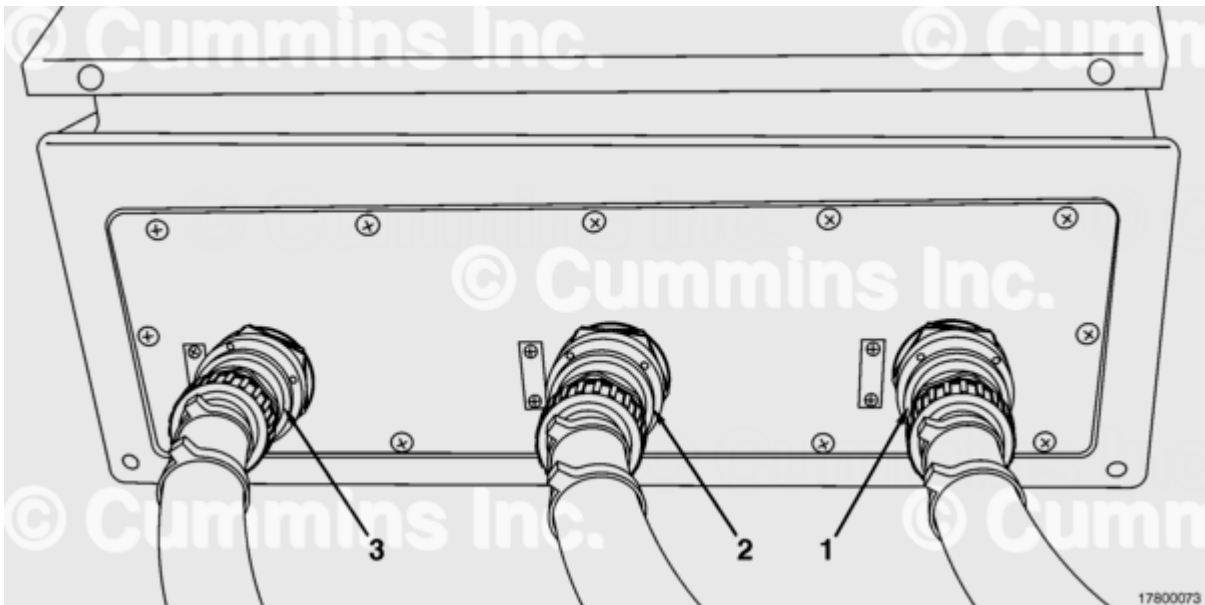

17800073


Customer Interface Box (Bottom View)

1. Engine room panel harness connector
2. Engine harness 31-pin connector
3. Engine harness 16-pin connector.

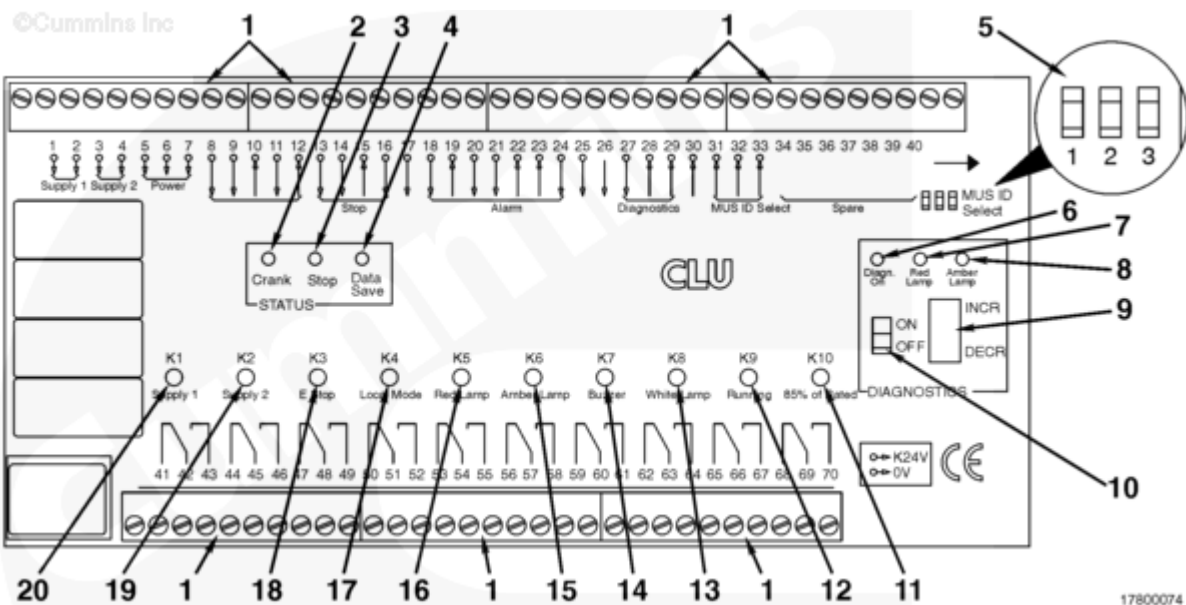


Customer Interface Box (Logic Unit)

1. Terminal strip
2. Crank status lamp
3. Stop status lamp
4. Data save status lamp
5. Dip switches
6. Diagnostic ON lamp
7. Red diagnostic lamp
8. Amber diagnostic lamp
9. Fault increment/decrement switch
10. Diagnostic ON/OFF switch
11. Running 85 percent of rated lamp
12. Running lamp
13. White (maintenance) lamp
14. Buzzer lamp
15. Amber fault lamp
16. Red fault lamp
17. Local mode lamp
18. Engine stop lamp
19. Supply 2 lamp
20. Supply 1 lamp.

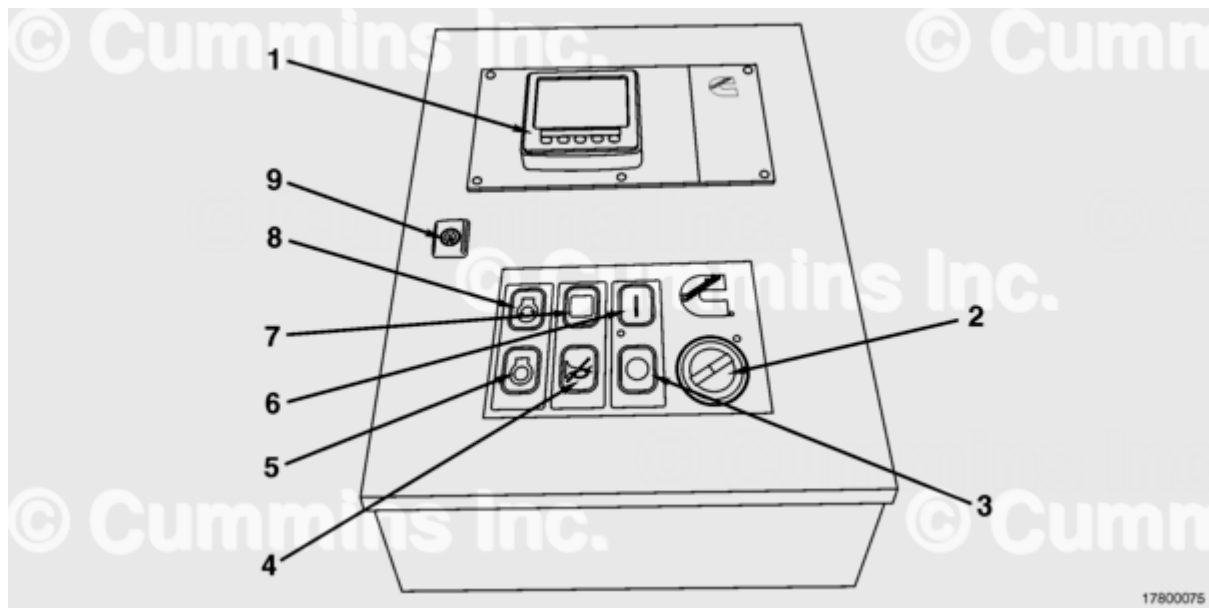

Engine Room Panel (Front View)

1. ED-3 digital display
2. Power switch
3. Local start **only** off button
4. Alarm silence button
5. Engine stop button
6. Local start only switch
7. Alarm lamp
8. Engine start button
9. Door locking mechanism.

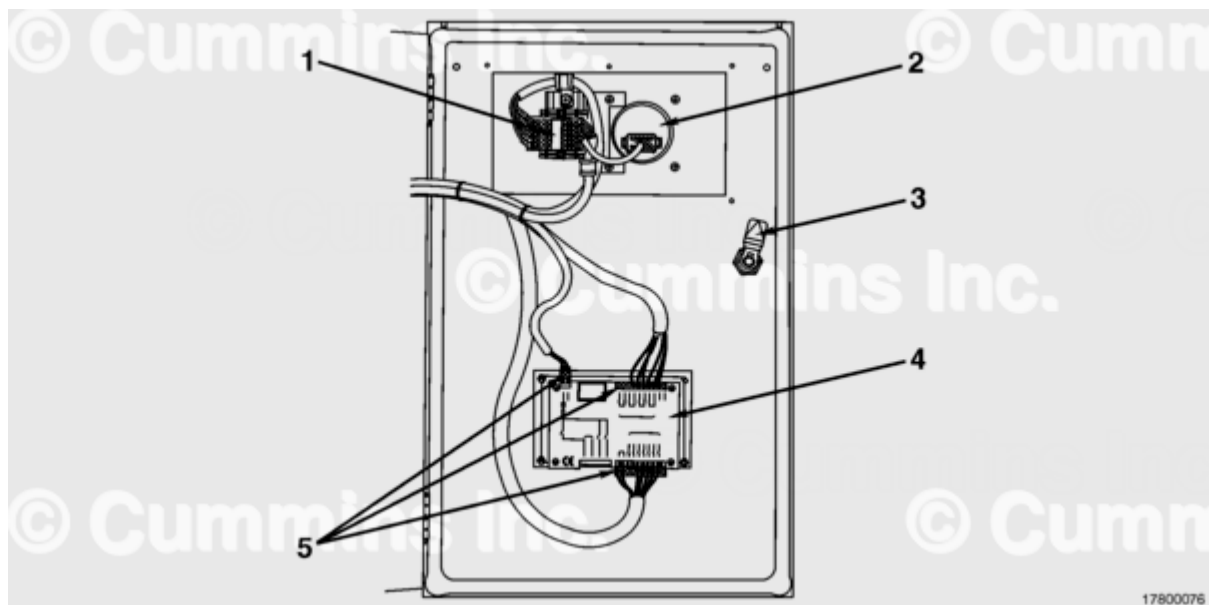


Engine Room Panel (Inside Door View)

1. Terminal strip
2. ED-3 digital display

3. Door locking mechanism
4. Control panel
5. Control panel connectors.


©Cummins Inc

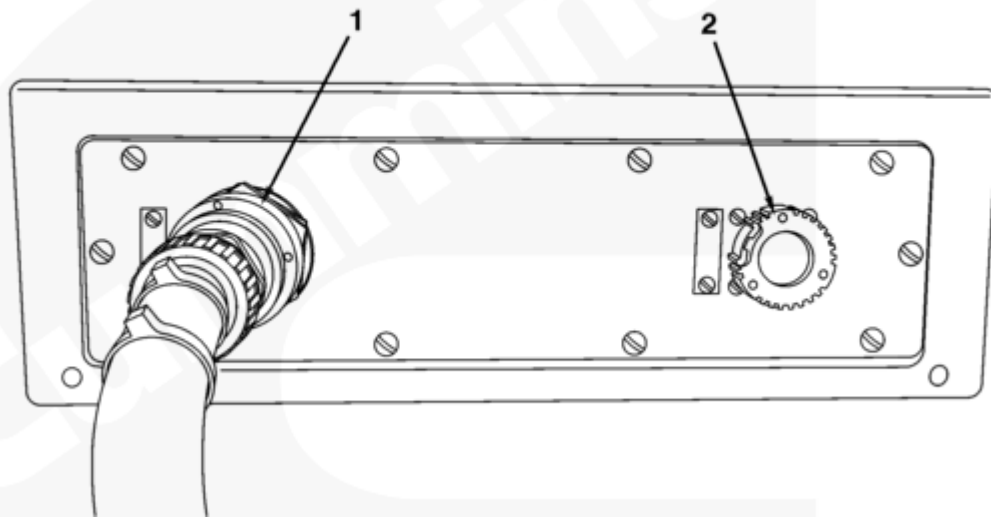

17800078

Engine Room Panel (Bottom View)

1. Customer interface box harness connector
2. SAE J1939 data link service port.

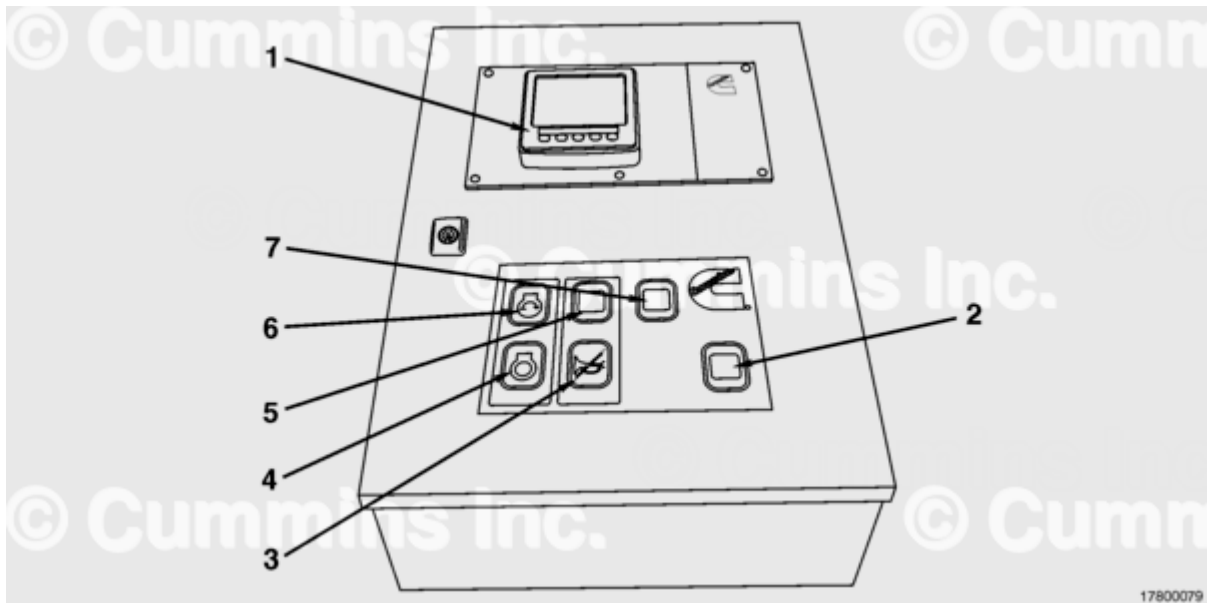


17800079

Remote Panel (Front View)

1. ED-3 digital display
2. Power lamp
3. Alarm silence button
4. Engine stop button
5. Alarm lamp
6. Engine start button


7. Local start **only** lamp

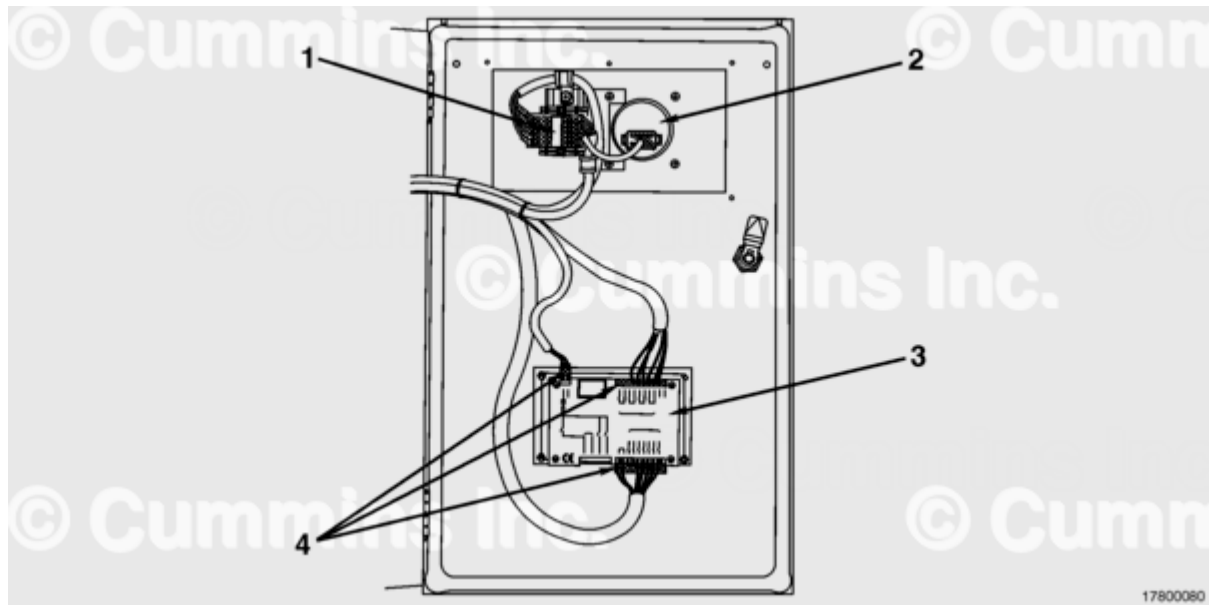

Remote Panel (Reverse View)

1. Terminal strip
2. ED-3 digital display
3. Control panel
4. Control panel connectors.

Note : Not Shown: SAE J1939 data link service port. The SAE J1939 data link service port is a pig tail and hangs freely in the customer enclosure.

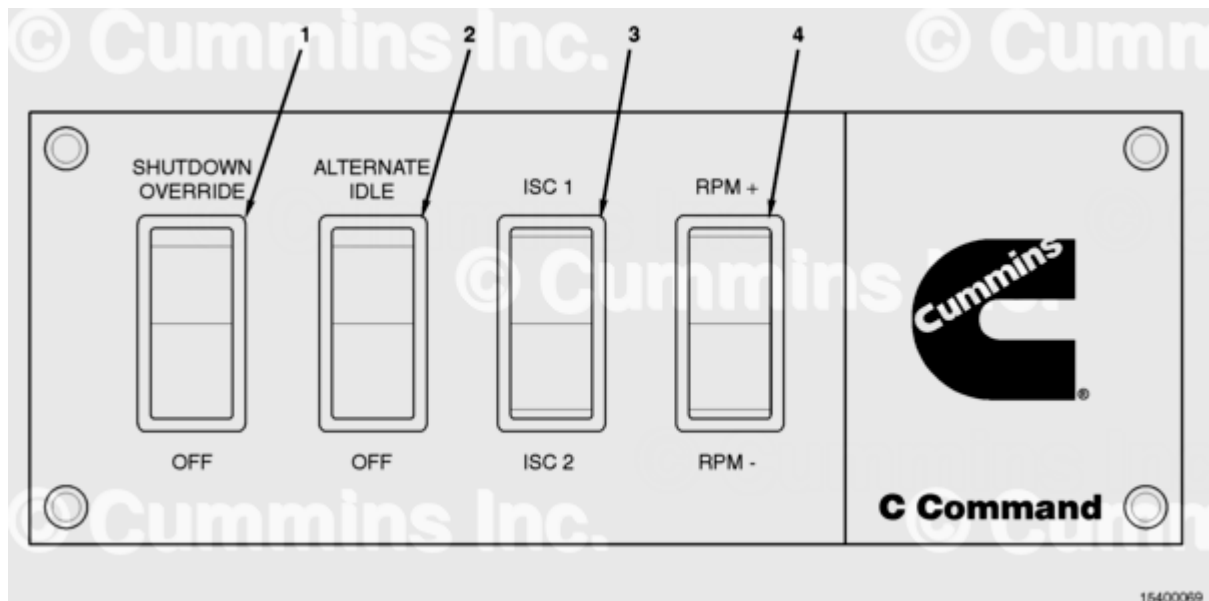

Optional Switch Panel (Front View)

1. Shutdown override switch
2. Alternate idle switch
3. Intermediate speed control switch
4. RPM increment/decrement switch.

Note : The switch panel is an optional control panel that provides easy activation of certain engine control features. It includes the above switches.

Last Modified: 09-Oct-2008
