


Trainings ▾

Component Diagram

©Cummins Inc

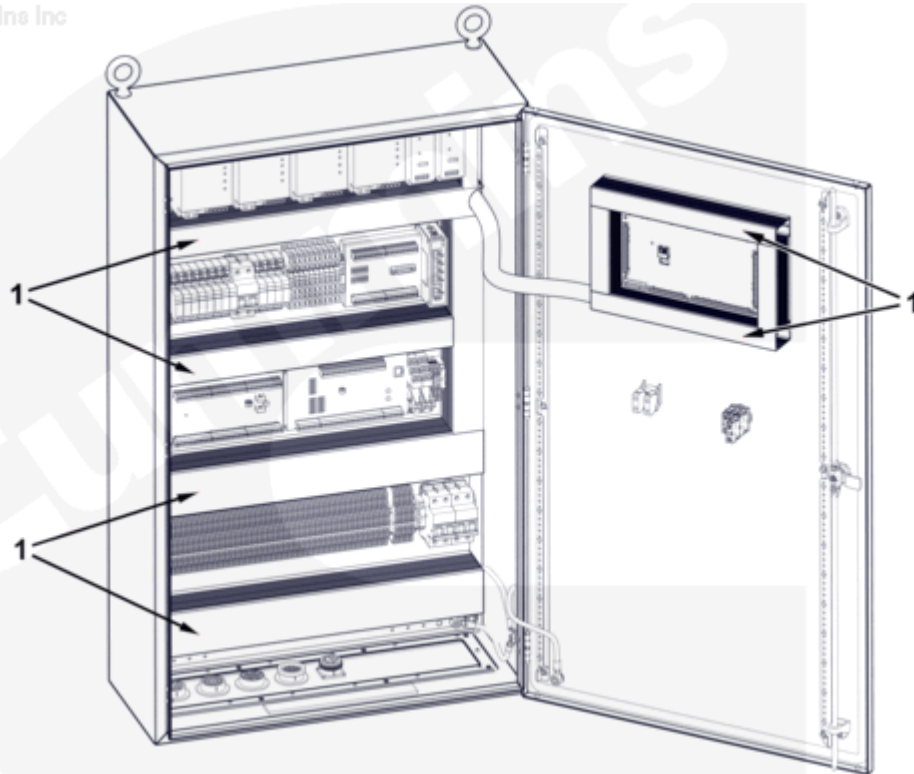

15200399

Electrical Panel Conduit Box Cover(s) Component Diagram

1. Conduit box cover

Select Service Tools

Recommended Cummins® Service Tools

- No Cummins® service tools required.

Additional Service Items

- No additional service items required.

General Information

Conduit box covers are installed on conduit boxes that contain electrical wires in electrical panels. Conduit box covers are available in standard lengths and **must** be trimmed to match the cover being replaced.

All components handled in this procedure weigh less than 23 kg [50 lb].

Preparatory Steps


⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect batteries and power supplies. See equipment manufacturer service information.
- Open CIB door. Refer to Procedure 015-023 in Section 15.
(/qs3/pubsys2/xml/en/procedures/116/116-015-023.html)


Remove

Remove conduit box cover. Gently push inward on sides of conduit box while pulling up on cover.

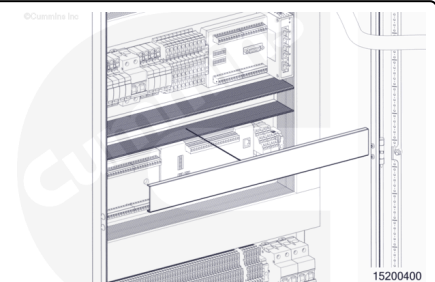

Clean and Inspect for Reuse

Clean conduit box cover. Use clean, lint-free cloth.

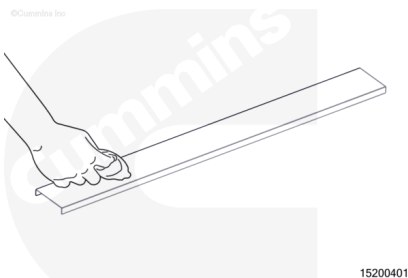


Inspect conduit box cover.

Replace cover if:


- Cracked
- Otherwise damaged.

Trim new conduit box cover to match length of cover being replaced.

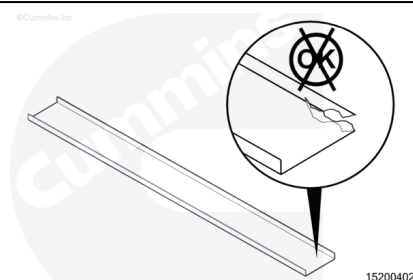

Install

Install conduit box cover. Cover **must** snap onto sides of conduit box.

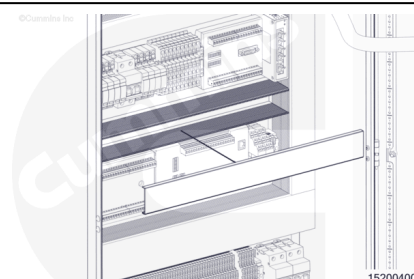

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Close CIB door. Refer to Procedure 015-023 in Section 15.
(/qs3/pubsys2/xml/en/procedures/116/116-015-023.html)
- Connect batteries and power supplies. See equipment manufacturer service information.

Last Modified: 14-Apr-2026
