

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- Electrical terminal crimper, Part Number 4918722
- Wiring Harness Repair Kit, Part Number 4918723

Additional Service Items

- No additional service items required.

General Information

The electrical wires in the customer interface box (CIB) have metal ferrules crimped onto the end of the wire. The wires are **not** sold as replacement components. If replacing wires, use a same gauge and type of wire. Install new ferrules on the end of the replacement wire.

All components handled in this procedure weigh less than 23 kg [50 lb].

Preparatory Steps


WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect batteries and power supplies. See equipment manufacturer service information.
- Open CIB door. Refer to Procedure 015-023 in Section 15.
(/qs3/pubsys2/xml/en/procedures/116/116-015-023.html)
- Remove conduit box covers, as necessary. Refer to Procedure 015-137 in Section 15.
(/qs3/pubsys2/xml/en/procedures/116/116-015-137.html)

Remove

Remove wire. See appropriate procedure in this manual.

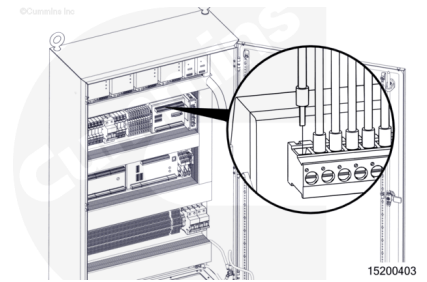


Inspect for Reuse

Inspect wire.

Repair or replace wire if:


- Abraded
- Broken
- Frayed
- Corroded
- Burnt
- Insulation damaged
- Missing Ferrule
- Otherwise damaged.

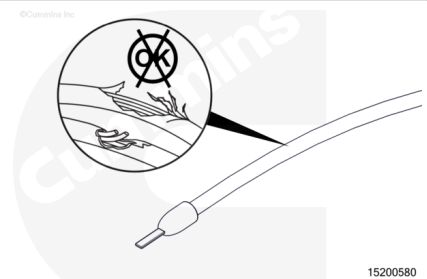

Inspect ferrule on each end of wire.

Replace ferrule if:

- Loose
- Corroded
- Burnt
- Missing
- Otherwise damaged.

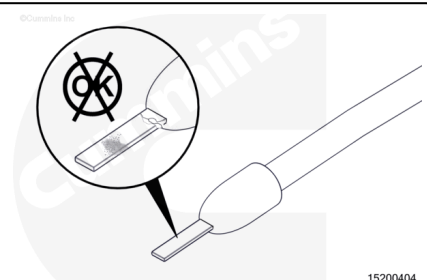


See Repair section of this procedure.

Inspect ring terminals, if equipped.

Replace ring terminal if:

- Broken


- Corroded
- Burnt
- Insulation damaged
- Otherwise damaged.

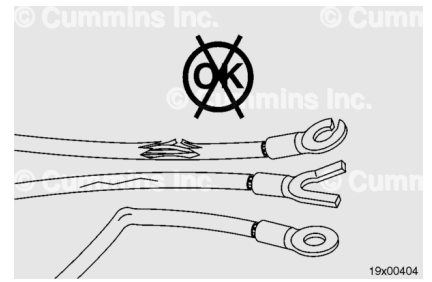

Repair

Cut wire behind damaged ferrule.


Make sure remaining wire length is sufficient to route wire in panel.

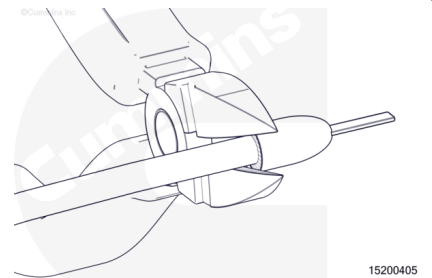

Strip appropriate length of insulation from wire. Use electrical crimper, Part Number 4918722.


Install new ferrule on each end of wire.

- Select appropriate size ferrule.
 - If installing two wires in ferrule, use twin ferrule.
- Twist exposed end of wire, if necessary.
- Insert wire into ferrule.
- Crimp ferrule on wire. Use electrical terminal crimper, Part Number 4918722, or equivalent.
- Hold ferrule. Lightly pull on wire to make sure it is secure.

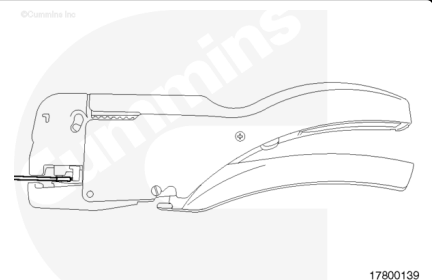

Install

Install wire. See appropriate procedure in this manual.

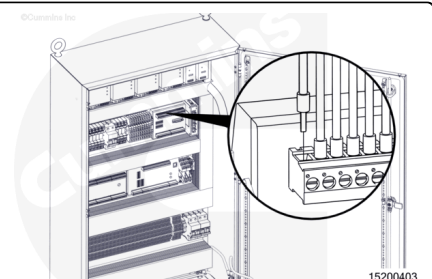

Finishing Steps

WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Install conduit box covers. Refer to Procedure 015-137 in Section 15.
(/qs3/pubsys2/xml/en/procedures/116/116-015-137.html)
- Close CIB door. Refer to Procedure 015-023 in Section 15.
(/qs3/pubsys2/xml/en/procedures/116/116-015-023.html)
- Connect batteries and power supplies. See equipment manufacturer service information.