


Trainings ▾

Remove

Remove the brass cap and turn the valve $\frac{1}{4}$ turn in a clockwise direction.


Loosen the coolant pressure sensor connector screw.

Remove the coolant pressure sensor connector.

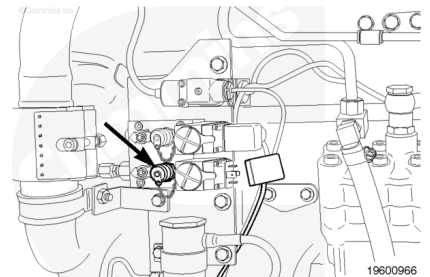

Loosen the coolant pressure sensor mounting screws with an allen wrench.


Remove the coolant pressure sensor.

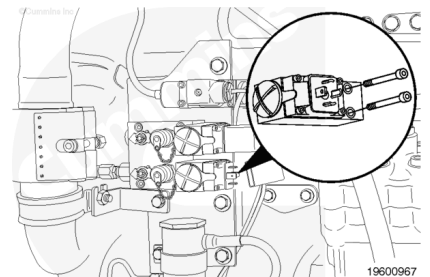

Install

Place the coolant pressure sensor on the block.

Install the allen head screws and tighten.

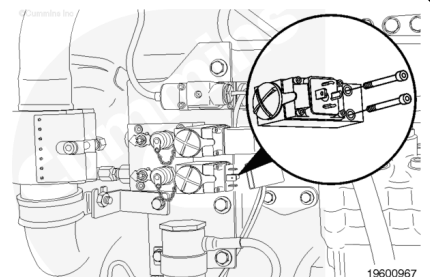


Connect the harness connector to the coolant pressure sensor connector.

Tighten the connector screw.

Turn the valve $\frac{1}{4}$ turn in the counterclockwise direction.

Install the brass cap.

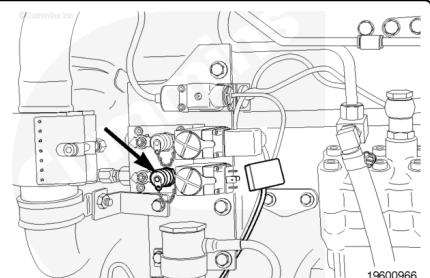

Last Modified: 16-Apr-2007