


Trainings ▾


Remove

Disconnect the C Command Elite Plus harness engine speed sensor connectors from the engine speed sensor connectors.

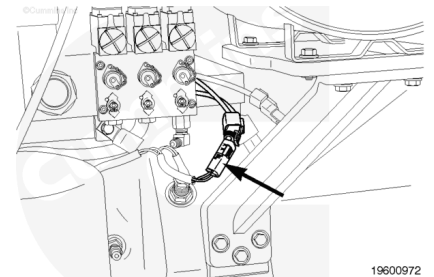

Loosen the engine speed sensor jam nut.

Remove the sensor by turning it in a **counterclockwise** direction.

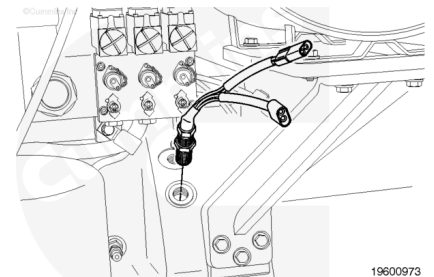


Install

Install the sensor by turning it in a **clockwise** direction until the sensor touches the flywheel.


Turn the sensor **counterclockwise** ½ turn.

Tighten the jam nut.

Torque Value: 34 to 47 n•m [25 to 35 ft•lb]

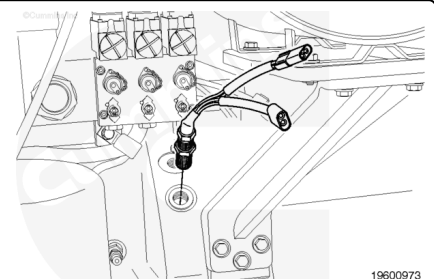

Connect the C Command Elite Plus harness engine speed sensor connectors to the engine speed sensor connectors.

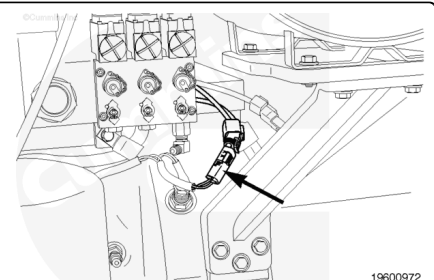

Last Modified: 16-Apr-2007