


Trainings ▾

Remove

Disconnect the cable that connects the customer interface box to the C Command Elite Plus harness connector.

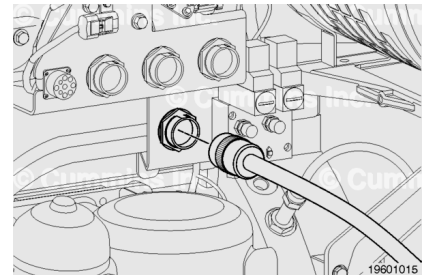


Loosen the connector screws and remove the connectors from the low speed oil pressure switch (1) and the high speed oil pressure switch (2).


Loosen the four allen head capscrews and remove the oil pressure block.

Disconnect both engine speed sensor connectors (3).


Note : An optional spare pressure sensor connector and a spare temperature sensor connector are provided for each vessel. If the vessel has used the optional connectors, disconnect the connectors.

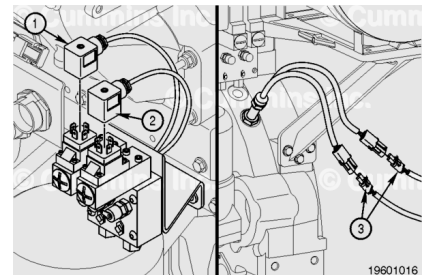

Loosen the connector screw and remove the connector from the pre-oil filter pressure sensor.

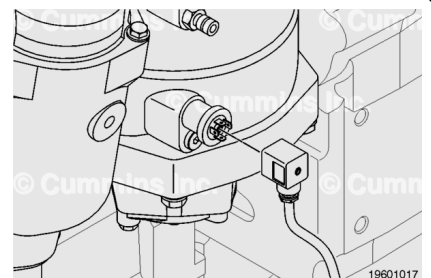


Loosen the connector screw and remove the connector from the oil temperature sensor.

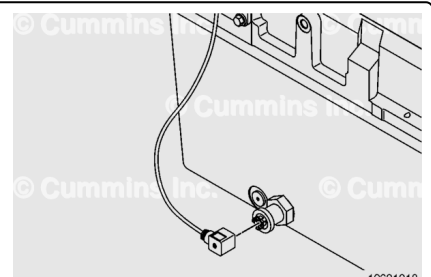

Loosen the connector screws and remove the connectors from the:


- Sea water pressure sensor (1)
- Coolant temperature switch (2)
- Coolant pressure switch (3)
- Coolant pressure sensor (4).

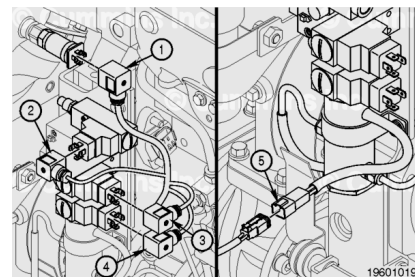

Disconnect the fuel leakage indicator switch connector (5).


Remove the p-clips from the back of the front cover.

Route the harness and connectors down the back of the front cover and allow the harness to be supported by the oil pan p-clips.

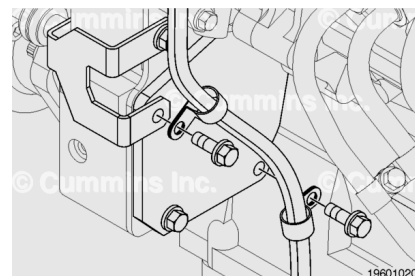


Remove the p-clips from the oil pan.

Allow the harness to be supported by the p-clips over the eliminator filter.

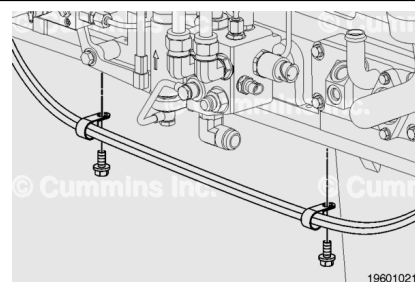


Remove the p-clips from the intake manifold.

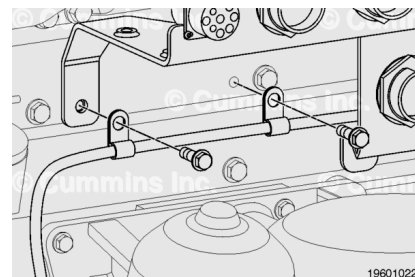

Remove the bracket capscrews.


Remove the harness connector bracket and harness assembly from the engine.

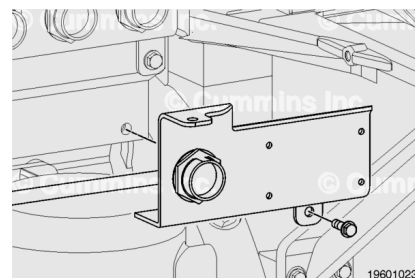

Repair


The DIN style connectors can be replaced or the connector can be turned in the connector housing for harness position.

Remove the heat shield that covers the connector nut and wire.

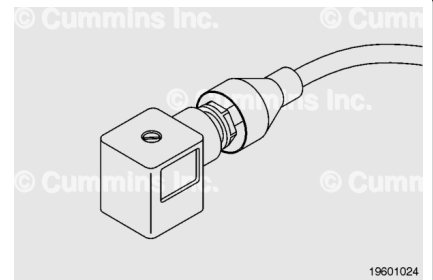


Remove the connector nut from the connector.


Slide the nut, rubber grommet, and washer down the wire.

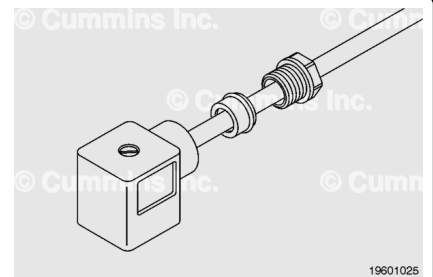

Use a small screwdriver to pry the connector out of the housing.

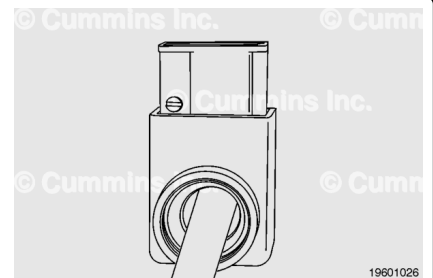


Loosen the connector terminal screws and remove the wire.

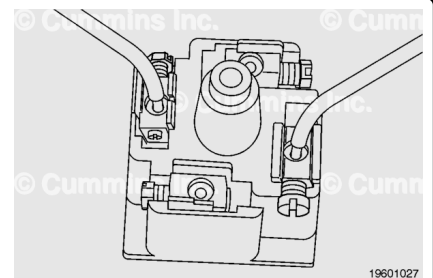

Thread the wires through the heat shrink connector nut, rubber grommet, washer, and connector housing.

Place the wires into the connector terminals and tighten the screws.

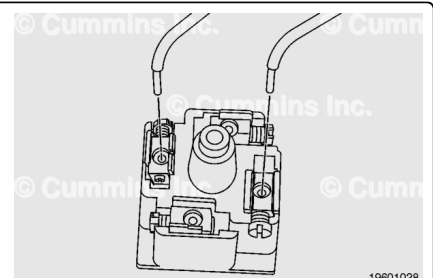


Slide the connector into the housing.

Press the connector until it snaps into the housing.




Slide the rubber grommet and washer into the connector.

Thread the nut into the connector housing and tighten.

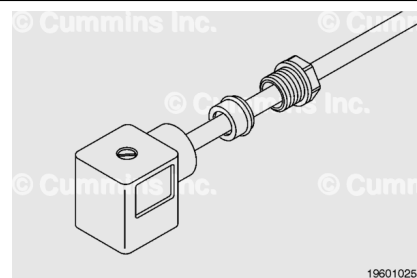

Position the heat shrink over the wire and connector nut.


Use a heat gun to heat the heat shrink into place.

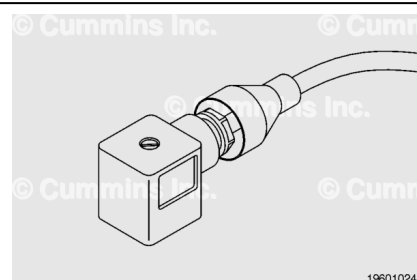

Install


Place the harness connector bracket onto the block.

Install the capscrews.

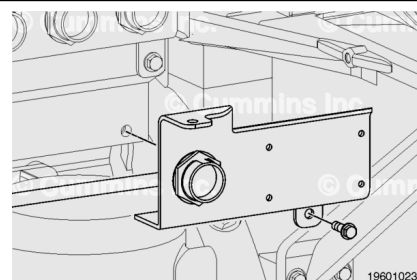


Route the harness along the intake manifold.

Install the p-clips along the intake manifold.

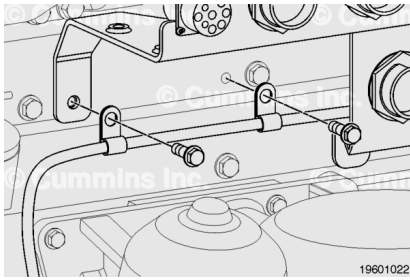


Route the harness down the engine block, along the side of the eliminator filter, to the oil pan.

Route the harness down the oil pan and install the p-clips.

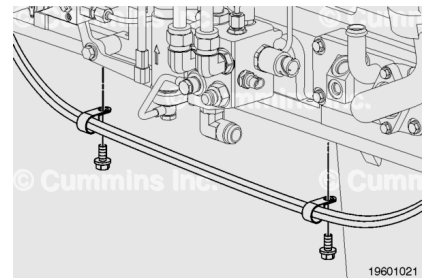


Route the harness up the back of the front cover and install the p-clips.

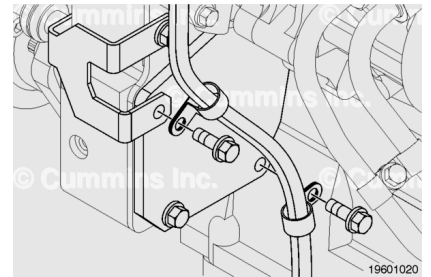


Install the connectors and tighten the connector screws for the:

- Sea water pressure sensor (1)
- Coolant temperature switch (2)
- Coolant pressure switch (3)
- Coolant pressure sensor (4).

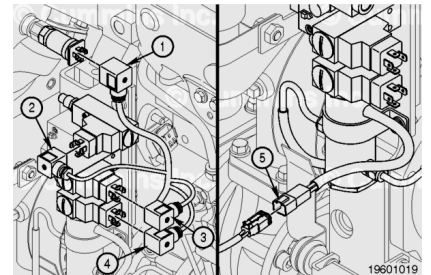


Connect the fuel leakage indicator switch connector (5).

Install the connector onto the oil temperature sensor and tighten the connector screw.

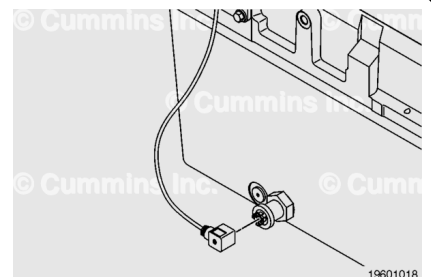

Install the connector onto the pre-oil filter pressure sensor and tighten the connector screw.

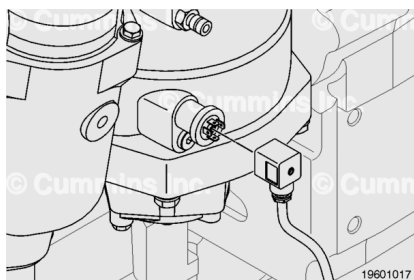


Place the oil pressure switch block and switch assembly onto the engine block and install the four allen head capscrews.

Install the connectors and tighten the connector screws for the:

- Low speed oil pressure switch (1)
- High speed oil pressure switch (2).

Connect both of the engine speed sensor connectors (3).

Note : An optional spare pressure sensor connector and a spare temperature sensor connector are provided for each vessel. If the vessel has used the optional connectors, connect the connectors.

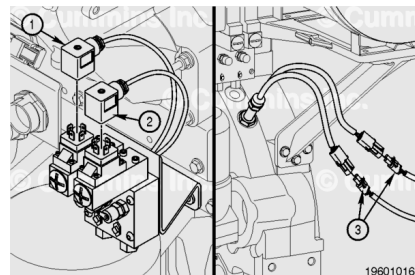

Connect the cable that connects the customer interface box to the C Command Elite Plus harness connector.

