


Trainings ▾

Remove

⚠ CAUTION ⚠

Do not remove the engine oil temperature housing. If the oil temperature housing is removed the engine oil will drain.

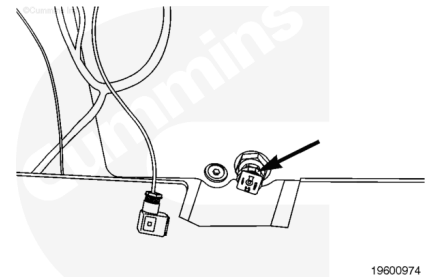


The engine oil temperature sensor is located in a dry well housing which is threaded into the oil pan.

Loosen the C Command Elite Plus harness engine oil temperature sensor connector screw.


Remove the C Command Elite Plus harness engine oil temperature sensor connector.

Remove the connector nut and slide the connector and temperature sensor assembly out of the dry well housing.

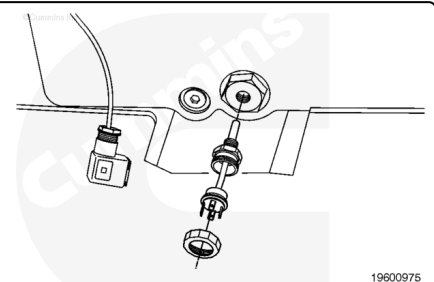

Install


Slide the temperature sensor and connector assembly into the dry well housing.

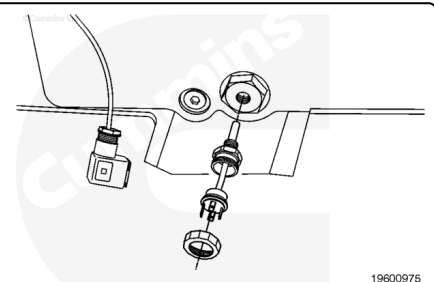

Install the connector nut and tighten.

Install the C Command Elite Plus Harness connector cap.

Tighten the C Command Elite Plus harness connector screw.

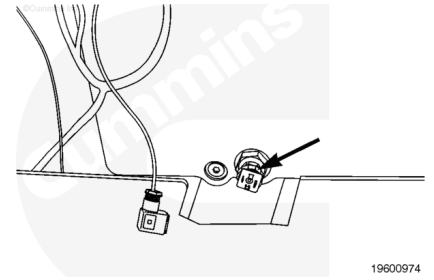

Last Modified: 16-Apr-2007
