


Trainings ▾

Remove High Speed

Remove the brass cap and turn the valve 1/4-turn in the **clockwise** direction.


Loosen the high speed oil pressure switch connector screw.

Remove the high speed oil pressure switch connector.

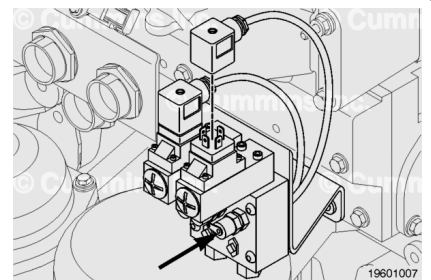

Loosen the high speed oil pressure switch mounting screws with an allen wrench.

Remove the high speed oil pressure switch.

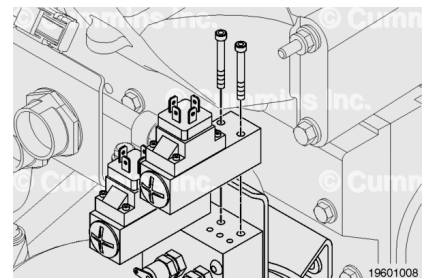


Low Speed

Remove the brass cap and turn the valve 1/4-turn in the **clockwise** direction.


Loosen the low speed oil pressure switch connector screw.

Remove the low speed oil pressure switch connector.

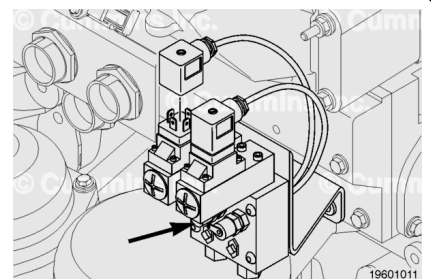

Loosen the low speed oil pressure switch mounting screws with an allen wrench.

Remove the low speed oil pressure switch.

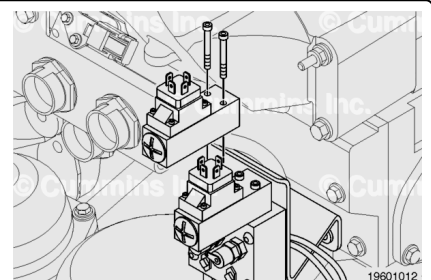


Install

High Speed

Place the high speed oil pressure switch onto the block.

Install the allen head mounting screws and tighten.

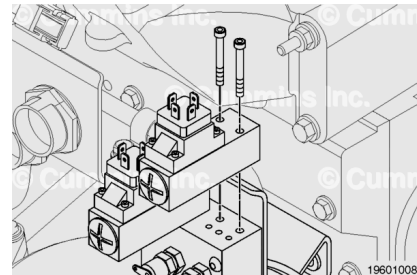


Connect the harness connector to the high speed oil pressure switch connector.

Tighten the connector screw.

Turn the valve 1/4-turn in the **counterclockwise** direction.


Install the brass cap.

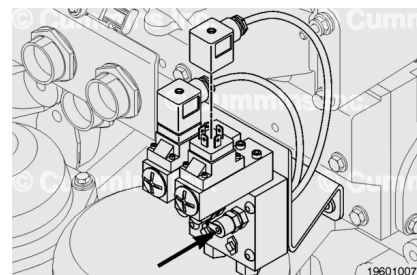

Low Speed

Place the low speed oil pressure switch onto the block.

Install the allen head mounting screws and tighten.

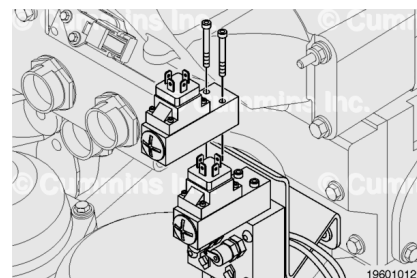

Connect the harness connector to the low speed oil pressure switch connector.

Tighten the connector screw.

Turn the valve 1/4-turn in the **counterclockwise** direction.

Install the brass cap.

