


Trainings ▾

Remove

Disconnect the fuel leakage indicator switch connector from the C Command Elite Plus harness connector.


Disconnect the fuel leakage indicator switch fuel supply tube.

Disconnect the fuel leakage indicator switch overflow hose.

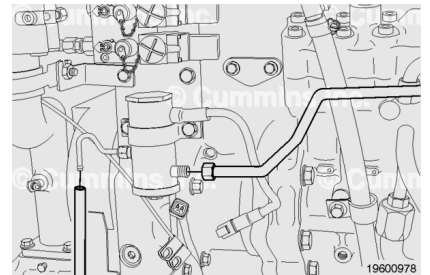

Remove the fuel leakage indicator switch mounting capscrew from each side of the bracket.


Remove the fuel leakage indicator switch.

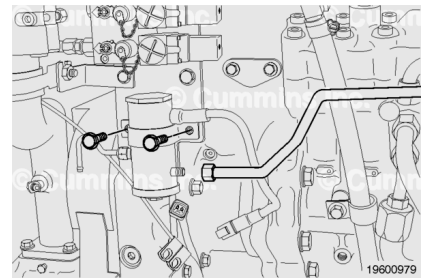

Install

Place the fuel leakage indicator switch on the C Command Elite Plus manifold plate.


Install and tighten the fuel indicator switch capscrews.

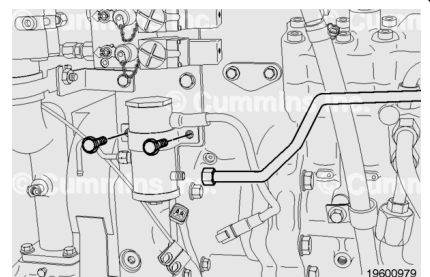

Connect the C Command Elite Plus harness connector to the fuel leakage indicator connector.

Connect the fuel leakage indicator switch fuel supply tube.

Connect the fuel leakage indicator switch overflow hose.

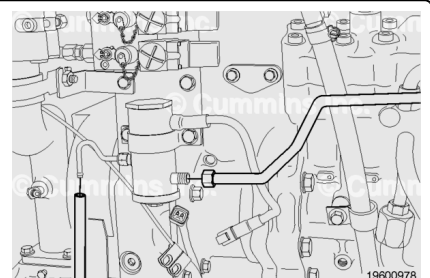

Last Modified: 16-Apr-2007