


Trainings ▾


Remove

Loosen the engine coolant temperature switch connector screw.

Remove the connector from the engine coolant temperature switch.

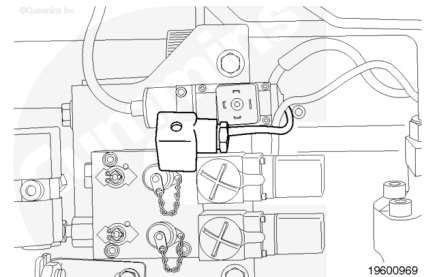


Remove the engine coolant temperature switch mounting allen head capscrews.

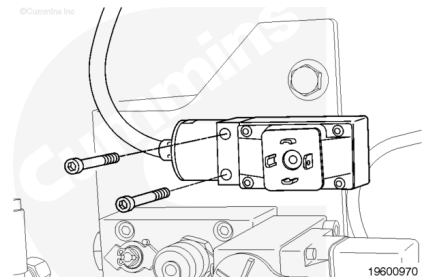

The engine coolant temperature switch sensor bulb is installed into a brass housing located in the coolant manifold. The coolant does **not** need to be drained to remove the sensor bulb.

Loosen the engine coolant temperature switch sensor bulb and nut.


Remove the engine coolant temperature sensor nut and bulb from the brass housing in the coolant manifold.

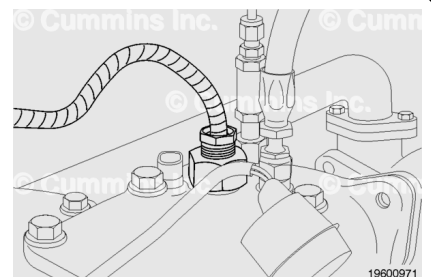

Install


Place the engine coolant temperature switch sensor bulb and nut into the brass housing in the coolant manifold.

Tighten the engine coolant temperature switch sensor nut.

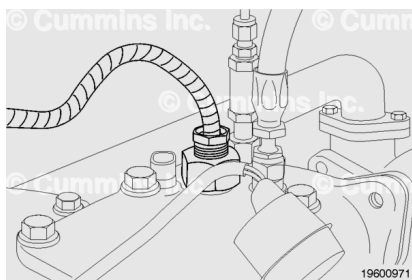

Place the engine coolant temperature switch onto the C Command Elite Plus manifold mounting plate.

Install and tighten the engine coolant temperature switch mounting allen head capscrews.

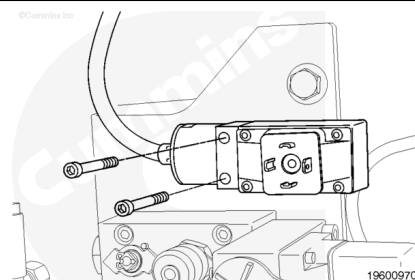

Install the harness connector onto the engine coolant temperature switch.

Tighten the engine coolant temperature switch connector screw.

