


Trainings ▾

Remove

Remove the brass cap and turn the valve 1/4-turn in the **clockwise** direction.


Loosen the coolant pressure switch connector screw.

Remove the coolant pressure switch connector.

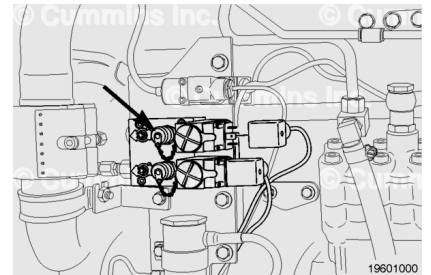

Loosen the coolant pressure switch mounting screws with an allen wrench.


Remove the coolant pressure switch.

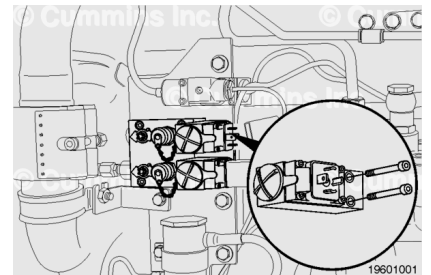

Install

Place the coolant pressure switch on the block.


Install the allen head capscrews and tighten.

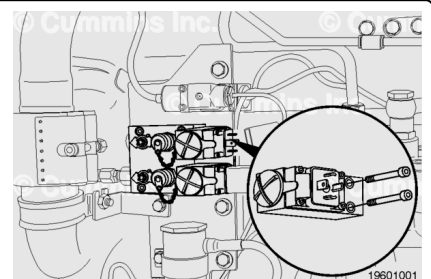

Connect the harness connector to the coolant pressure connector.

Tighten the connector screw.

Turn the valve 1/4-turn in the **counterclockwise** direction and install the brass cap.

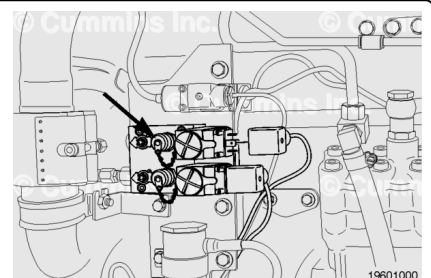

Last Modified: 16-Apr-2007