


Trainings ▾

General Information


©Cummins Inc

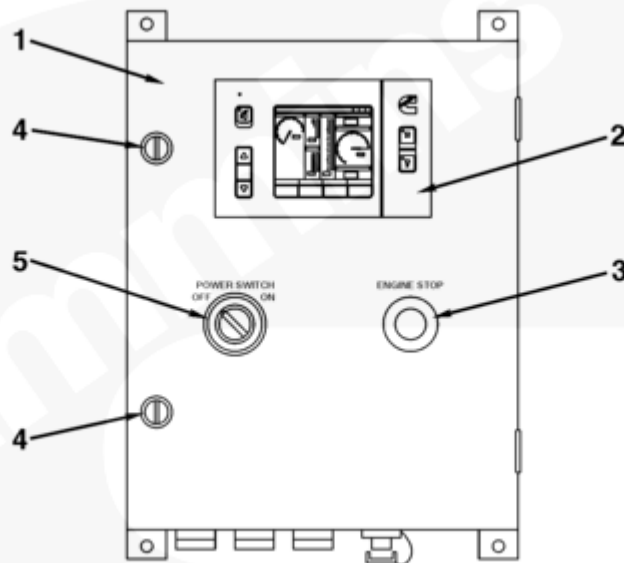

17800172

Customer Interface Box


1. Customer interface box
2. Diesel Control Unit 410
3. Engine stop switch
4. Locking mechanism
5. Power switch.

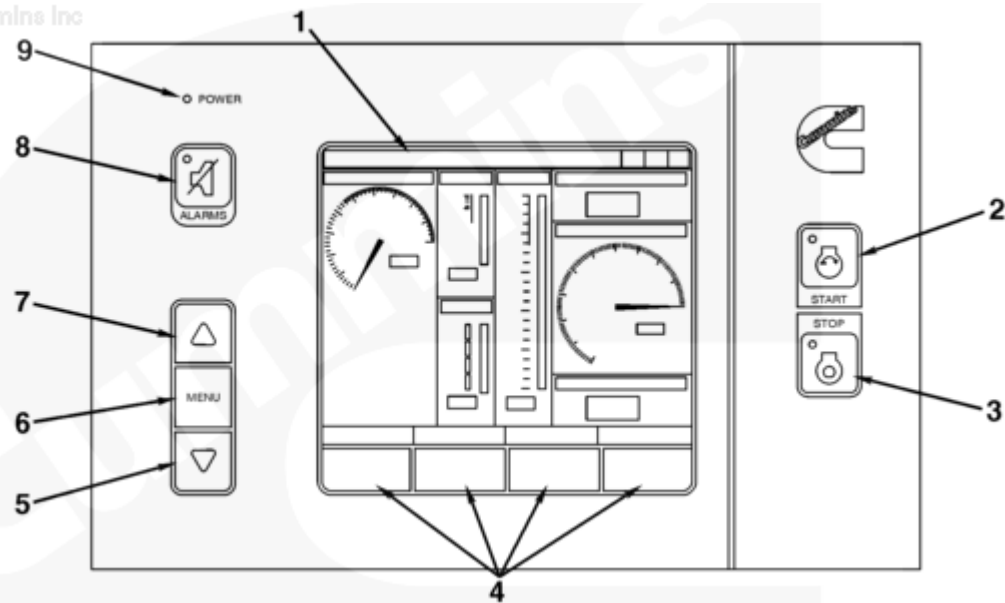

17800173

Front View - Diesel Control Unit 410

1. Display unit
2. Start button
3. Stop button
4. Soft buttons
5. Down arrow button
6. Menu button
7. Up arrow button
8. Alarm button
9. Power light emitting diode.

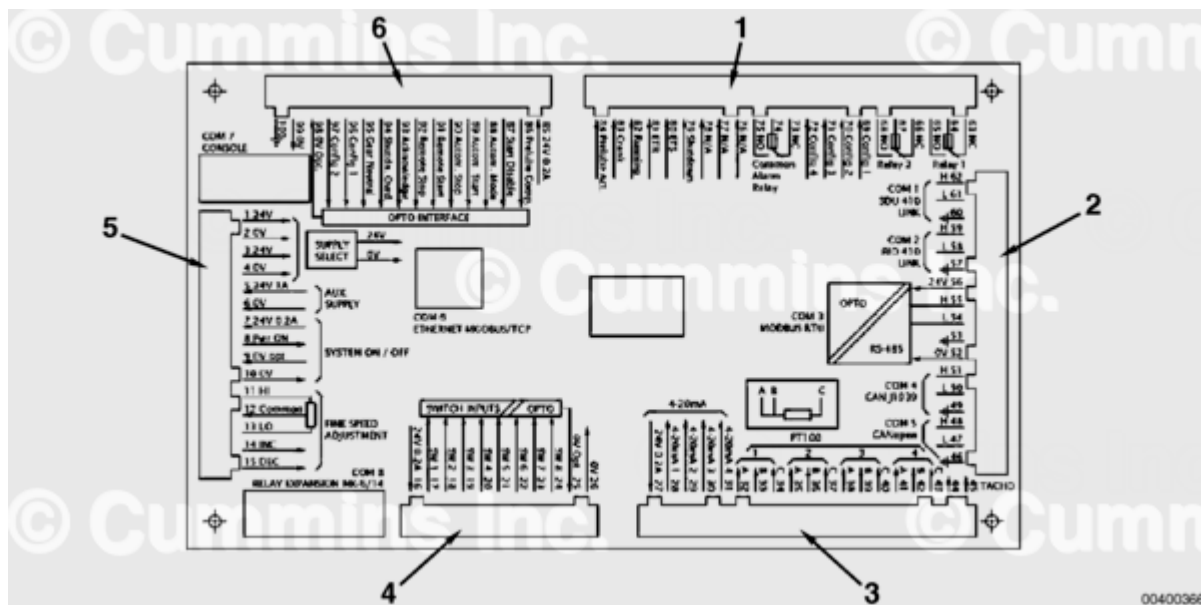


00400366

Rear View - Diesel Control Unit 410

1. Configurable output signals for relays and alarms
2. Com 1, 2, 3, 4, and 5 Modbus™ signal inputs


3. Sensor input signals
4. 1 through 8 switch inputs
5. Power supply to diesel control unit
6. Critical signal inputs to the diesel control unit.

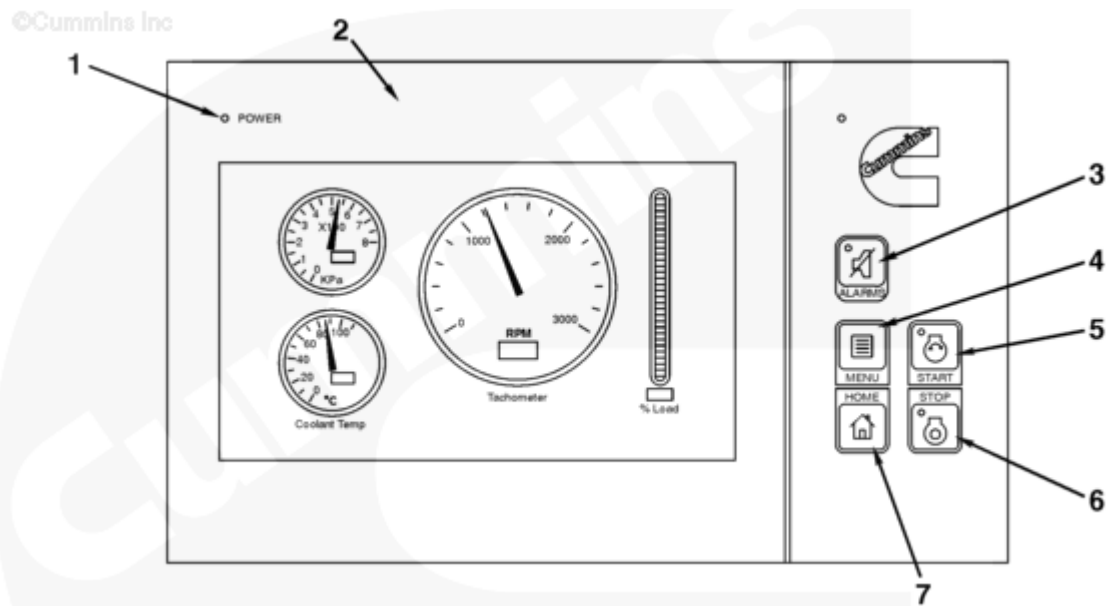

17800174

Front View - Remote Panel

1. Power light emitting diode
2. Display panel
3. Alarm button
4. Menu button
5. Start button
6. Stop button
7. Home button.

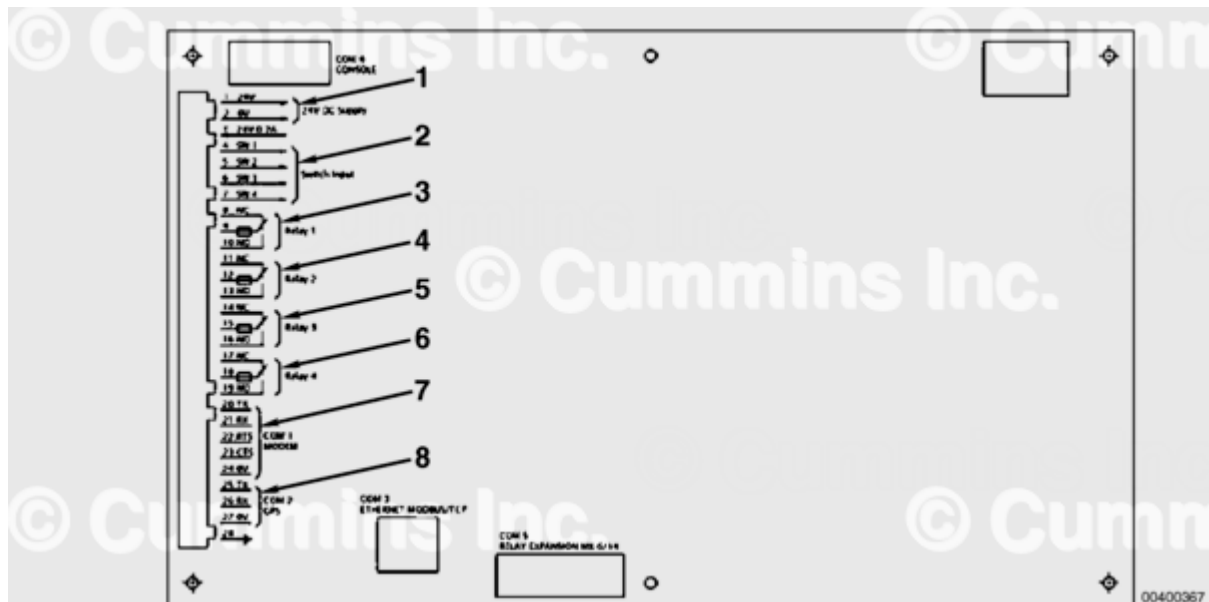


00400367

Rear View - Remote Panel

1. Power supply for remote panel
2. Switch input signal for alarm
3. Relay 1 signal output for active station
4. Relay 2 signal output for acknowledgement of remote panel
5. Relay 2 signal output for buzzer acknowledgement
6. Relay 2 signal output for reserve common
7. Com 1 signal for modem
8. Com 2 signal for receiver.


©Cummins Inc

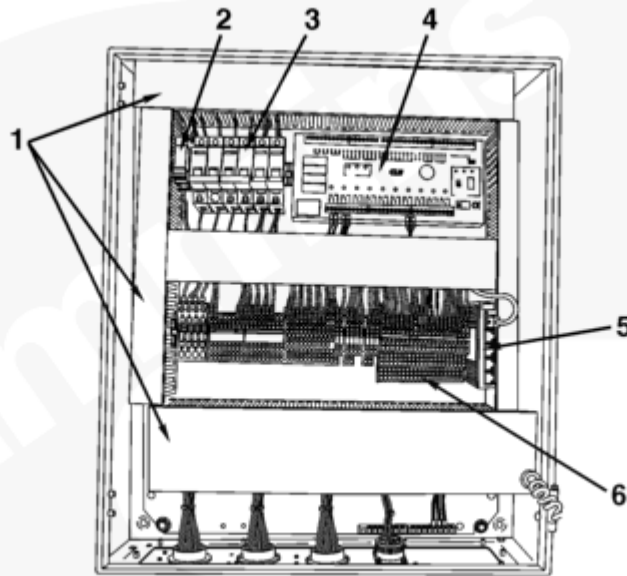

17800175


Inside View - Customer Interface Box

1. Wire trays
2. Engine protection override relay
3. Circuit breakers
4. Customer interface box logic unit
5. Ethernet switch
6. Terminal strip.

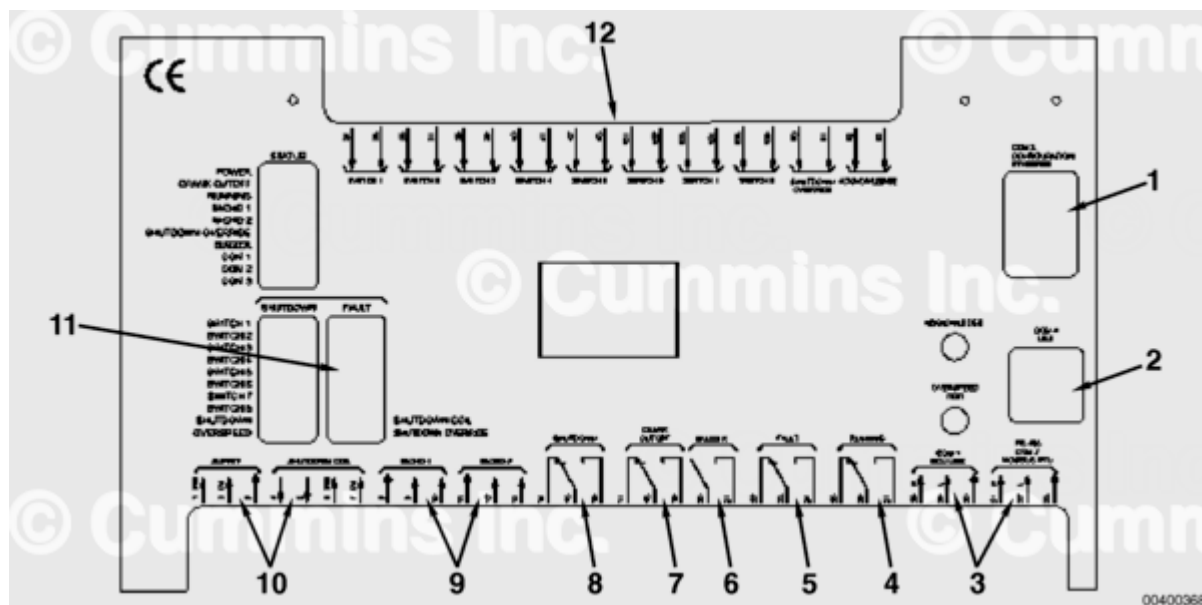


Front View - Shutdown Unit

1. Ethernet connection
2. Com 4 USB connection
3. Communication link to diesel control unit
4. Running relay
5. Fault relay
6. Buzzer relay
7. Engine crank shut off
8. Shutdown relay
9. Engine speed input signals
10. Power supply for shutdown unit
11. Shutdown fault switches
12. Channel input signals for sensors.

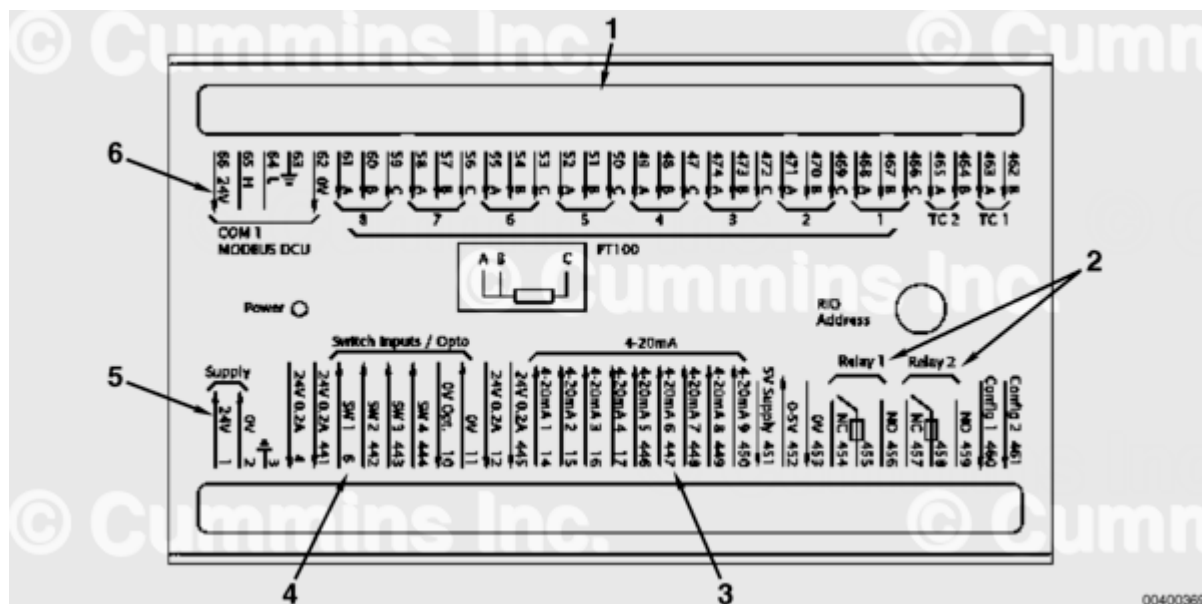

Front View - Remote Input/Output Unit

1. Input signals for Lloyd sensor connections
2. Number 1 and 2 configuration relay connections
3. Pressure and temperature sensor signals to diesel control unit
4. Switch inputs
5. Power supply connections for remote input/output unit
6. Communication Modbus™ connection to diesel control unit

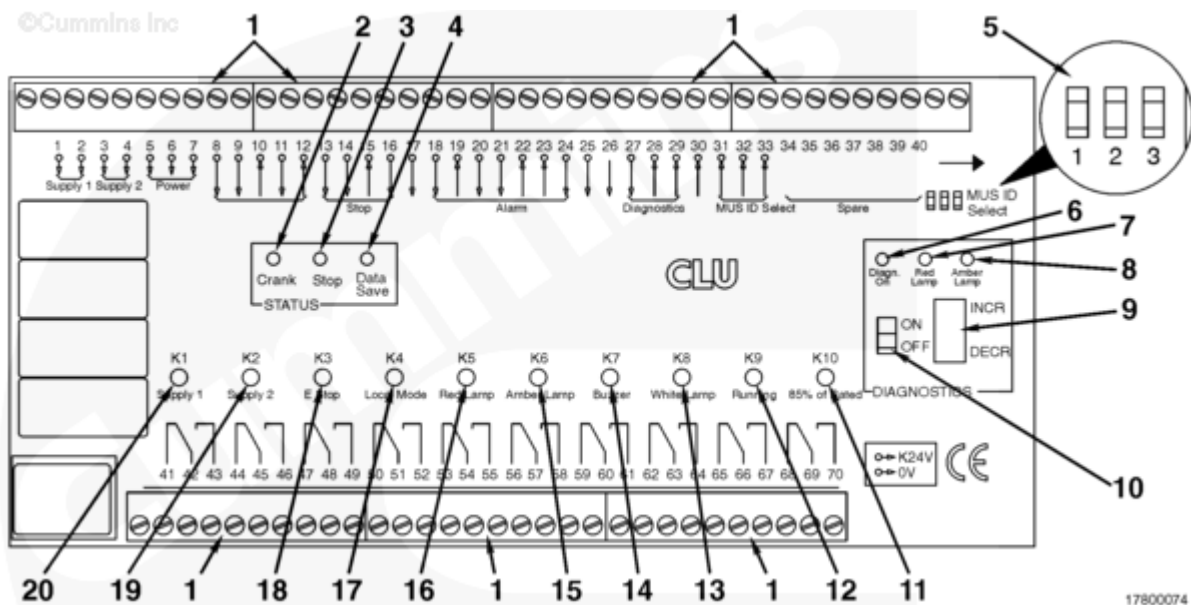

Customer Interface Box (Logic Unit)

1. Terminal strip
2. Crank status lamp
3. Stop status lamp
4. Data Save status lamp
5. Dip switches
6. Diagnostic ON lamp
7. Red diagnostic lamp
8. Amber diagnostic lamp
9. Fault increment/decrement switch
10. Diagnostic ON/OFF switch
11. Running 85% of Rated lamp
12. Running lamp
13. White (maintenance) lamp
14. Buzzer lamp
15. Amber (fault) lamp
16. Red (fault) lamp
17. Local Mode lamp
18. Engine Stop lamp
19. Supply 2 lamp
20. Supply 1 lamp.

