


Trainings ▾

Remove

QSK38 and QSK50 Engines

Disconnect the sensor from the engine harness.

Remove the sensor from the mounting location.

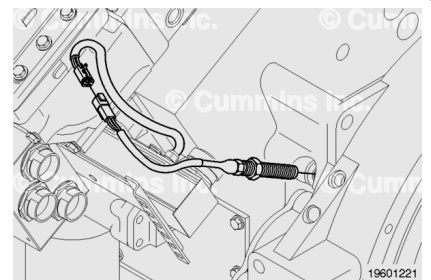


QSK60 Engines

Disconnect the sensor from the engine harness.

Loosen the jam nut from the flywheel housing.

Remove the sensor from the mounting location.

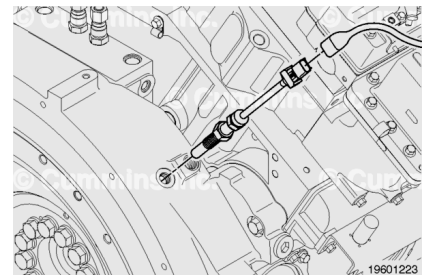

Install

QSK38 and QSK50 Engines


Install a new o-ring onto the sensor.

Apply clean engine oil to the o-ring.

Install the new sensor into the mounting hole.

Torque Value: 34 n•m [25 ft•lb]

Connect the sensor to the engine harness.

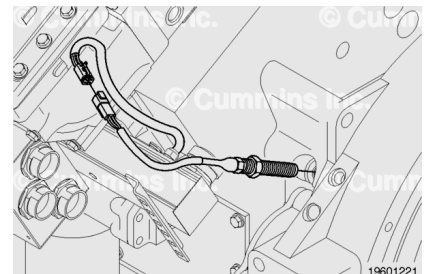

QSK60 Engines

Install the new sensor into the mounting hole until it contacts the flywheel. Back off ½ turn.

Tighten the jam nut.

Torque Value: 34 n•m [25 ft-lb]

Connect the sensor to the engine harness.

