

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- No recommended Cummins® service tools.


Additional Service Items

- No additional service items required.

Remove

Disconnect the sensor from the engine harness.

Remove the sensor from the mounting location.

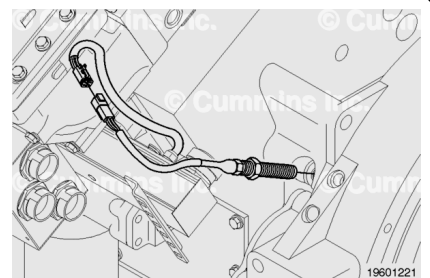


Inspect for Reuse

Inspect the crankshaft position sensor for debris or cracks.

If there is debris on the sensor, clean the sensor.

If the sensor is chipped, cracked or otherwise damaged, replace the sensor.

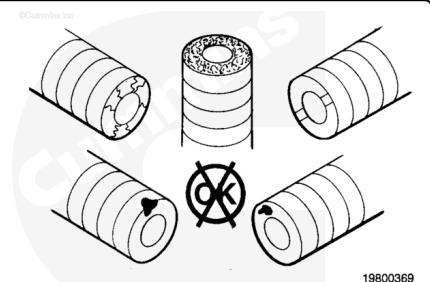


Install

Install a new o-ring onto the sensor.

Apply clean engine oil to the o-ring.

Install the new sensor into the mounting hole.

Note : Do not tighten the lock nut.

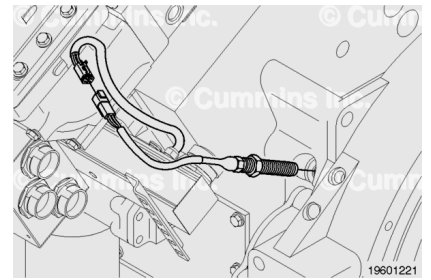

Use a 1mm feeler gauge to set correct clearance between flywheel and sensor.

If the engine is still connected to the OEM equipment preventing access with a feeler gauge the sensor should be fully installed, then loosened one turn.

Note : The feeler gauge method is the most accurate method and should be the primary method of checking the air gap.

Once correct clearance is achieved, tighten lock nut.

Torque Value: 40 n•m [30 ft-lb]

Connect the sensor to the engine harness.

