

Trainings ▾

General Information


The exhaust gas temperature sensor is located on the exhaust manifold connection next to the cylinder head.

The temperatures are measured directly by the engine control module (ECM). This engine uses a thermistor to measure the temperature and does **not** require the signal converter box, as in earlier models.

There are two types of injector and exhaust gas temperature sensor harnesses available. Depending on which harness is used, the routing of the exhaust gas temperature sensor wiring harness is different. See the following procedure to identify which harness is fitted. Refer to Procedure 019-043 in Section 19. (</qs3/pubsys2/xml/en/procedures/05/05-019-043.html>)



Some engines are configured with fuel rail brackets (1) on the rocker lever cover.

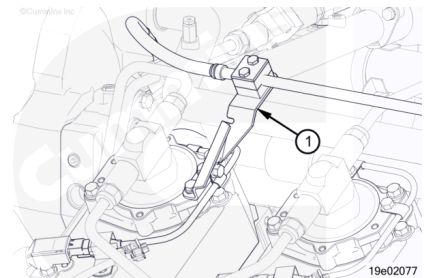

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the batteries. See equipment manufacturer service information.

- Remove the exhaust temperature sensor. Refer to Procedure 019-013 in Section 19. (</qs3/pubsys2/xml/en/procedures/05/05-019-013.html>)

Remove


Without Fuel Rail Bracket

Remove the wire clamp capscrews (1).

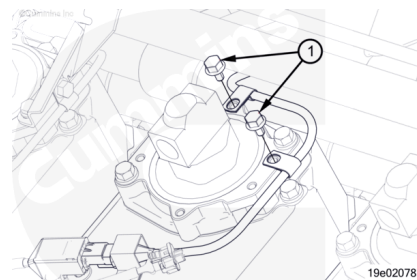

With Fuel Rail Bracket

Remove the wire clamp capscrews (1).

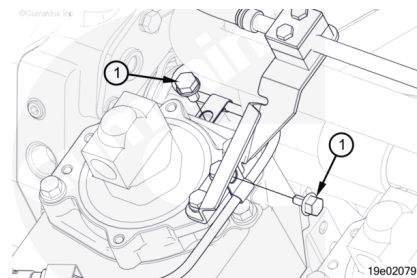


Install

Without Fuel Rail Bracket


For engines with low temperature aftercooler (LTA) tubes:

- Route all exhaust gas temperature sensor cables between the two LTA tubes.

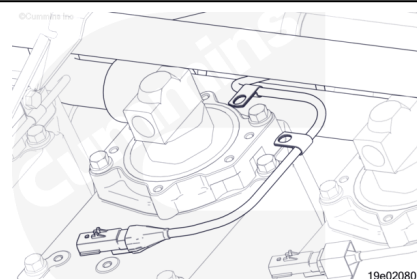

For engines with turbocharger coolant hoses:


- Route the exhaust gas temperature sensor cables under the coolant hose.

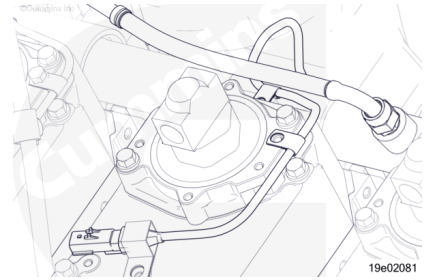

Route the exhaust gas temperature sensor harness **clockwise** around the injector.

Install the P-clips onto the rocker lever cover.


Torque Value: 18 n•m [159 in-lb]

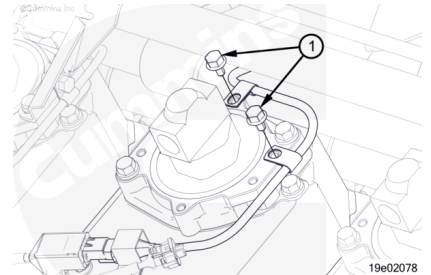

With Fuel Rail Bracket


For engines with LTA tubes:

- Route all exhaust gas temperature sensor cables between the two LTA tubes.

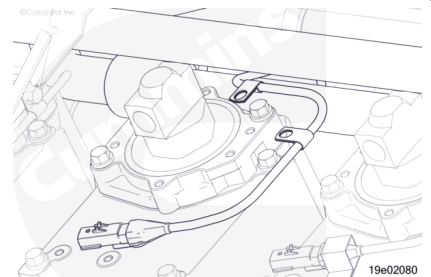

For engines with turbocharger coolant hoses:


- Route the exhaust gas temperature sensor cables under the coolant hose.

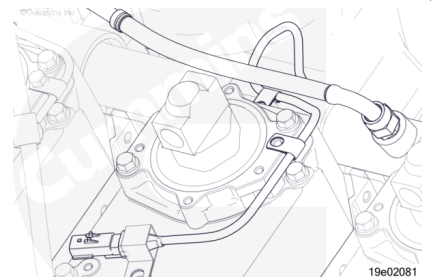

Route the exhaust gas temperature sensor harness **clockwise** around the injector.

Install the P-clips onto the rocker lever cover and the side of the fuel rail bracket.

Torque Value: 18 n•m [159 in-lb]

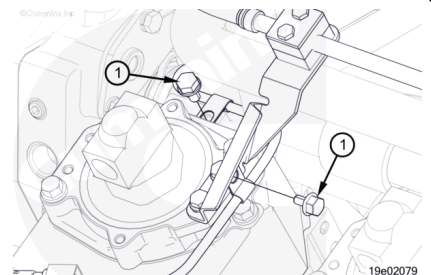

Finishing Steps

WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Install the exhaust temperature sensor. Refer to Procedure 019-013 in Section 19. (</qs3/pubsys2/xml/en/procedures/05/05-019-013.html>)
- Connect the batteries. See equipment manufacturer service information.