


Fault Code: 1362


Engine Oil Filter Differential Pressure - Data Valid but Above Normal Operating Range - Moderately Severe Level

 Printable Version


Overview

Codes	Reason	Effect
Fault Code: 1362 PID(P): SPN: 99 FMI: 16 Lamp: Amber SRT:	Engine Oil Filter Differential Pressure - Data Valid but Above Normal Operating Range - Moderately Severe Level.	Calibration-dependent progressive power derate and engine shutdown with increasing time after alert.

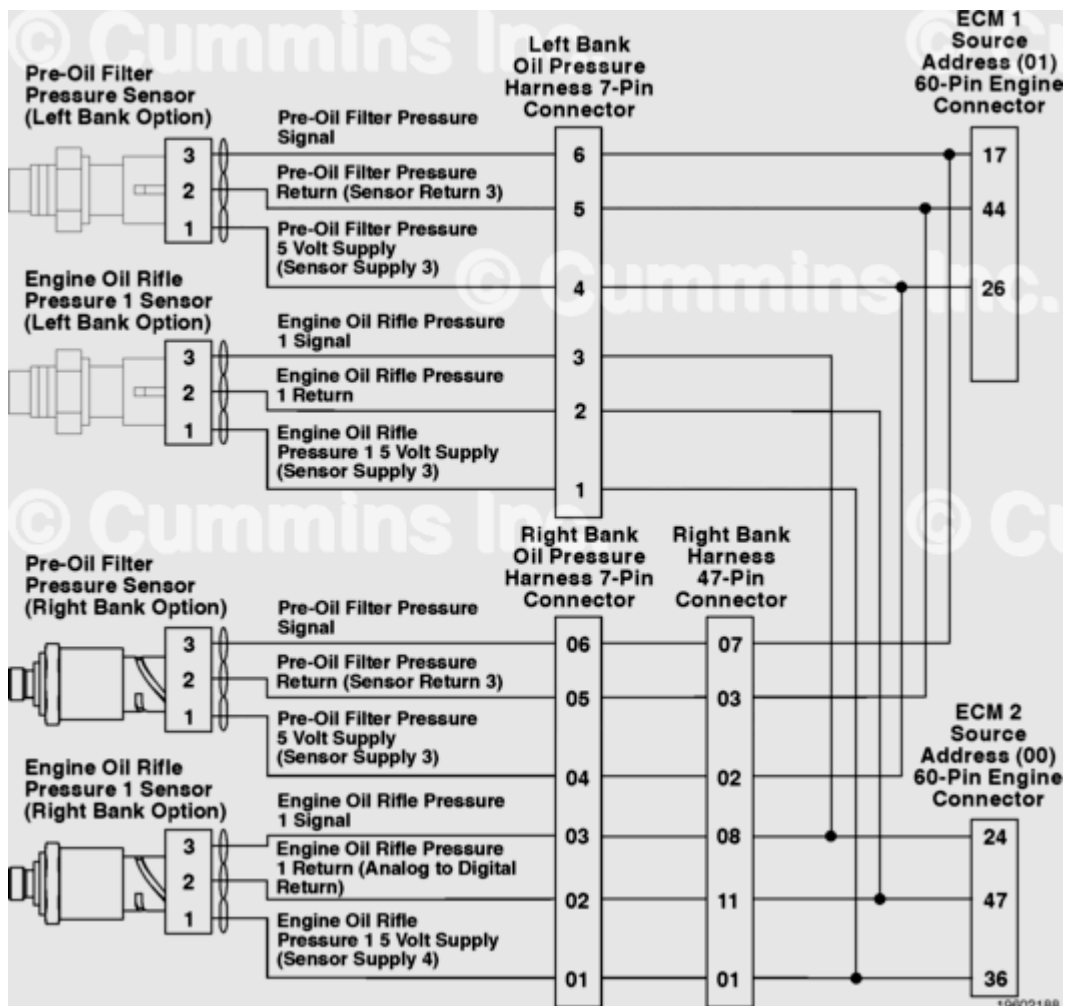


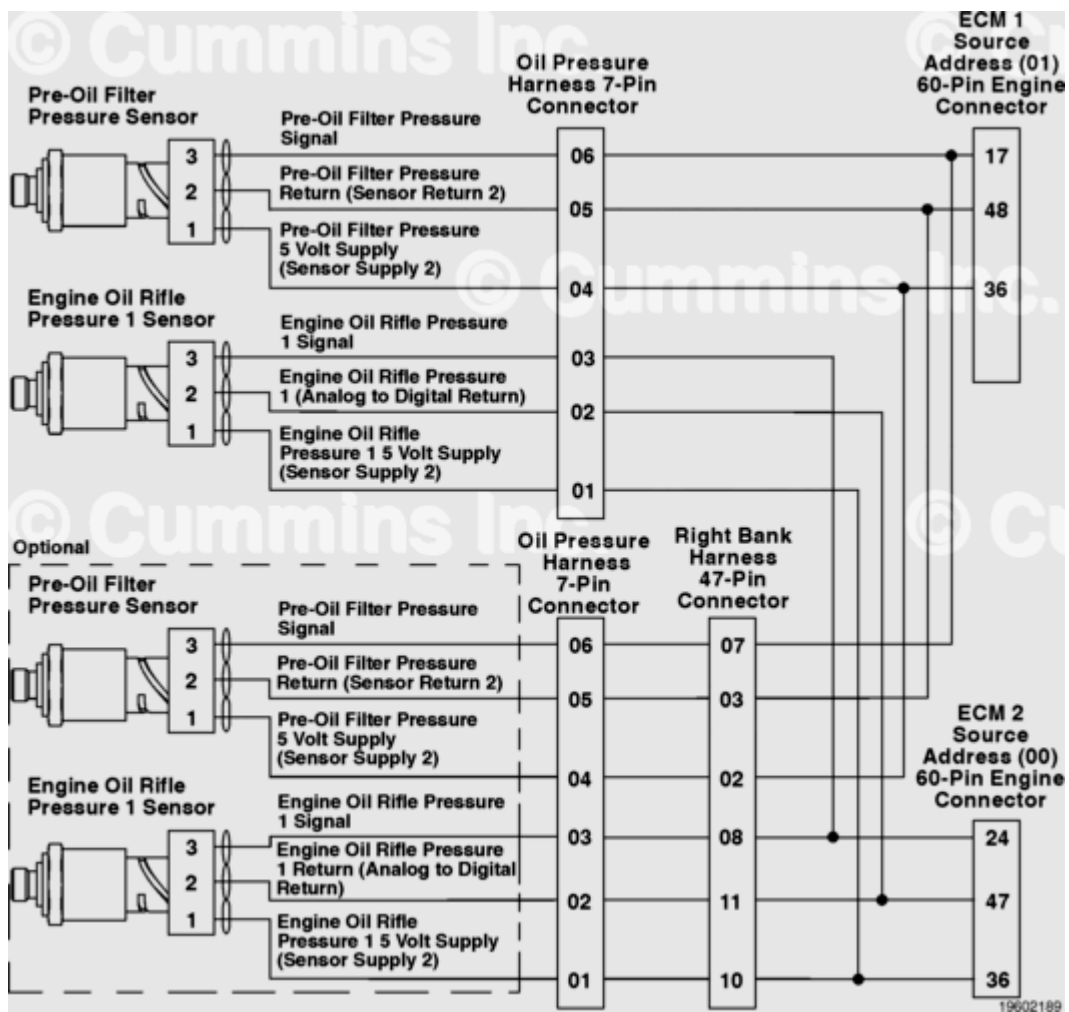


QSK38 CM2150 Marine - Engine Oil Filter Differential Pressure Circuit

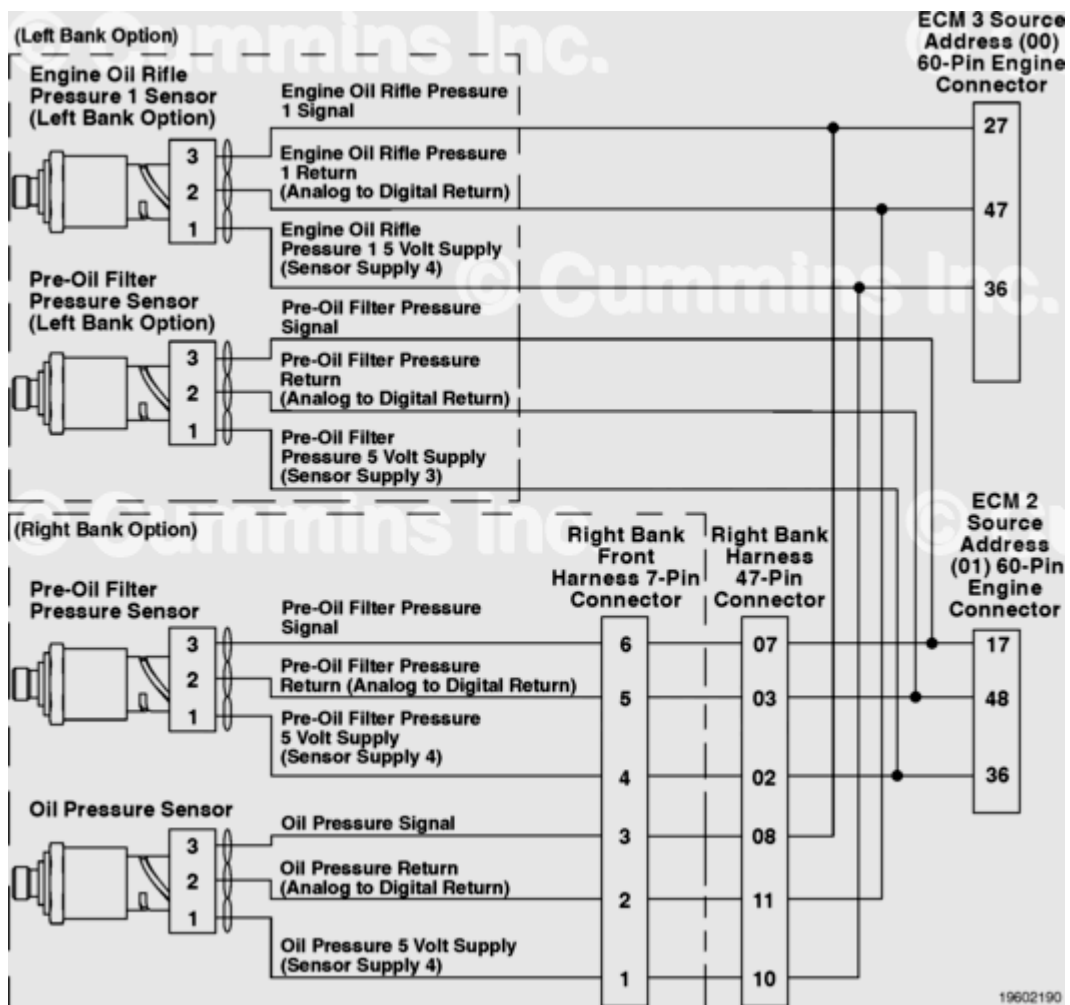


QSK50 CM2150 Industrial - Engine Oil Filter Differential Pressure Circuit

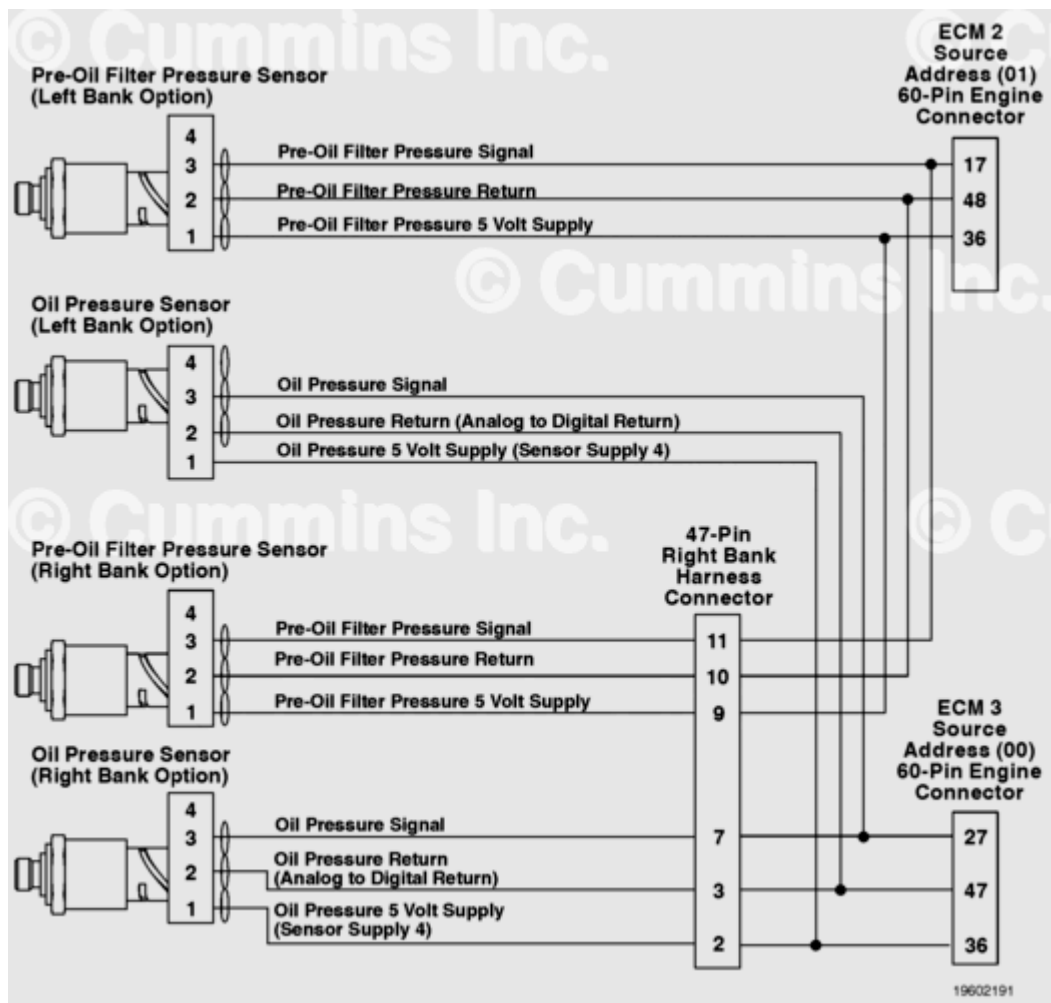


QSK50 CM2150 Power Generation with Advanced Engine Monitoring - Engine Oil Filter Differential Pressure Circuit

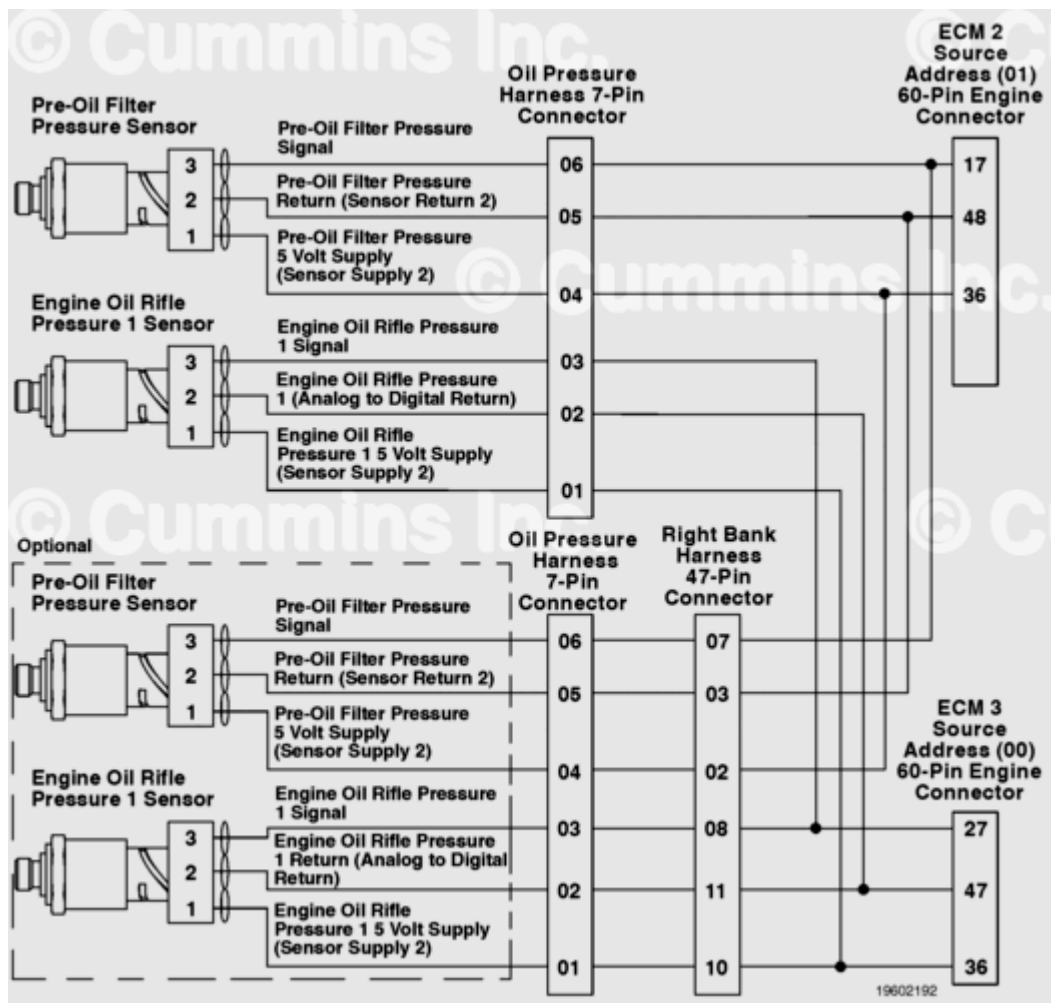

QSK50 CM2150 Marine - Engine Oil Filter Differential Pressure Circuit

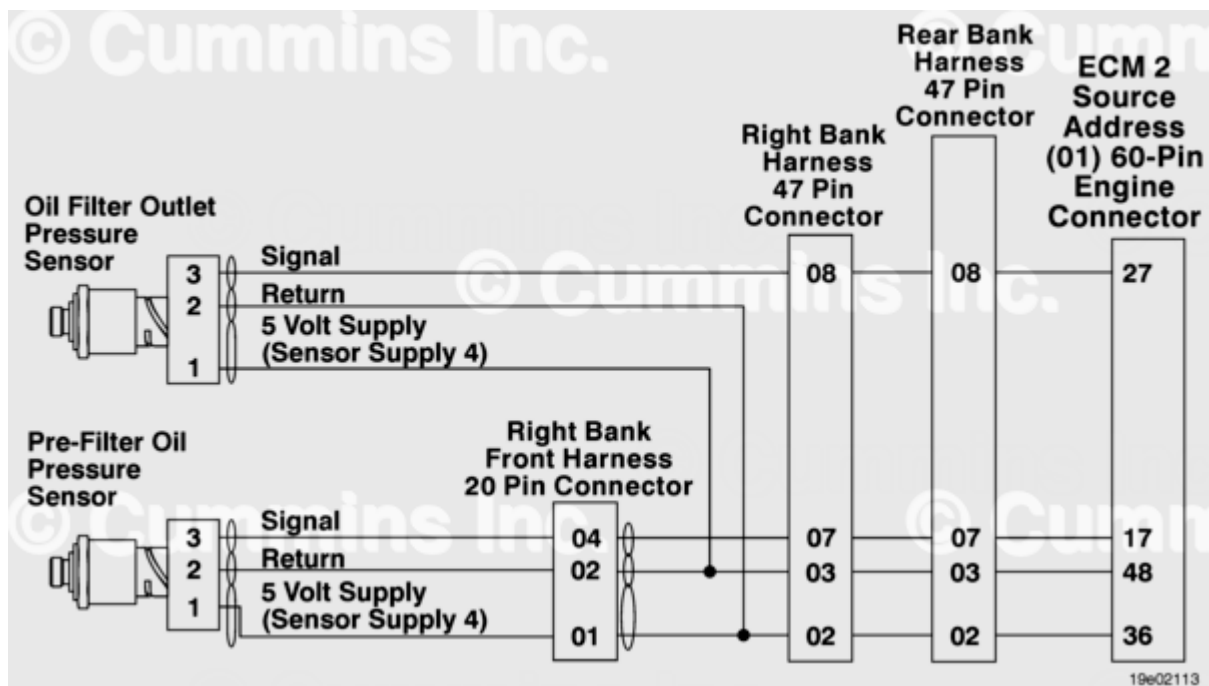

QSK60 CM2150 Industrial - Engine Oil Filter Differential Pressure Circuit

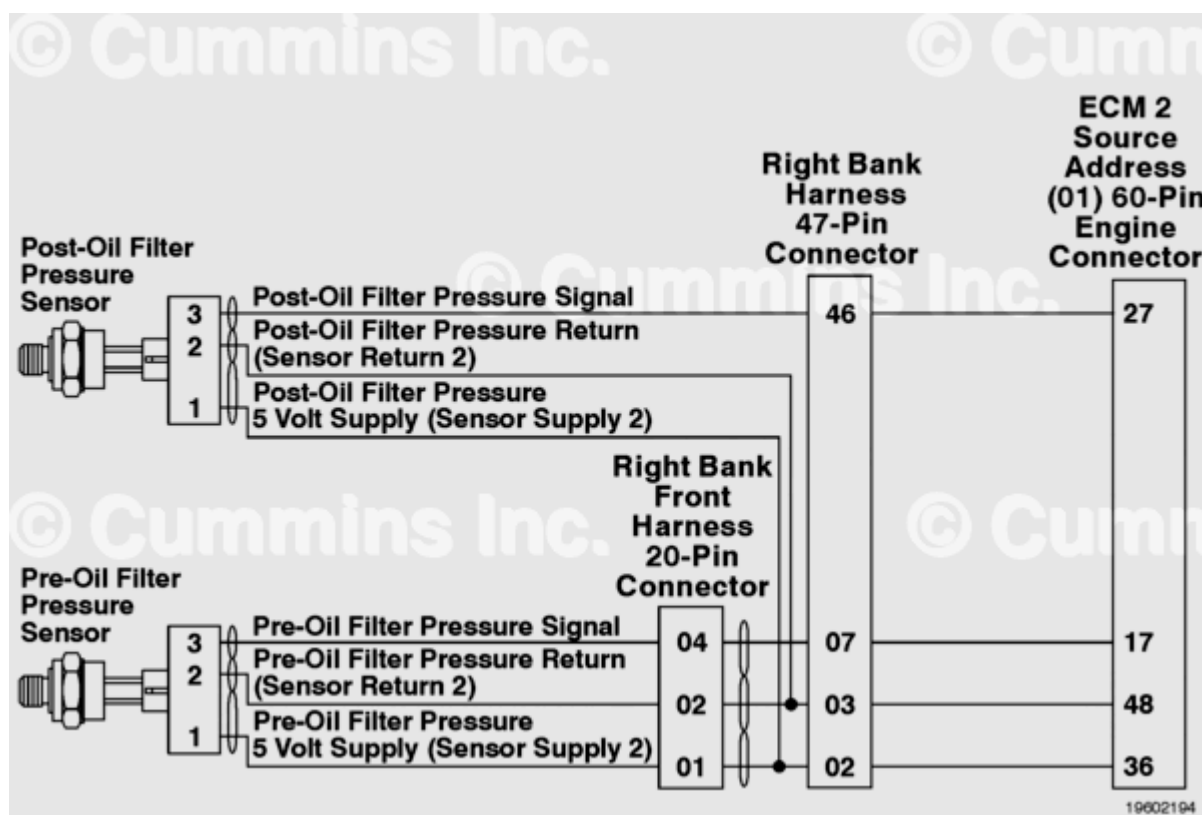

QSK60 CM2150 Marine/QSK60 CM2150 Drill Rig - Engine Oil Filter Differential Pressure Circuit

Circuit Description

The engine oil filter differential pressure is monitored by the electronic control module (ECM) before and after filtration. The pre-oil filter pressure sensor monitors the oil pressure before the filters. The post-oil filter pressure sensor monitors the pressure after the oil filters on the QSK60. The engine oil rifle pressure 1 sensor monitors this pressure on the QSK38 and QSK50. The ECM monitors the voltage on the signal pin and converts it to a pressure value.

Component Location

The pre-oil pressure and post-oil pressure sensors are located on or near the lubricating oil filter head.

Shoptalk

There are multiple ECMs for the engine models included in this manual. Each ECM has an individual source address that displays when INSITE™ electronic service tool is connected. When troubleshooting a fault code, use the source address displayed in INSITE™ electronic service tool to determine which ECM and circuit is affected.

Fault Code 1362 will go active when the difference between the oil pressure at the inlet and outlet of the oil filter head reaches a preset warning value. Reasons for this fault code include:

- Plugged oil filters
- Damaged sensors or harness

- Plugged oil filter head.

Refer to Troubleshooting Fault Code 1362. (</qs3/pubsys2/xml/en/procedures/122/122-t05-1362.html>)

Last Modified: 10-May-2018
