


Fault Code: 7313

Engine Fuel Pump Oil Pressure - Data Valid But Below Normal Operating Range - Most Severe Level

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 7313 PID(P): SID(S) SPN: 520754 FMI: 1/1 Lamp: Red SRT:	Engine fuel pump oil pressure signal indicates oil pressure is below the engine protection warning limit.	Progressive power and/or speed derate increasing in severity from time of alert. If the Engine Protection Shutdown feature is enabled, the engine will shut down 10 seconds after the red STOP lamp starts flashing.

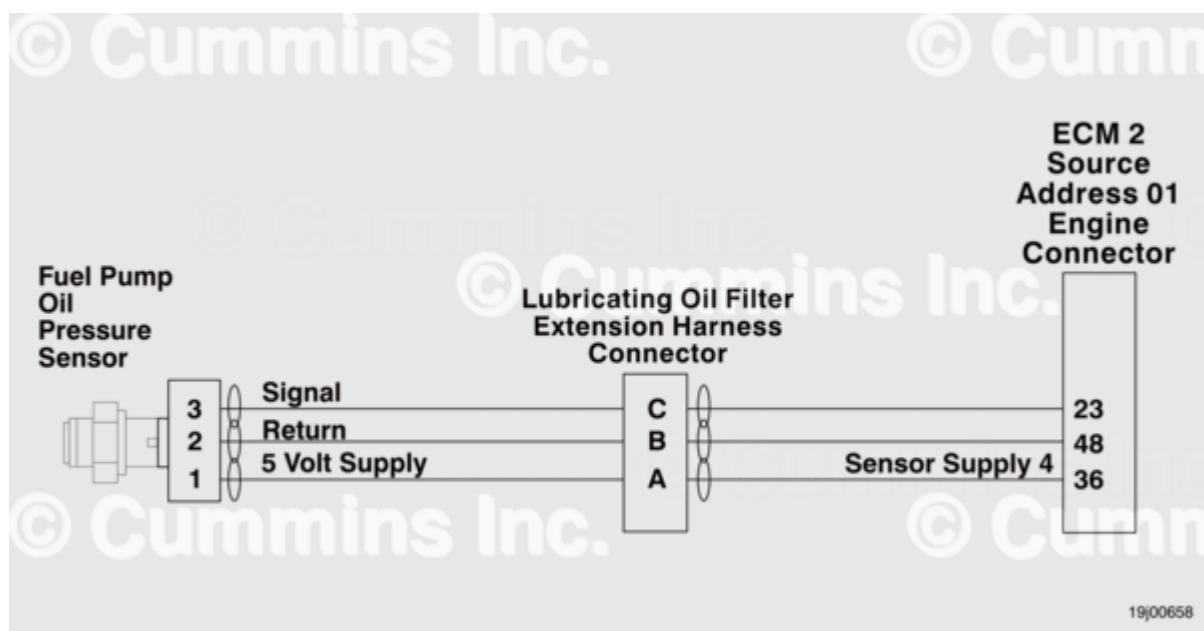

Engine Fuel Pump Oil Pressure Sensor Circuit

Circuit Description

The engine control module (ECM) provides a 5-volt supply to the engine fuel pump oil pressure sensor on the sensor supply circuit. The ECM also provides a ground on the sensor return circuit. The engine fuel pump oil pressure sensor provides a signal to the ECM on the engine fuel pump oil pressure sensor signal circuit. This sensor signal voltage changes based on the pressure in the oil flow path. The ECM will detect a low signal voltage at operating conditions when the oil pressure may be slightly lower. The ECM will detect a high signal voltage during high engine speeds or operating conditions when the oil pressure is high.

Component Location

The engine fuel pump oil pressure sensor is located in the engine fuel pump oil filter head mounted to the top of the fuel pump adapter drive. Certain engines may have the filter head mounted remotely.

Conditions For Running The Diagnostics

This diagnostic runs continuously when the engine is running.

Conditions For Setting The Fault Codes

The Engine Control Module (ECM) detected the engine oil pressure was below minimum operating limits.

Action Taken When The Fault Code Is Active

- The ECM illuminates the red STOP ENGINE lamp immediately after the diagnostic runs and fails.
- The torque output of the engine will be reduced.
- The engine will be shut down if the Engine Protection Shutdown feature is enabled.

Conditions For Clearing The Fault Code

- To validate the repair, bring the engine up to operating temperature and run it in normal loaded conditions for 15 minutes.

- The fault code status displayed by the recommended Cummins® electronic service tool or equivalent will change to INACTIVE immediately after the diagnostic runs and passes.
- The ECM will turn off the red STOP ENGINE lamp immediately after the diagnostic runs and passes.
- The “Reset All Faults” command in the recommended Cummins® electronic service tool or equivalent can be used to clear active and inactive faults.

Shoptalk

Possible causes of this fault code include:

- Low oil pressure
- Incorrect oil level
- Damaged oil pressure sensor
- Plugged or restricted lubricating oil filter.
- Plugged or restricted lubricating oil flow path.

Refer to Troubleshooting Fault Code t05-7313. (</qs3/pubsys2/xml/en/procedures/122/122-t05-7313.html>)