


Trainings ▾

General Information


The injector metering rail 1 pressure sensor is located on the front of the fuel pump.

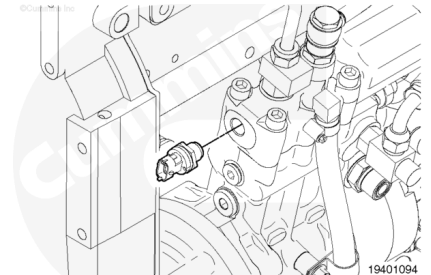

Remove


Clean the area around the injector metering rail 1 pressure sensor.

Disconnect the injector metering rail 1 pressure sensor connector from the engine harness.

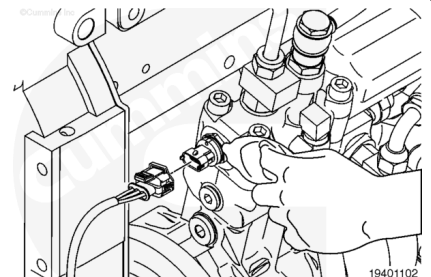

Remove the injector metering rail 1 pressure sensor.


Remove the soft seal.

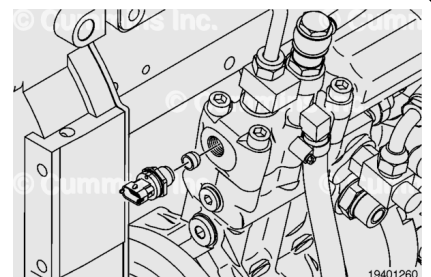

Inspect for Reuse

Inspect the engine harness connector and the injector metering rail 1 pressure sensor for the following:


- Cracked or broken connector shell
- Missing or damaged connector seals
- Dirt, debris, or moisture in or on the connector pins
- Corroded, bent, broken, pushed back, or expanded pins.

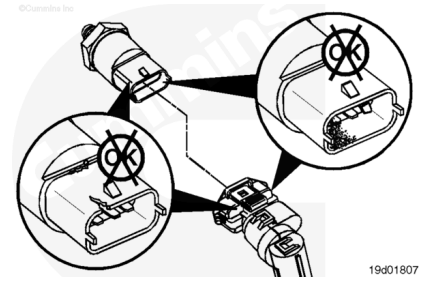

Inspect the injector metering rail 1 pressure sensor for the following:

- Debris on the tip of the sensor
- Thread damage.

Replace the injector metering rail 1 pressure sensor if damage is found.

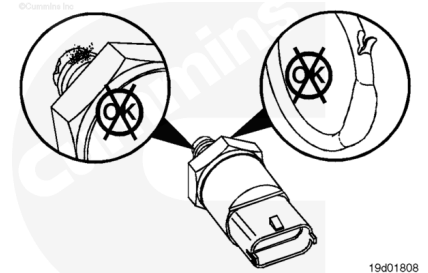

Install

Install a new soft seal and the injector metering rail 1 pressure sensor.

Torque Value: 136 n·m [100 ft-lb]

Connect the engine harness to the injector metering rail 1 pressure sensor.

Start the engine and check for leaks.

