



Service Tool Instruction

Service Tool Instruction
Number: 3377864

Revision Level:

Released Date: 15-Jan-
2014

Description

Thread Repair Insert


Purpose

This document provides a procedure for the Thread Repair Insert, Part Number 3163820, on Cummins® M11, N14, ISX, and Signature™ engine stand mounting adapter plates.

This thread repair insert (1) can be used to repair threaded holes for the engine stand mounting adapter plates. It can also be used to provide threaded holes to an engine stand mounting adapter plate originally designed without threaded holes.

The thread repair insert is **only** available in M16 x 2.0 thread. The flange-head capscrew, Part Number 3171717, is available and sold separately.

©Cummins Inc

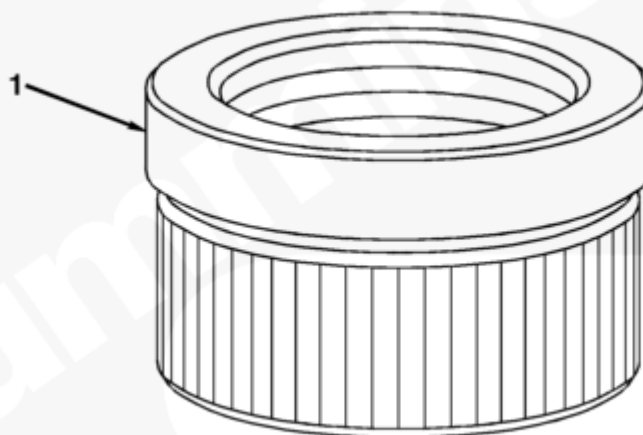

22100081


Thread Repair Insert, Part Number 3163820

Table 1 - Metric-Flange Head Capscrew

Reference Number	Part Number	Description	Quantity	Available to Purchase
Not shown	3171717	Flange-head capscrew M16 x 2.0 x 50 mm	As required	Yes

Start at the 12 o'clock position and proceed either **clockwise** or **counterclockwise** 30 degrees (1) to locate the first engine stand adapter plate hole. Advance 60 degrees to the next engine stand adapter plate hole. The remaining four engine stand adapter plate holes are spaced 60 degrees apart.

The bolt circle diameter for the engine stand adapter plate mounting holes is 9.25 in [234.95 mm].

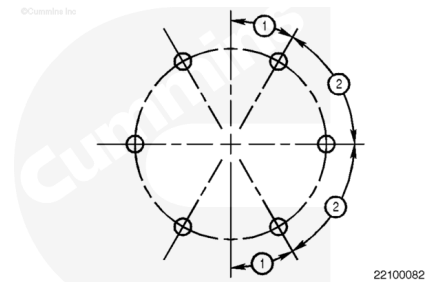


⚠ WARNING ⚠

To reduce the possibility of personal injury, wear goggles and protective clothing.

Note : Make certain that when reaming the engine stand adapter hole, it is perpendicular to the working surface.


On the engine stand adapter plate, locate the damaged hole. Ream the engine stand adapter plate hole to 0.875-inch diameter plus 0.002 /minus 0.000 inch. Chamfer the newly reamed engine stand adapter plate hole. Use a metal hand file, or other shop tool, to deburr all sharp edges.

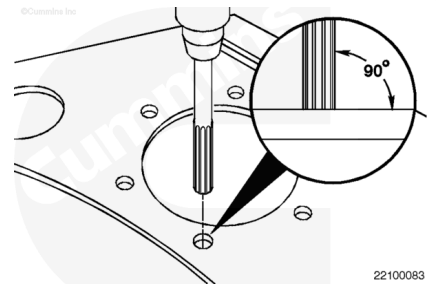

⚠ WARNING ⚠


To reduce the possibility of personal injury or equipment damage, this procedure must only be performed by suitably qualified service technicians.

Install the thread repair insert (1) through the hole from the engine mounting side of the engine stand adapter plate.

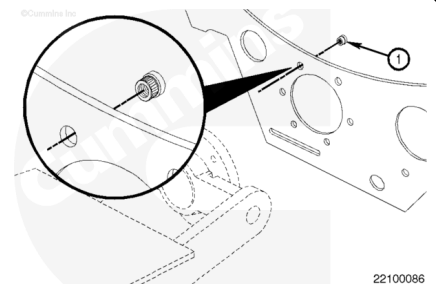

⚠ CAUTION ⚠

When pressing in the new thread repair insert on the engine stand adapter plate, make certain that it is not pressed in at an angle. Pressing in at an angle can cause damage both to the insert and the plate.

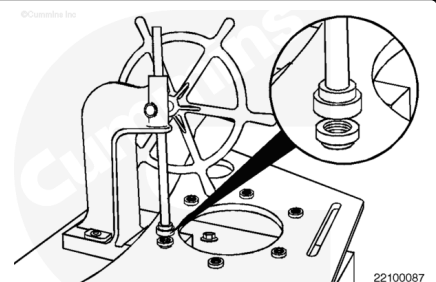

Press the thread repair insert into place. Check the thread repair insert to make certain that it is positioned and seated correctly on the engine stand adapter plate.

If the thread repair insert needs to be removed, install a metric capscrew into the thread repair insert and position the bench press against the top of the capscrew. Press out the thread repair insert.