


Trainings ▾

Remove


Lift up on the locking tab, and pull the electrical connectors apart.

Remove the sensor.

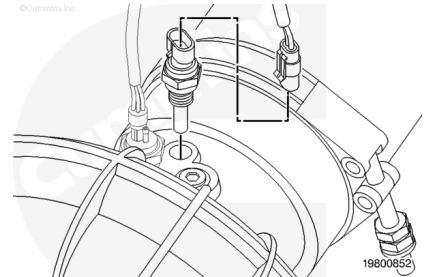


Install

Use quick-dry electrical contact cleaner, Part No. 3824510, to remove all dirt and moisture from the sensor connector port and the harness connector.

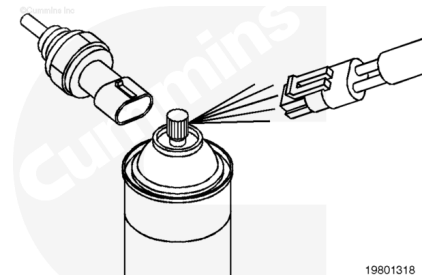

⚠ CAUTION ⚠

Use only Cummins-recommended lubricant DS-ES, Part No. 3822934. Other lubricants, such as lubricating oil or grease in the connectors can cause ECM damage, poor engine performance, or premature connector wear.

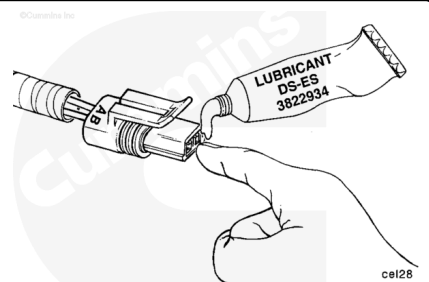


Apply a small amount of lubricant to the connector terminals. Before installing, fill the entire connector cavity with lubricant.

Lubricate the sensor o-ring.

Install the sensor into the engine. Tighten the sensor.

Torque Value: 14 n•m [10 ft•lb]

Push the connectors together until they lock.

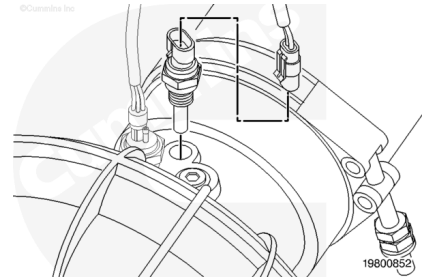

Last Modified: 26-Aug-2003
