



Trainings ▾

Connector Replacement


The connectors are located on the CENSE™ wiring harness right rear bank near the CENSE™ ECM module.

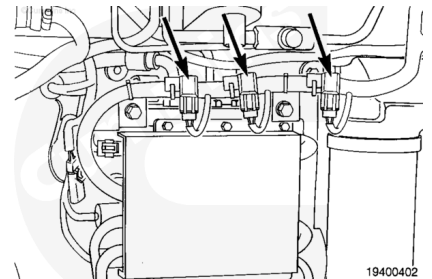


Cut and remove the plastic hold-down wire tie. Cut and remove the connector from the harness.

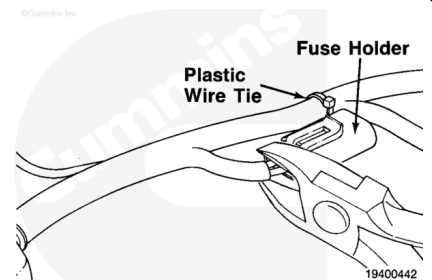

Using the wire crimping pliers, Part No. 3822930, remove about 6 mm [1/4 in] of insulation from the supply wires.

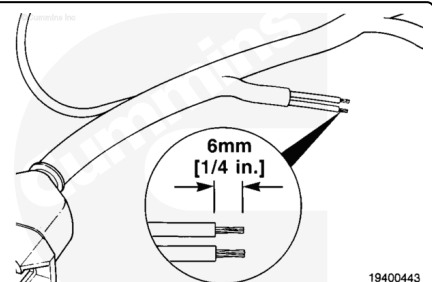


Install the replacement fuse holder, Part No. 3823758, on the bare wire.

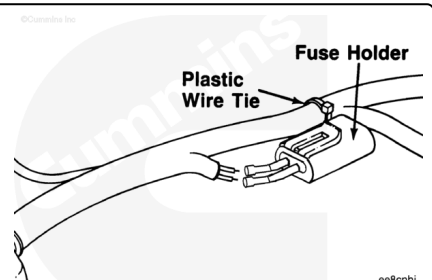

Use wire crimping pliers, Part No. 3822930, to crimp the repair wire onto the bare wire.

Use a heat gun, Part No. 3822860, or an open flame, to heat the shrink tubing. The tubing will shrink and make the connection waterproof.

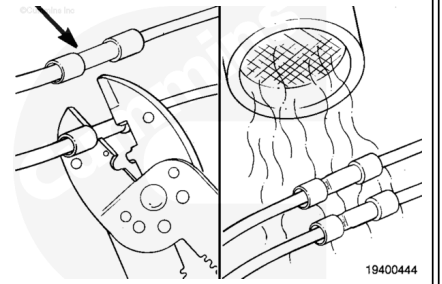

Last Modified: 26-Aug-2003
