


Trainings ▾

Remove

Remove the six capscrews.

Remove the camshaft cover.

Remove and discard the gasket.

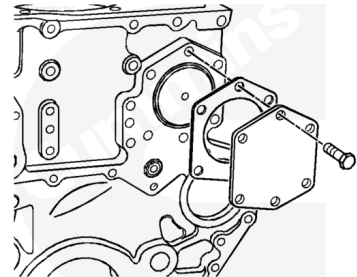

Install

Install the camshaft cover gasket and the cover. Install the capscrews. Tighten the capscrews.

Torque Value: 66 n•m [50 ft-lb]

