


Trainings ▾

Measure

⚠ CAUTION ⚠


Support the cylinder head to prevent damage to the injector tip that protrudes from the combustion face.

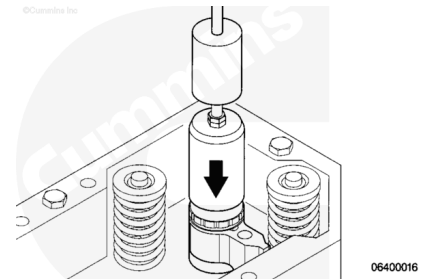

Note : Engines with electronically actuated injectors do not require the injector protrusion to be measured.


Install the injector in the cylinder head. Refer to Procedure 006-026 in Section (/qs3/pubsys2/xml/en/procedures/89/89-006-026-tr.html)

Use a depth gauge, Part Number 3823495, or equivalent. Turn the cylinder head over.

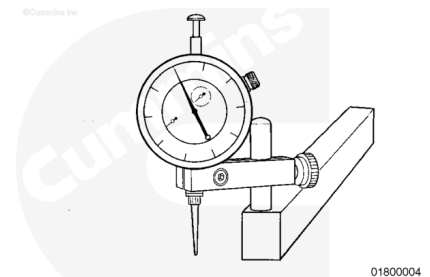

Use a gauge block, Part Number 3164438, or equivalent, to measure the injector protrusion.

Measure as shown in the illustration.

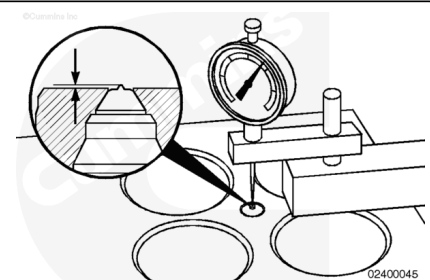

Injector Protrusion		
mm		in
2.42	MIN	0.095
2.92	MAX	0.115

If the protrusion is **not** within specifications, use an oversize sealing ring. Sealing rings are available in various sizes.

Injector Sealing Rings			
	mm		in

Wall thickness	0.343	MIN	0.0135
	0.419	MAX	0.0165
Protrusion change	0.00	NOM	0.000
Wall thickness	0.470	MIN	0.0185
	0.546	MAX	0.0215
Protrusion change	0.25	NOM	0.010
Wall thickness	0.597	MIN	0.0235
	0.673	MAX	0.0265
Protrusion change	0.51	NOM	0.020
Wall thickness	0.724	MIN	0.0285
	0.800	MAX	0.0315
Protrusion change	0.76	NOM	0.030

The 0.343/0.419 mm [0.0135/0.0165 in] is the standard sealing ring.