


Trainings ▾

Remove

Remove the breather tube and breather from the engine.

Check the tube and breather for obstructions and sludge buildup which can cause excess crankcase pressure buildup.

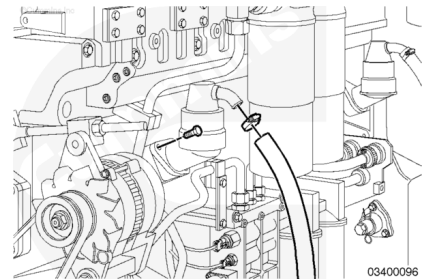

Clean

⚠ WARNING ⚠


When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

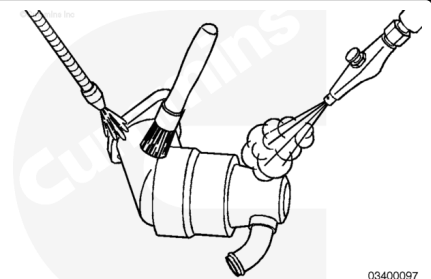


Soak the breather in solvent or clean with steam.

Dry the breather assembly with compressed air.

The air **must** flow freely through the breather. If the breather is blocked or restricted, it **must** be replaced.

Install an o-ring in the crankcase breather o-ring groove.

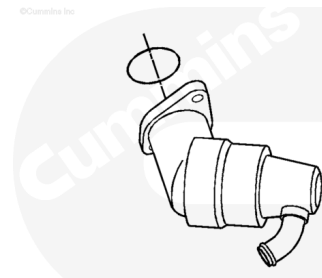

03400100

Install the crankcase breather onto the cam follower cover with two capscrews.


Tighten the capscrews.

Torque Value: 66 n•m [48 ft-lb]

Install the hose and clamp onto the breather assembly.

Tighten the hose clamp.

Torque Value: 5 n•m [44 in-lb]

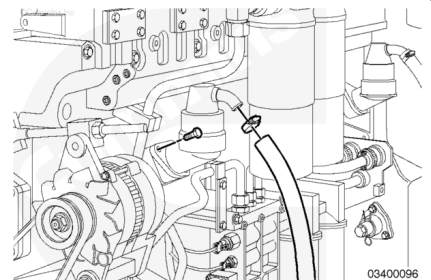

03400096