

Trainings ▾

Preparatory Steps

- Remove the rocker lever cover. Refer to Procedure 003-011 (/qs3/pubsys2/xml/en/procedures/89/89-003-011.html).




Remove

Do **not** allow the rocker levers to fall off the shaft during removal.

Remove the two rocker lever assembly mounting capscrews.


Remove the rocker lever assembly.

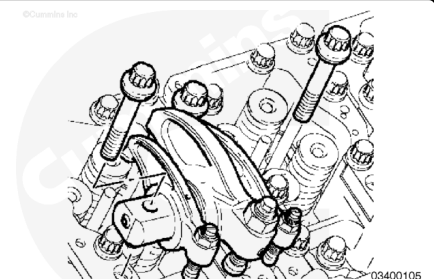

Remove the mounting capscrews from the rocker lever shaft.

Remove the rocker levers from the rocker lever shaft.

Note : If more than one rocker lever assembly is being removed, tag each assembly with the cylinder number from which it was removed.

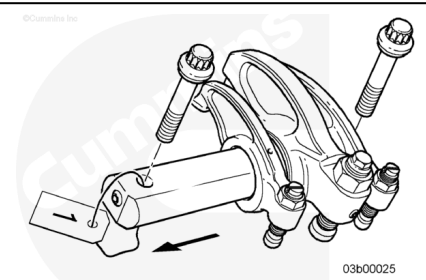


Inspect for Reuse

Inspect the rocker lever shaft for damage or roughness.

Measure the outside diameter of the rocker lever shaft.

Rocker Lever Shaft Outside Diameter		
mm		in
44.972	MIN	1.7705
44.985	MAX	1.7711

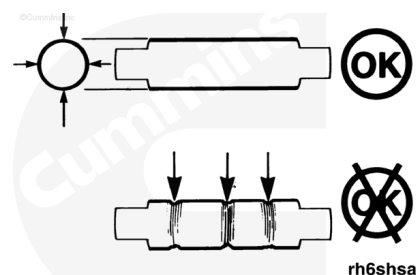


Inspect the pad for wear on the valve actuator rocker lever.

Inspect the socket for wear on the injector actuating rocker levers.

Inspect the adjusting screw ends.

Inspect the crosshead pad for wear.

If there is damage that can be felt with a fingernail, the parts **must** be replaced.

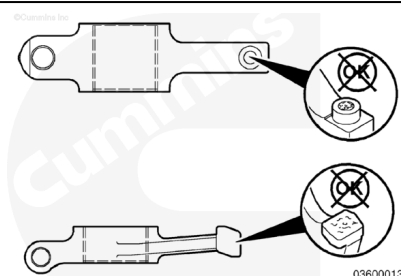


Inspect the valve and injector actuating rocker lever bushings for wear.

Measure the inside diameter of the valve and injector actuating rocker lever bushings.

Valve Actuating Rocker Lever Bushing Inside Diameter		
mm		in
45.024	MIN	1.7726
45.099	MAX	1.7755

Injector Actuating Rocker Lever Bushing Inside Diameter		
mm		in
45.021	MIN	1.7725
45.097	MAX	1.7755

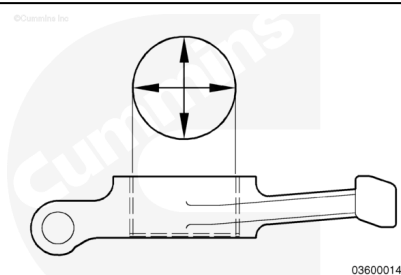

Install

Lubricate the rocker lever shaft with clean 15W-40 engine oil.


To align the oil drillings in the shaft with the oil drillings in the rocker levers, the riveted end of the shaft **must** face the front of the engine and larger diameter capscrew holes **must** face downward.

Slide the rocker levers on the shaft in the following sequence:

1. Intake rocker lever
2. Injector rocker lever
3. Exhaust rocker lever.

Lubricate the capscrew threads, rocker lever sockets, and crosshead pads with clean 15W-40 engine oil.

Place the capscrews into the rocker lever shaft.

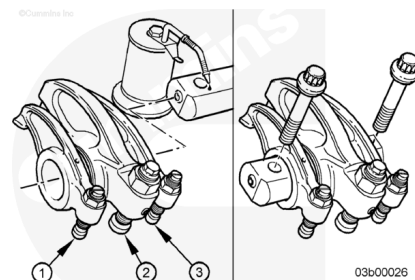

Make sure the adjusting screws are loose.


Make sure the rocker lever orientation is correct.

Position the rocker lever assembly on the housing. Install the capscrews and finger-tighten two or three revolutions.

Align the push rod sockets with the adjusting screws.

Tighten the capscrews.

Torque Value: 245 n•m [180 ft-lb]

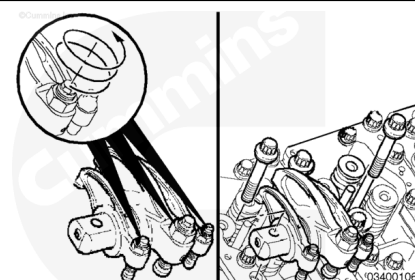

Finishing Steps

- Adjust the valves and injectors. Refer to Procedure 003-006 (/qs3/pubsys2/xml/en/procedures/89/89-003-006.html).
- Install the rocker lever covers. Refer to Procedure 003-011 (/qs3/pubsys2/xml/en/procedures/89/89-003-011.html).
- Operate the engine and check for leaks and proper operation.

