


Trainings ▾

Preparatory Steps

- Remove the engine control module. Refer to Procedure 019-031 (/qs3/pubsys2/xml/en/procedures/19/19-019-031.html) in the Troubleshooting and Repair Manual, Electronic Control System, QSK19, QSK23, QSK45, QSK60, and QSK78 Engines, Bulletin 3666113.
- Clean the control valve body and the surrounding area.




Disconnect the fuel supply hose (1), timing pressure line (2), and rail pressure line (3), at the control valve body.

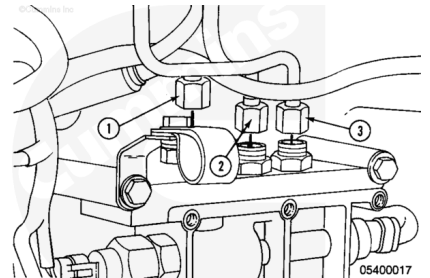


It is a good service practice to label parts during removal. Identification of the connections at time of removal with a label will aid the installation process.


Label the electrical connections to the actuators, fuel pressure sensors, and ambient air pressure sensor.

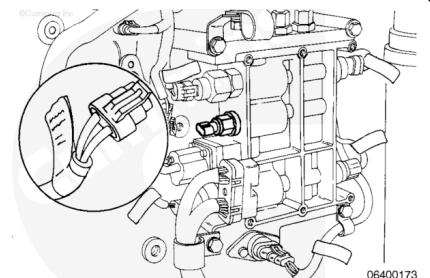

Disconnect the actuator and pressure sensor connections.

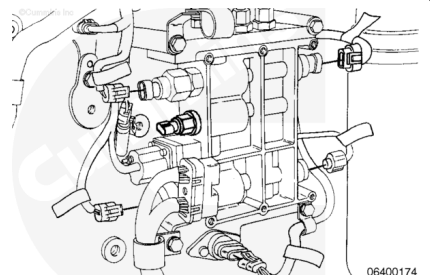


Remove the nuts holding the electrical connections of the fuel shutoff valve coil. Refer to Procedure 019-050 (</qs3/pubsys2/xml/en/procedures/19/19-019-050.html>) in the Troubleshooting and Repair Manual, Electronic Control System, QSK19, QSK23, QSK45, QSK60, and QSK78 Engines, Bulletin 3666113.

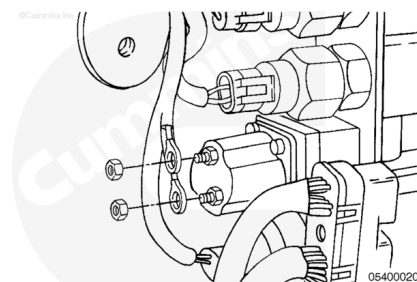

Remove

Remove the four capscrews. Move the wire harness and brackets away from the control valve body to gain access.


Remove the control valve body assembly.

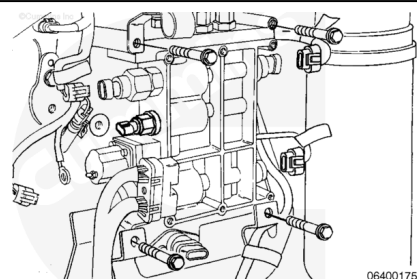

Install


Install the four capscrews to secure the control valve body assembly and the wire harness and brackets.

Torque Value: 45 n•m [35 ft-lb]

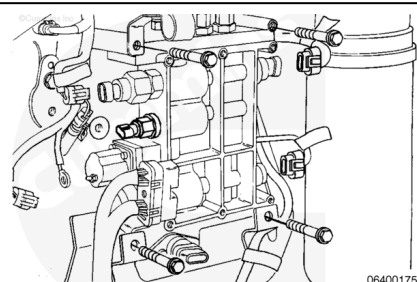


Finishing Steps

Install the nut that holds the electrical connection post on the fuel shutoff valve coil. Refer to Procedure 019-050 (</qs3/pubsys2/xml/en/procedures/19/19-019-050.html>) in the Troubleshooting and Repair Manual, Electronic Control System, QSK19, QSK23, QSK45, QSK60, and QSK78 Engines, Bulletin 3666113.

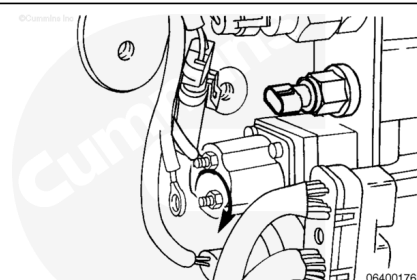


Install the electrical connection on the fuel shutoff valve. Refer to Procedure 019-050 (</qs3/pubsys2/xml/en/procedures/19/19-019-050.html>) in the Troubleshooting and Repair Manual, Electronic Control System, QSK19, QSK23, QSK45, QSK60, and QSK78 Engines, Bulletin 3666113.

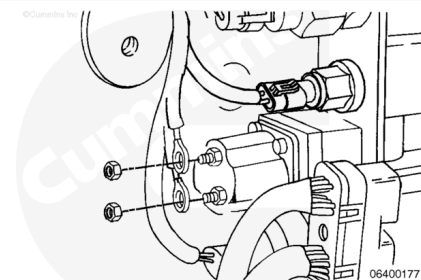


Inspect the actuator and pressure sensor connections for dirt and debris.

Use QD contact cleaner, Part Number 3824510, to clean the connections and actuator, if cleaning is required.

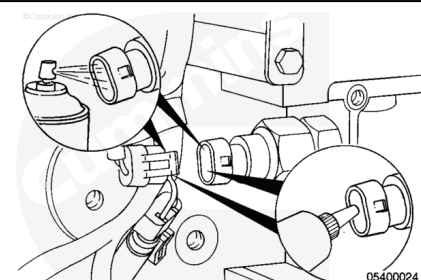

Note : If the electrical connections were not labeled for identification purposes during disassembly, verify the types of connections on the wiring diagram.


Connect the actuator and pressure sensor connections.

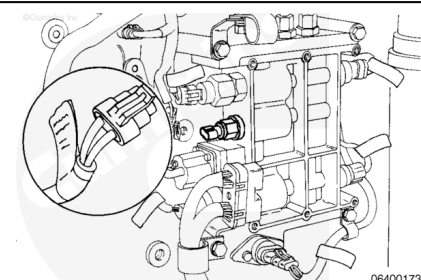

Connect the fuel supply hose (1), the timing rail pressure line (2), and the metering rail pressure lines (3) to the control valve body.

Tighten the fuel supply hose (1).

Tighten the timing pressure (2) and rail pressure lines (3).

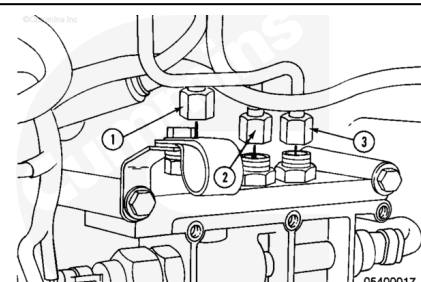

Torque Value:

Fuel Supply Hose (1)

1. 68 n•m [50 ft-lb]

Torque Value:

Timing Pressure Line (2)

1. 47 n•m [35 ft-lb]

Torque Value:

Rail Pressure Line (3)

1. 27 n•m [20 ft-lb]

- Install the ECM. Refer to Procedure 019-031 (</qs3/pubsys2/xml/en/procedures/19/19-019-031.html>) in the Troubleshooting and Repair Manual, Electronic Control System, QSK19, QSK23, QSK45, QSK60, and QSK78 Engines, Bulletin 3666113.



Last Modified: 05-May-2015
