


Trainings ▾

Remove

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

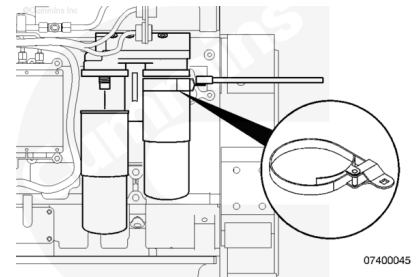


⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid contact with hot oil with your skin.

Use an oil filter wrench, Part Number 3375049, or equivalent, to remove the combination oil filters.

Discard the filters if they are **not** needed for failure analysis.

Remove the four capscrews and the filter head assembly.

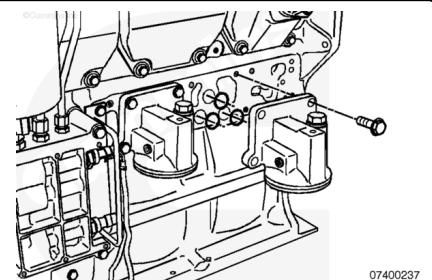

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the


possibility of personal injury.

Use solvent to clean the filter head.

Inspect the o-ring seals for nicks or cuts, replace if necessary.

Inspect the filter head for cracks or other damage.

Replace the oil filter head if cracks or damage are found.

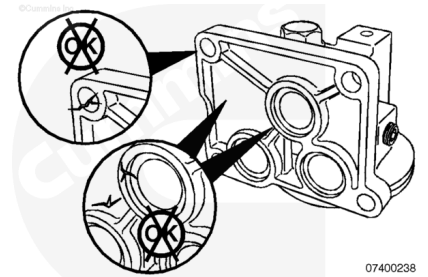


Install


Install the filter head, and four capscrews.

Tighten the capscrews.

Torque Value: 65 n•m [50 ft-lb]

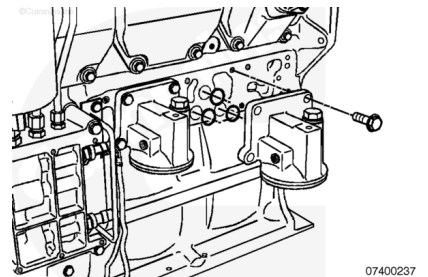

Install the new combination oil filters. Refer to Procedure 007-013 (/qs3/pubsys2/xml/en/procedures/89/89-007-013.html).

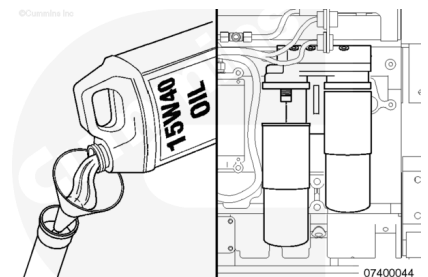

Fill the engine with clean, 15W-40 oil. Refer to Section V for engine oil capacity.

Operate the engine to normal operating temperature and check for leaks.

