

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Wear safety glasses or a face shield, as well as protective clothing, to prevent personal injury when using a steam cleaner or high-pressure water.


- Use a steam cleaner or a high-pressure washer to clean the engine.




Inspect

Operate the engine until the coolant temperature reaches 80°C [180°F]. Inspect the exterior of the engine for leaking gaskets, seals, o-rings, pipe plugs, or fittings.

Before replacing any gaskets, check that the capscrews are tightened to the correct torque values. Refer to Specifications in Section V for capscrew torque listings.

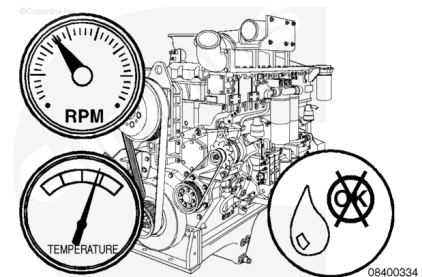


Check for a loose, broken, or missing oil dipstick tube, dipstick, or oil filter cap.

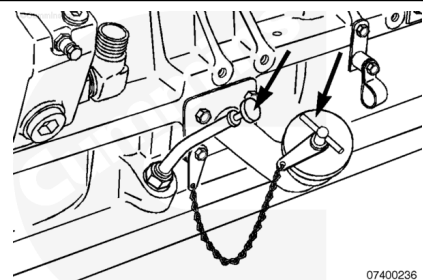


Check the engine crankcase breather elements and breather hose for restriction.

If **not** restricted, check the blowby. Refer to Procedure 014-005 (/qs3/pubsys2/xml/en/procedures/89/89-014-005.html). High blowby can cause gasket and seal leakage.

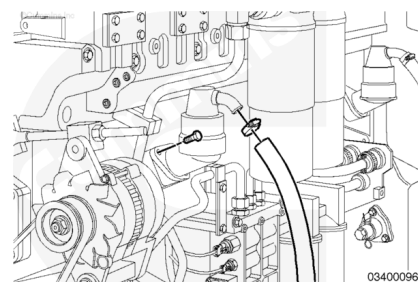


Add one unit of Fluorescent Tracer, Part Number 3376891, to each 38 liters [10 gal] of engine lubricating oil. Refer to Section V for oil pan capacity.


Operate the engine for 10 minutes.

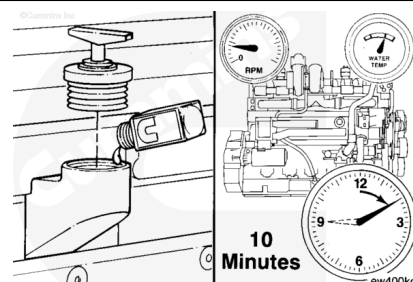

Shut the engine off.

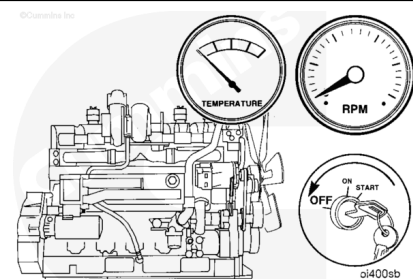

Use a high intensity black light to inspect for oil leakage. Oil will glow a dark blue color.

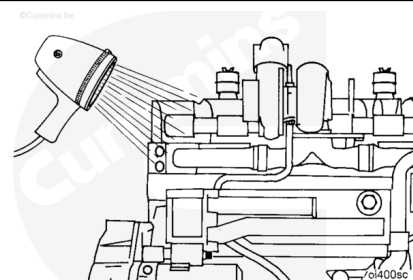

If an oil leak into the coolant is suspected, check the coolant.

