

Trainings ▾

Drain


⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

- Remove the oil drain plug from the bottom of the drain valve.
- Open the drain valve.
- Drain the oil.

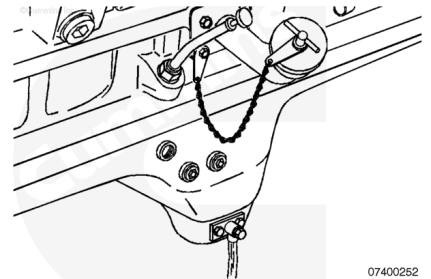


Fill

Install the oil pan drain plug and close the drain valve.


Tighten the drain plug.

Torque Value: 68 n•m [50 ft-lb]


Add the specified amount of clean, 15W-40 oil to fill the oil pan.

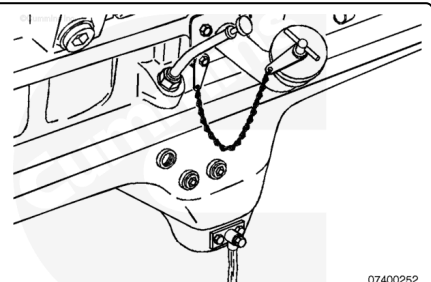

Check the oil level on the dipstick.

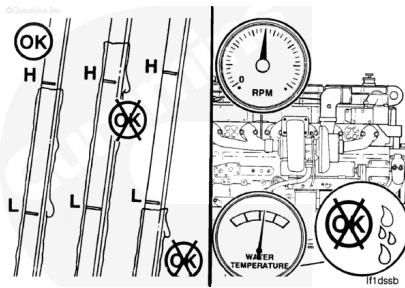

Operate the engine to normal operating temperature and check for oil leaks.

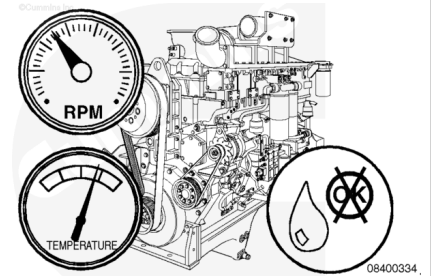

Shut the engine off and wait 10 minutes for the oil to drain back into the pan.

Check the oil level. Add oil as necessary to raise the oil level to the HIGH or H mark on the dipstick.

