


Trainings ▾

General Information


An used oil analysis can help diagnose internal damage and determine if it was caused by one of the following:

- Oil diluted with coolant
- Oil diluted with fuel.

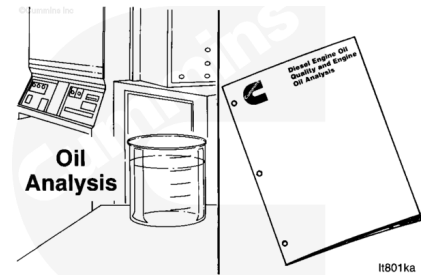

Pressure Test

For oil diluted with coolant. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/89/89-008-018.html>).

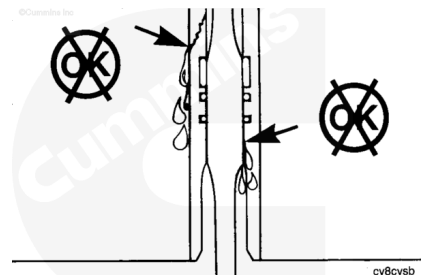


Fluorescent Dye Tracer


The following is the procedure for oil diluted with fuel.

This test is **not** effective on a cold engine, less than 21°C [70°F] coolant temperature, or with a loose overhead setting.

Install an isolated fuel supply tank to the inlet and drain lines. Add fluorescent tracer, Part Number 3376891, to the fuel supply tank.

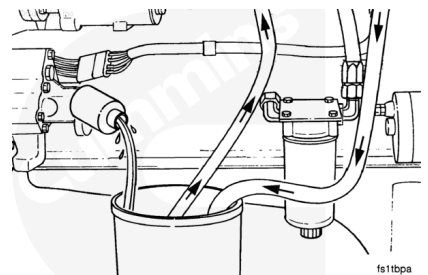


Remove the rocker lever cover mounting capscrews, but do **not** remove the rocker lever covers.

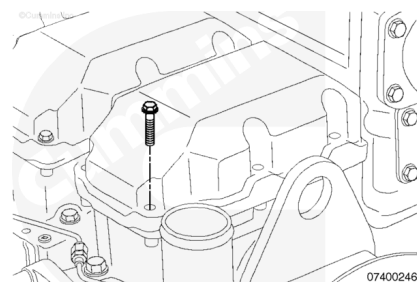


Start the engine and operate it at high idle for 30 seconds.

Let the engine go to low idle.

Complete the next step within 5 minutes.

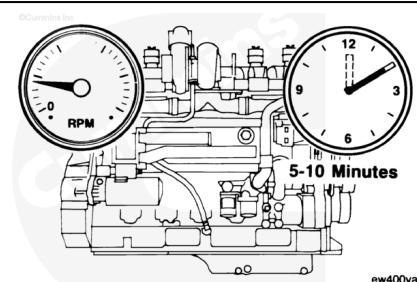


While the engine is operating at low idle, remove the rocker lever covers.

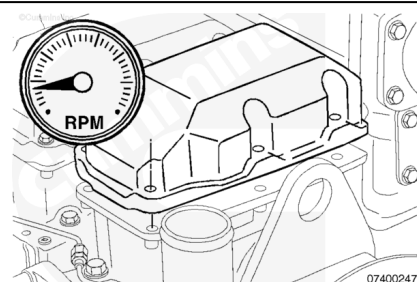

Use a black light to find fuel leaks from inside or around the injector. Refer to the black light manufacturer's operating instructions.

Injectors normally have a small amount of fuel leakage. Fuel will be a yellow color.


Note : Some components shown removed for clarity.

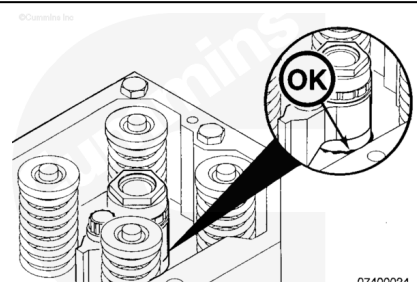


If there is excess leakage around the outside of the injector, check the top o-ring for damage.

Remove the injector and replace all three o-rings. Refer to Procedure 006-026 (</qs3/pubsys2/xml/en/procedures/89/89-006-026.html>).

Note : Some components shown removed for clarity.

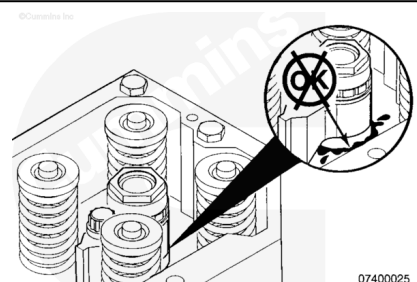

If there is excess leakage from inside the injector, replace the injector. Refer to Procedure 006-026 (</qs3/pubsys2/xml/en/procedures/89/89-006-026.html>).

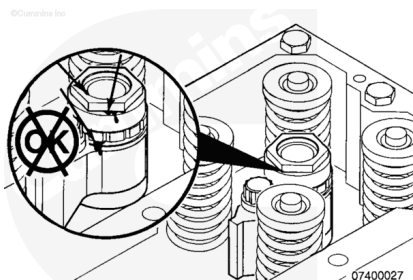

Install the rocker lever covers.

Torque Value: 10 n•m [89 in-lb]

