

Trainings ▾


General Information

Use the correct Fleetguard® coolant filter to maintain the correct SCA concentration in the system.

Maintain the correct concentration by changing the service coolant filter at each oil drain interval.

Refer to Fleetguard® DCA4 Service Filters and Liquid Precharge in Section V of the Operation and Maintenance Manual, QSK23 Engine, Bulletin 4021374

(/qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/4021374.html).

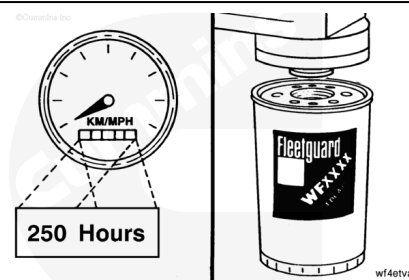

Change the service coolant filter at every oil and filter change interval.

The correct service coolant filter to be used is determined by the total coolant system capacity and other operational factors.

Refer to the Fleetguard® Service Filter Guide in Section V for the correct SCA precharge filter selection in the Operation and Maintenance Manual, QSK23 Engine, Bulletin 4021374


(/qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/4021374.html).



Remove

⚠ WARNING ⚠


Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

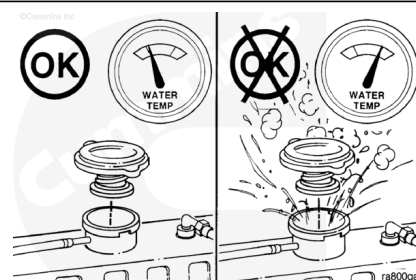

Remove the pressure cap.

Turn the valve on the filter head to the OFF position.

Remove and discard the coolant filter.

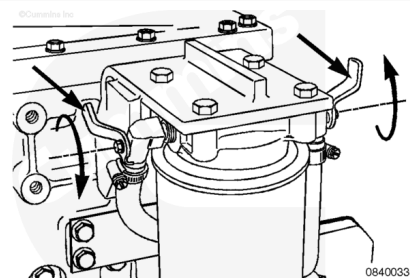


Install

Lubricate the seal on the filter with clean 15W-40 engine oil.

Do **not** allow oil to get in the filter. It will break down the SCA.



Install the coolant filter. Turn the filter until the seal touches the filter head. Turn an additional 1/2 to 3/4 of a turn after contact.

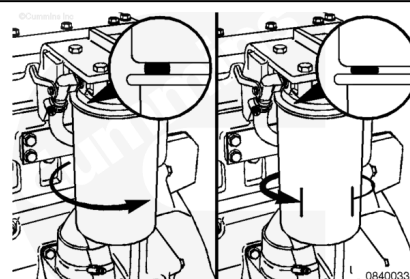

Turn the valve to the ON position.

