

Trainings ▾

Preparatory Steps


- Remove the fan. Refer to Procedure 008-040 (</qs3/pubsys2/xml/en/procedures/89/89-008-040.html>).
- Remove the fan belt. Refer to Procedure 008-002 (</qs3/pubsys2/xml/en/procedures/89/89-008-002.html>).



Remove


⚠ WARNING ⚠

This assembly weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this assembly.

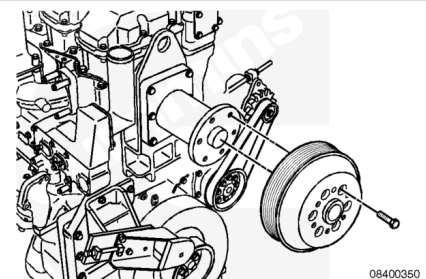

Remove the six bolts and the fan pulley.

Remove the six bolts and the fan hub.

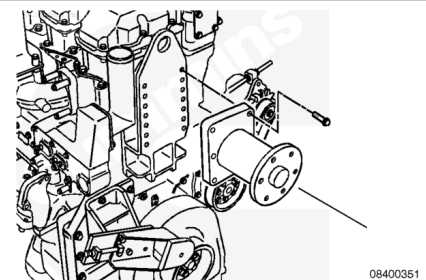


Inspect for Reuse

Inspect the fan hub for reuse. Rotate the hub to check for rough or damaged bearings.

Check bearing end clearance.

mm		in
0.03	MIN	0.001
0.25	MAX	0.010


Inspect the grease seals for damage.

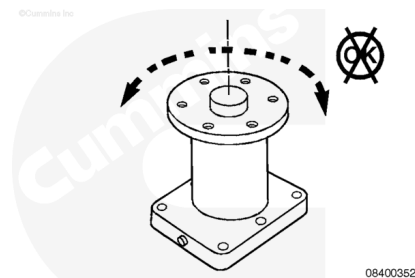

Install

⚠ WARNING ⚠

This assembly weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this assembly.

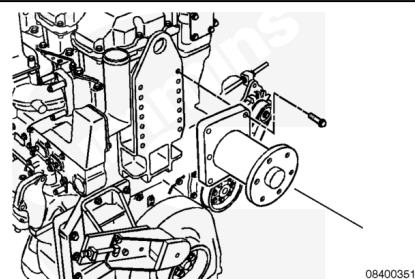


Install the fan hub and the six mounting bolts.

Tighten the fan hub bolts.

Torque Value: 113 n•m [83 ft-lb]


Install the fan hub pulley and six mounting bolts. Tighten the bolts.

Torque Value: 118 n•m [87 ft-lb]

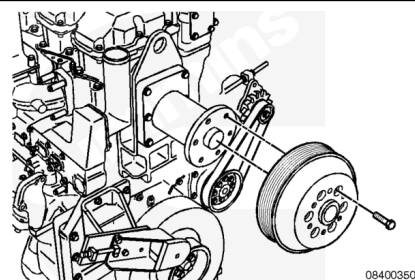

Finishing Steps

- Install the fan belt. Refer to Procedure 008-002 (</qs3/pubsys2/xml/en/procedures/89/89-008-002.html>).
- Install the fan. Refer to Procedure 008-040 (</qs3/pubsys2/xml/en/procedures/89/89-008-040.html>).

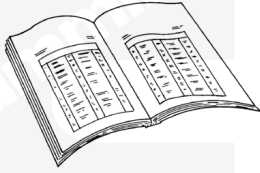

ck800wa

Last Modified: 11-Mar-2003
