

## Trainings ▾


### Preparatory Steps

- Remove the cooling fan belt. Refer to Procedure 008-002 in Section 8 (</qs3/pubsys2/xml/en/procedures/89/89-008-002.html>).



### Remove Industrial Applications


Remove the three capscrews and tensioner from the front cover.

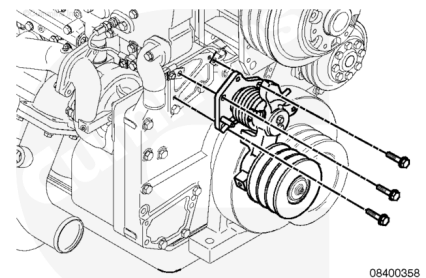

### Power Generation

#### **⚠ WARNING ⚠**

**This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.**

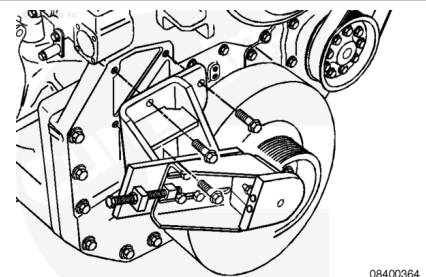


Remove the three capscrews that fasten the tensioner to the front cover. Do **not** remove the three clamping bolts at the base of the adjusting screw.

# Clean and Inspect for Reuse

## Industrial Applications

### **⚠ WARNING ⚠**

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

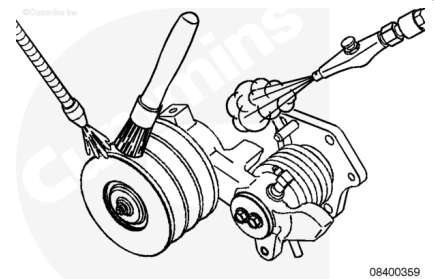


### **⚠ WARNING ⚠**

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the tensioner with a brush and solvent.


Dry with compressed air.

Check the tensioner arm, spring, and pulley for cracks and other damage.

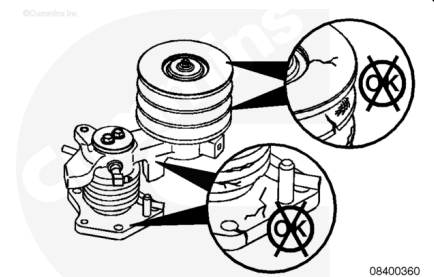

Inspect the tensioner pulley.

Rotate the pulley to check for rough bearings.

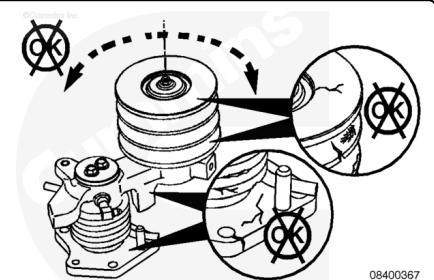


## Power Generation

### **⚠ WARNING ⚠**

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

**⚠ WARNING ⚠**

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

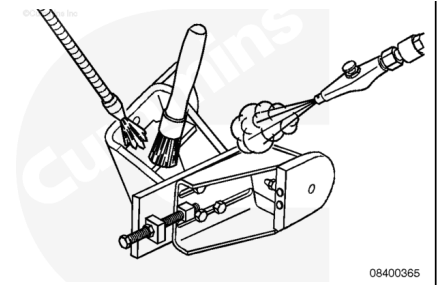


Clean the tensioner with a brush and solvent.

Dry with compressed air.

Inspect the tensioner pulley.

Check the cooling fan belt tensioner bracket and tensioner for damage or deterioration. Check the adjustable tensioner for cracks and broken bolts.

Rotate the pulley to check for rough bearings.

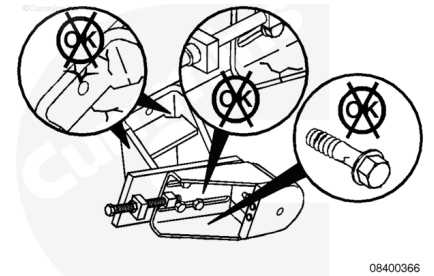


## Install

### Industrial Applications

Install the tensioner and three capscrews.

Tighten the capscrews.

**Torque Value:** 113 n•m [ 83 ft-lb ]

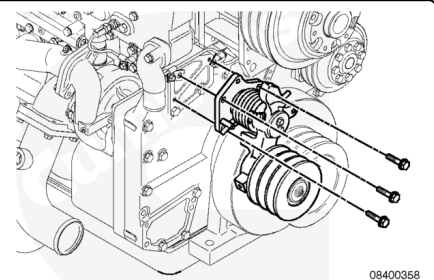


### Power Generation

Install the tensioner and three mounting capscrews.

Tighten the capscrews.

**Torque Value:** 113 n•m [ 83 ft-lb ]

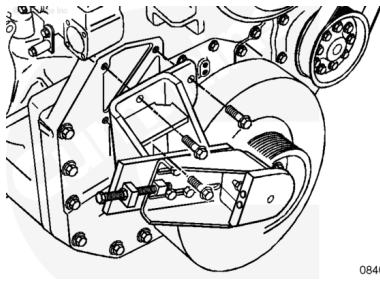


08400364

## Finishing Steps

- Install the cooling fan belt. Refer to Procedure 008-002 (</qs3/pubsys2/xml/en/procedures/89/89-008-002.html>) in Section 8.

©Cummins Inc.

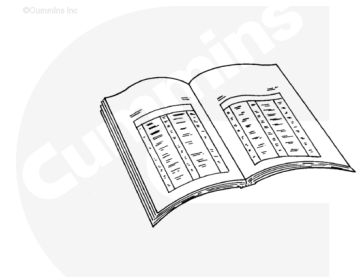

ck800wa