

Trainings ▾

Preparatory Steps

- Remove the fuel drain lines. Refer to Procedure 006-013 (</qs3/pubsys2/xml/en/procedures/89/89-006-013.html>) in Section 6.
- Remove the fuel supply lines. Refer to Procedure 006-024 (</qs3/pubsys2/xml/en/procedures/89/89-006-024.html>) in Section 6.
- Remove the fuel filter assembly. Refer to Procedure 006-015 (</qs3/pubsys2/xml/en/procedures/89/89-006-015.html>) in Section 6.
- Drain the cooling system. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/89/89-008-018.html>) in Section 8.
- Remove the coolant filter assembly. Refer to Procedure 008-060 (</qs3/pubsys2/xml/en/procedures/89/89-008-060.html>) in Section 8.
- Remove the intake piping. See equipment manufacturer service information.




Remove

Generator-Drive

⚠ WARNING ⚠


This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

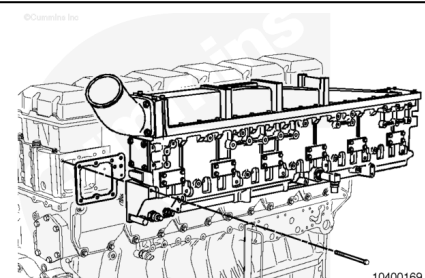

Remove the 42 capscrews and the intake manifold.


Remove the three fuel drilling plugs from the front and rear of the intake manifold.

1. Fuel rail supply drilling (1/8 inch pipe thread)
2. Fuel timing supply drilling (1/4 inch pipe thread)
3. Fuel return drilling (3/8 inch pipe thread)

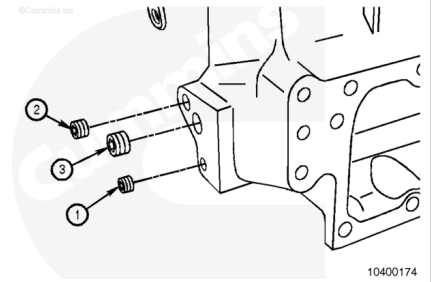


Industrial Applications

Remove the air crossover connections.

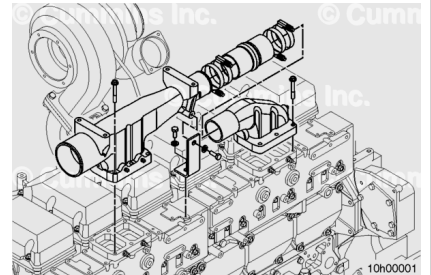

⚠ WARNING ⚠


This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

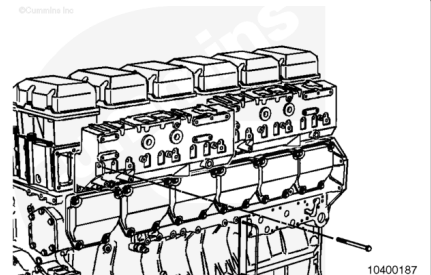

Remove the 21 capscrews from each intake manifold and remove each manifold.

Remove the three fuel drilling plugs from the rear of the intake manifolds.


1. Fuel rail supply drilling (1/8 inch pipe thread)
2. Fuel timing supply drilling (1/4 inch pipe thread)
3. Fuel return drilling (3/8 inch pipe thread)

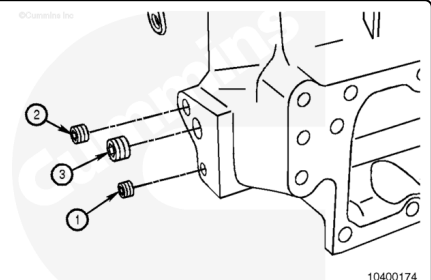

Inspect for Reuse

Inspect the fuel manifold for cracks in the fuel passages.

The manifold **must** be replaced if damaged.

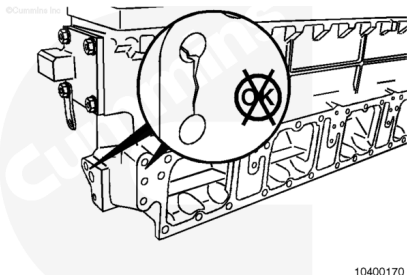

10400170

Install

Generator-Drive

Install the 1/8-inch (1), 1/4-inch (2), and 3/8-inch (3) plugs into the front and rear of the intake manifold.

Torque Value:

Plug (1):

1.5 n•m [44 in-lb]

Torque Value:


Plug (2):

1.9 n•m [80 in-lb]

Torque Value:

Plug (3):


1.17 n•m [150 in-lb]

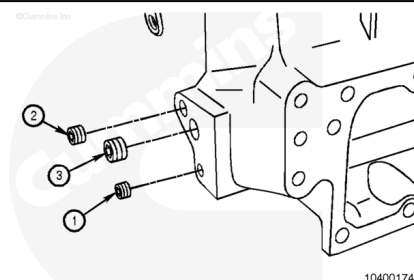

10400174

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

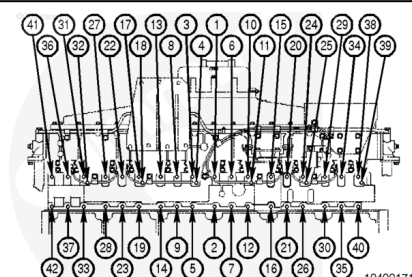

10400171

Use guide studs when installing the manifold.

Install the intake manifold, gaskets, and 42 cap screws. Tighten the cap screws in the sequence shown.

Torque Value: 66 n•m [49 ft-lb]

Industrial Applications

Install the 1/8-inch (1), 1/4-inch (2), and 3/8-inch (3) plugs into the front and rear of the intake manifold.

Torque Value:

Plug (1):

1.5 n•m [44 in-lb]

Torque Value:


Plug (2):

1.9 n•m [80 in-lb]

Torque Value:


Plug (3):

1.17 n•m [150 in-lb]

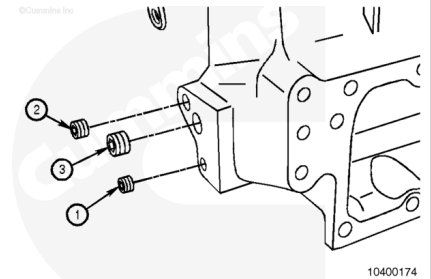

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

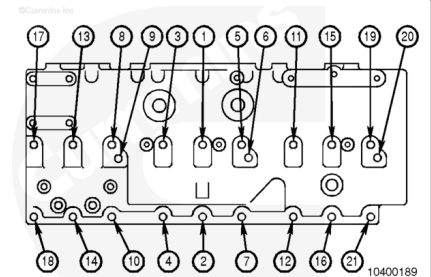

Use guide studs when installing the manifolds.

Install 21 capscrews on each intake manifold.

Tighten the capscrews in the sequence shown.

Torque Value: 66 n•m [49 ft-lb]


Install the air crossover connections.

Torque Value:

Capscrew (1): 30 n•m [22 ft-lb]


Torque Value:

All other air crossover capscrews: 66 n•m [49 ft-lb]

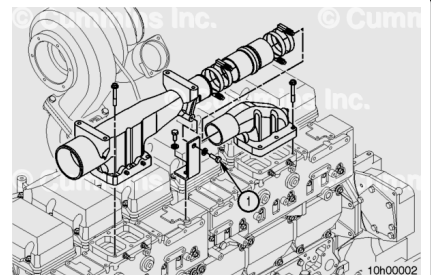

Finishing Steps

- Install the intake piping. See equipment manufacturer service information.
- Install the coolant filter and lines. Refer to Procedure 008-060 (/qs3/pubsys2/xml/en/procedures/89/89-008-060.html) in Section 8.
- Fill the cooling system. Refer to Procedure 008-018 (/qs3/pubsys2/xml/en/procedures/89/89-008-018.html)

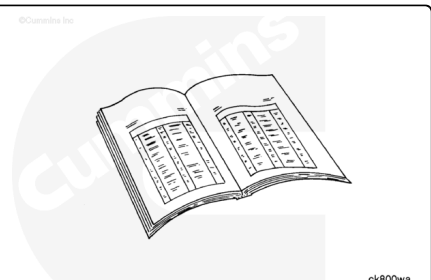

in Section 8.

- Install the fuel filter assembly. Refer to Procedure 006-015 (</qs3/pubsys2/xml/en/procedures/89/89-006-015.html>) in Section 6.
- Install the fuel supply lines. Refer to Procedure 006-024 (</qs3/pubsys2/xml/en/procedures/89/89-006-024.html>) in Section 6.
- Install the fuel drain lines. Refer to Procedure 006-013 (</qs3/pubsys2/xml/en/procedures/89/89-006-013.html>) in Section 6.