


## Trainings ▾

### Maintenance Check

**Note :** The illustrations in this section show typical dry-type air cleaner parts. The particular engine parts can vary.

Heavy-duty air cleaners combine centrifugal cleaning with element filtering before air enters the engines.

Before disassembly, wipe dirt from the cover and the upper portion of the air cleaner.

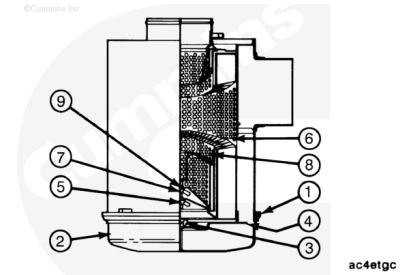

#### **⚠ CAUTION ⚠**

**Holes, loose-end seals, dented sealing surfaces, and other forms of damage render the cleaner inoperative and require immediate element replacement.**

**Note :** Cummins Inc. does not recommend cleaning paper-type air cleaner elements.

To clean the dual types:

Loosen the wing bolt (1) and remove the band securing the dust pan (2).

Loosen the wing nut (3). Remove the dust shield (4) from the dust pan (2). Clean the dust pan and shield.

#### **⚠ CAUTION ⚠**

**Pull the cover and the element straight out during removal from the housing to reduce the possibility of damage to the element.**

Remove the wing nut (5) that secures the air cleaner first-stage element (6) in the air cleaner housing. Inspect the rubber sealing washer on the wing nut.

Install the new air element.

Be sure the gasket washer is in position under the wing nut before tightening.

Assemble the dust shield and dust pan. Position them to the air cleaner housing and secure with the band.

On the dual-element type of Cyclopac cleaner:

Check the air restriction indicator. If the air restriction is excessive, disassemble the air cleaner, remove the wing nut (7), and replace the safety element (8).

Assemble the air cleaner as described above.

---

**Last Modified: 06-Jan-2003**

---