


Trainings ▾

Inspect for Reuse


Use an inductive charging and cranking system analyzer to load test the state-of-charge of maintenance-free batteries. If the state-of-charge is low, use a battery charger to charge the battery. Refer to the manufacturer's instructions.

Replace the battery if it will **not** charge to the manufacturer's specifications or the battery will **not** maintain a charge.

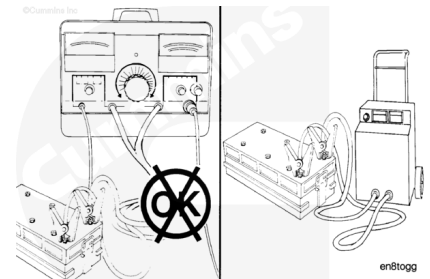

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

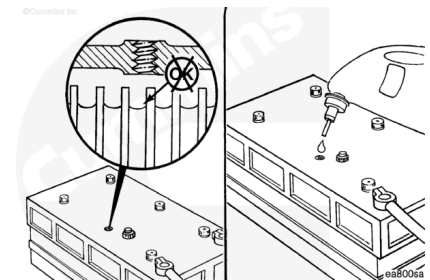

If conventional batteries are used, remove the cell caps or covers and check the electrolyte (water and sulfuric acid solution) level.

Maintenance-free batteries are sealed and do **not** require the addition of water.

Fill each battery cell with water. Refer to the manufacturer's specifications.

Refer to the accompanying chart to determine the battery state-of-charge based on the specific gravity readings.

Battery State of Charge	Specific Gravity @ 27°C [80°F]
100%	1.260-1.280
75%	1.230-1.250
50%	1.200-1.220
25%	1.170-1.190
Discharged	1.110-1.130

Use a hydrometer to measure the specific gravity of each cell.

If the specific gravity of any cell is below 1.200, the battery **must** be charged.

Do **not** attempt to check the specific gravity of a battery immediately after adding water. If it is necessary to add water to allow use of the hydrometer, charge the battery several minutes at a high rate to mix the electrolyte.

